






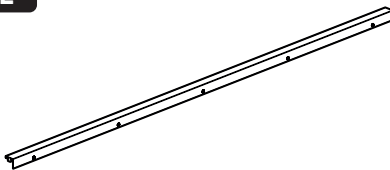
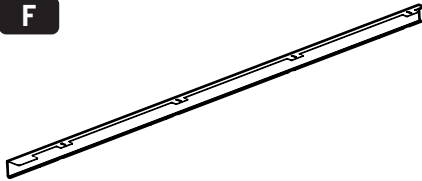
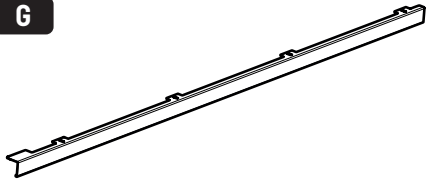
MOUNTAIN TOP[®] EV0m ROLL COVER

Installation manual








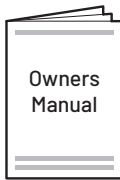








DOWNLOAD PDF

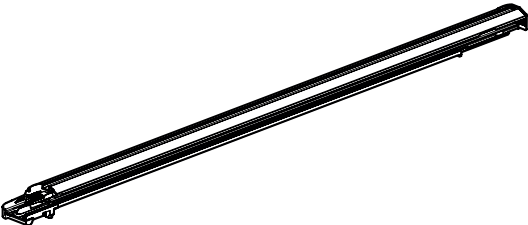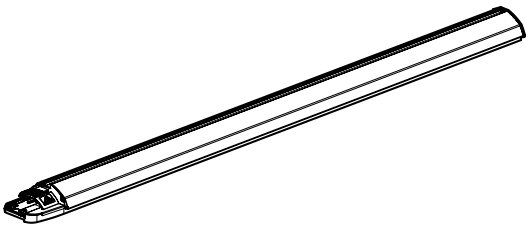
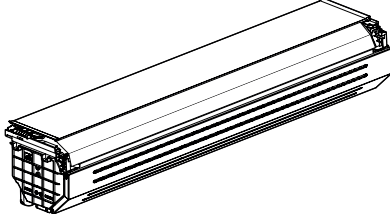
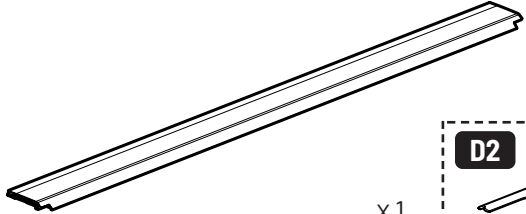


Parts



<p>A</p>  <p>x1</p>	<p>B</p>  <p>x1</p>	
<p>C</p>  <p>x1</p>	<p>D</p>  <p>x1</p> <div data-bbox="1332 526 1516 649" style="border: 1px dashed black; padding: 2px;"> <p>D2</p>  <p>x1</p> </div>	
<p>E</p>  <p>x1</p>	<p>F</p>  <p>LEFT</p> <p>x1</p>	<p>G</p>  <p>RIGHT</p> <p>x1</p>

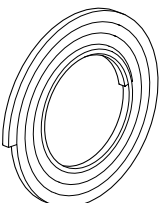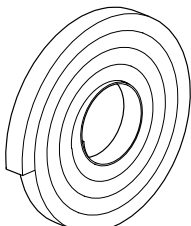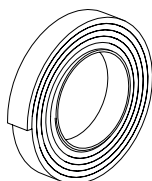Parts


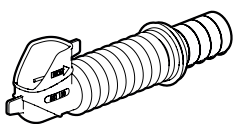

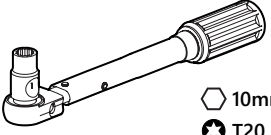
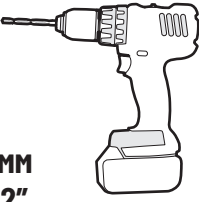
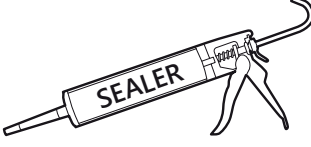
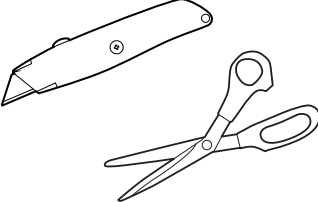

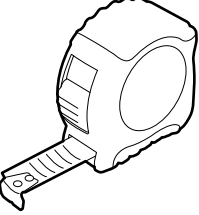
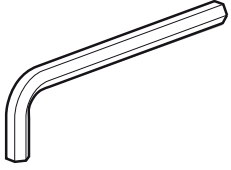
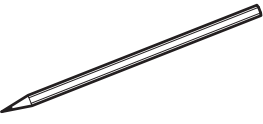

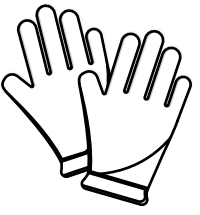
<p>H</p>  <p>x1</p>	<p>I</p>  <p>x2</p>	<p>J</p>  <p>x1</p>
<p>K</p>  <p>LEFT</p> <p>x1</p>	<p>L</p>  <p>RIGHT</p> <p>x1</p>	<p>M</p>  <p>x2</p>
<p></p> <p>Manual</p> <p>x1</p>		<p></p> <p>Owners Manual</p> <p>x1</p>

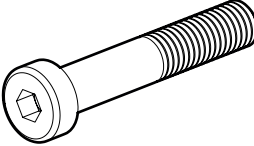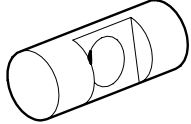Kit		
N  x8	O  x8	P  x8
Q  x8	R  x8	S  x8

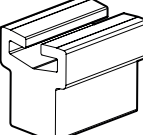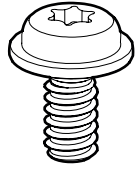
Kit		
T  x4	U  x4	
W  x5	V  x8	X  x8

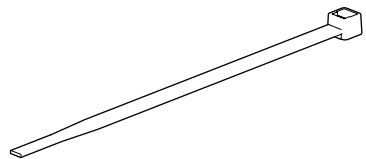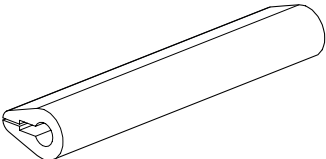
Kit	
Y  x2	Z  x2



Tools needed

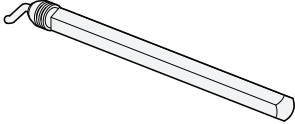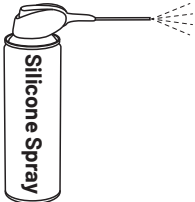	 <p>SILICONE</p>	 <p>ANTI-RUST RUST PROTECTION ROSTSCHUTZMITTEL ANTI-ROUILLE ANTI ROEST</p>	<p>1 - 25 Nm</p>  <ul style="list-style-type: none"> ⬡ 10mm ⊛ T20 ⊛ T30 	
 <p>Ø2.4MM Ø3/32"</p>	 <p>SEALER</p>		 <p>H₂O</p>	
	 <p>5 MM</p>		 <p>LOCTITE 243</p>	


Applying rust protection

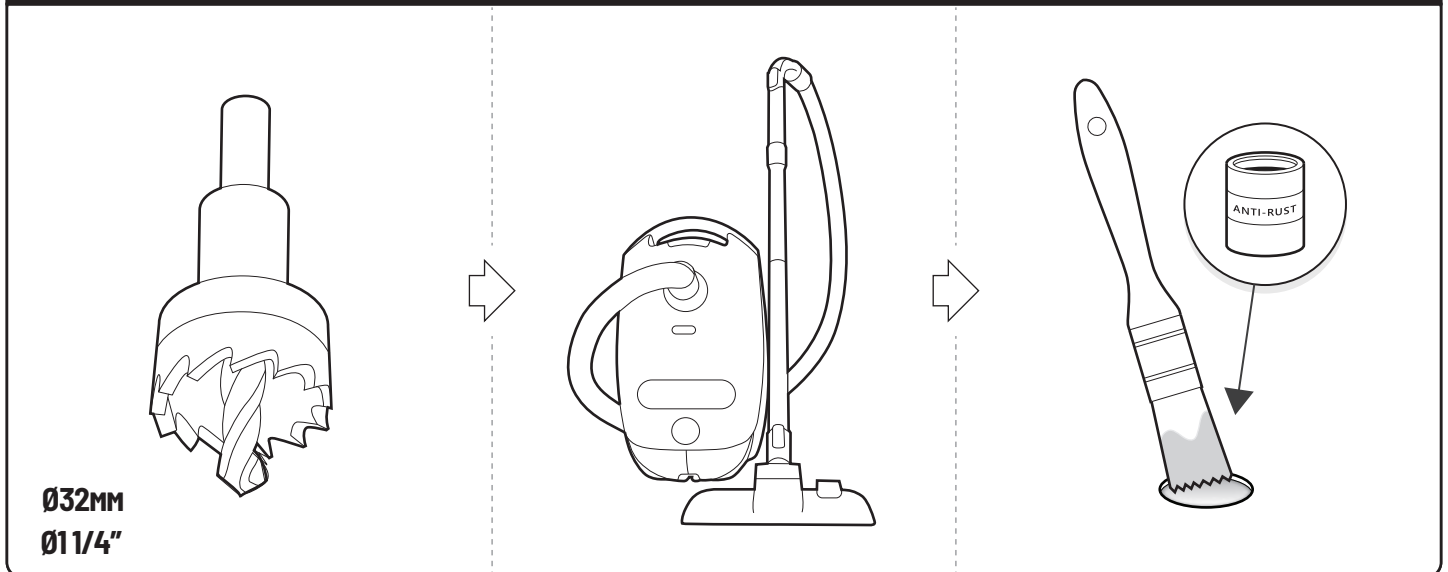

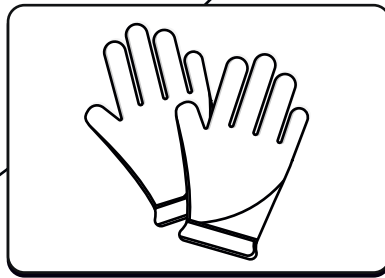


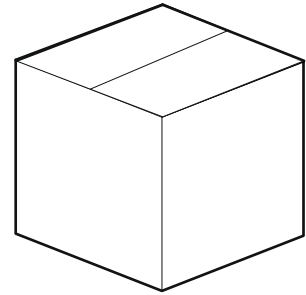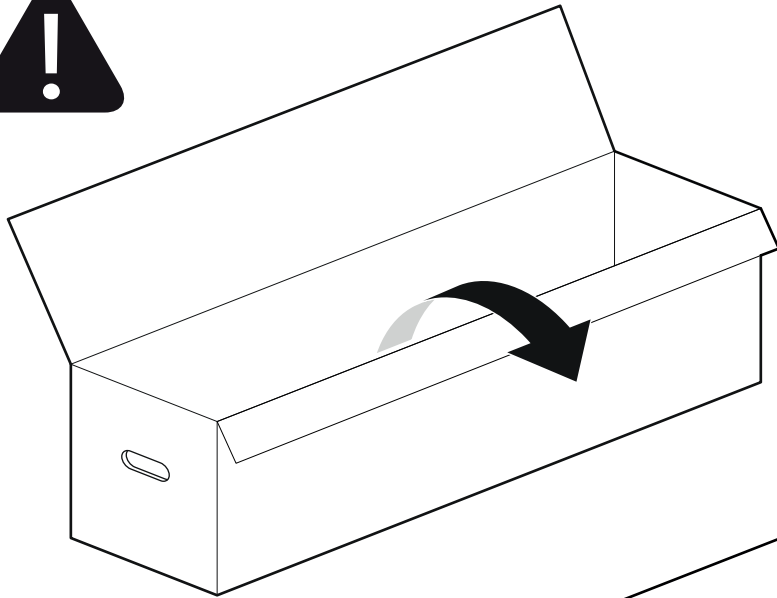


C

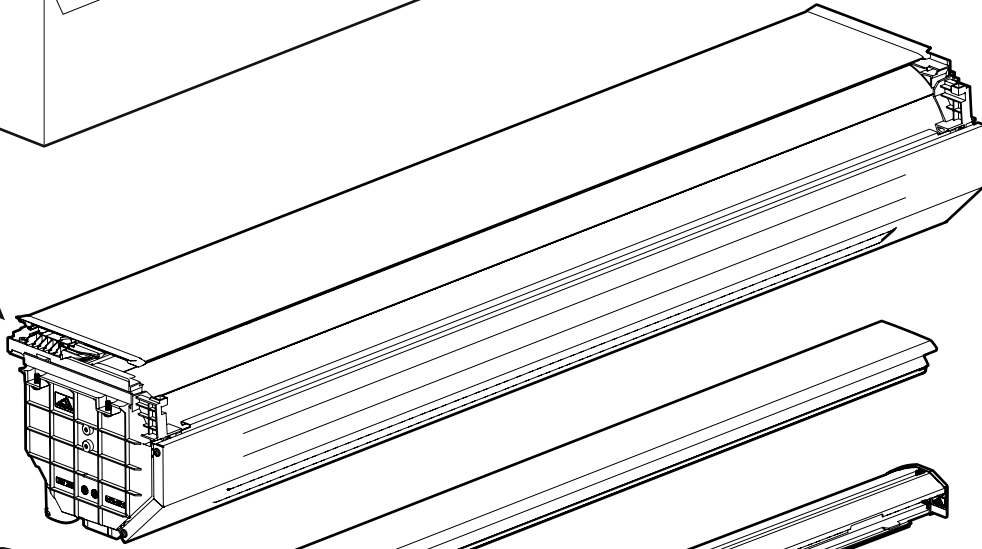


D

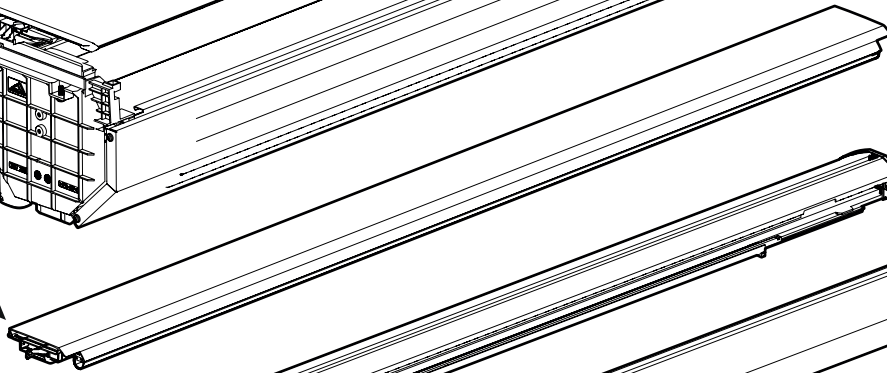


A

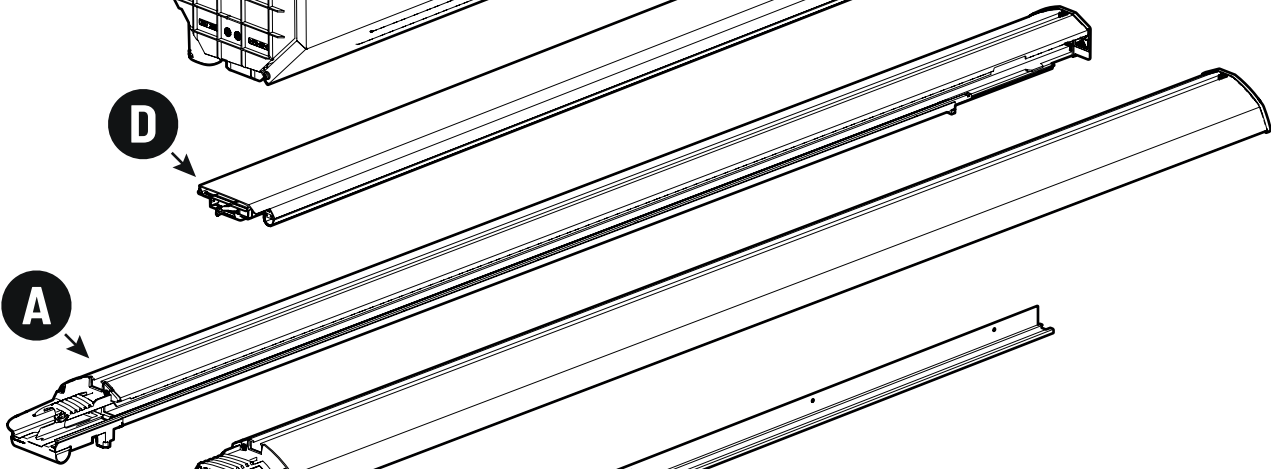


B

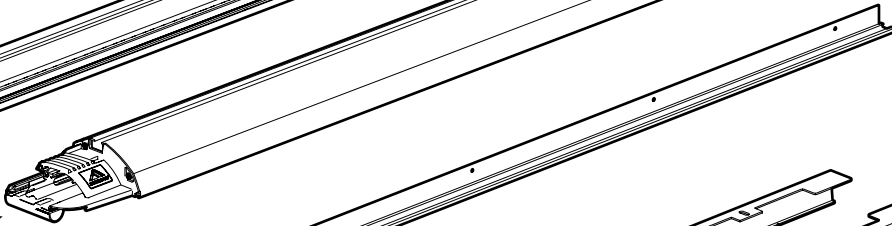


E

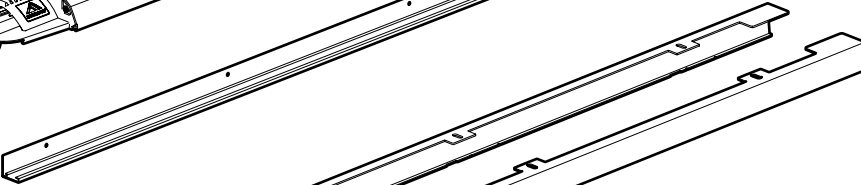

G

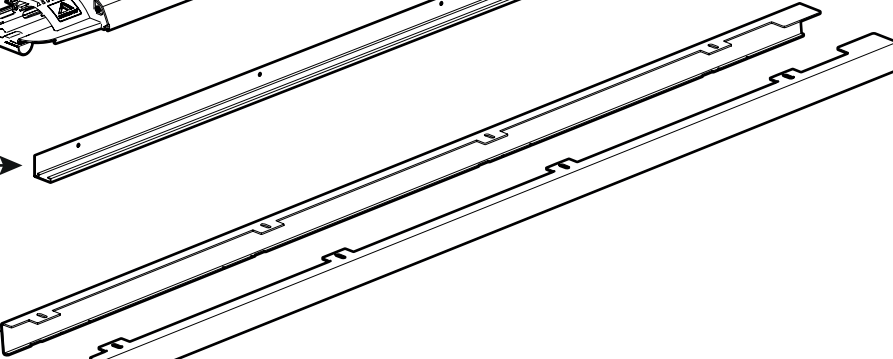


F

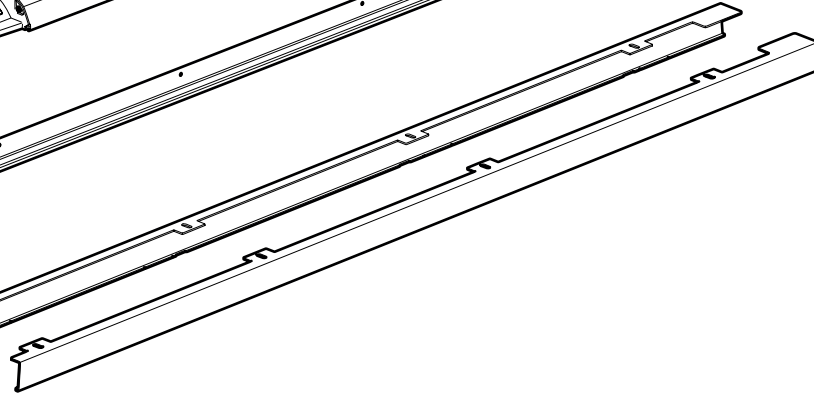







Water & sponge



2


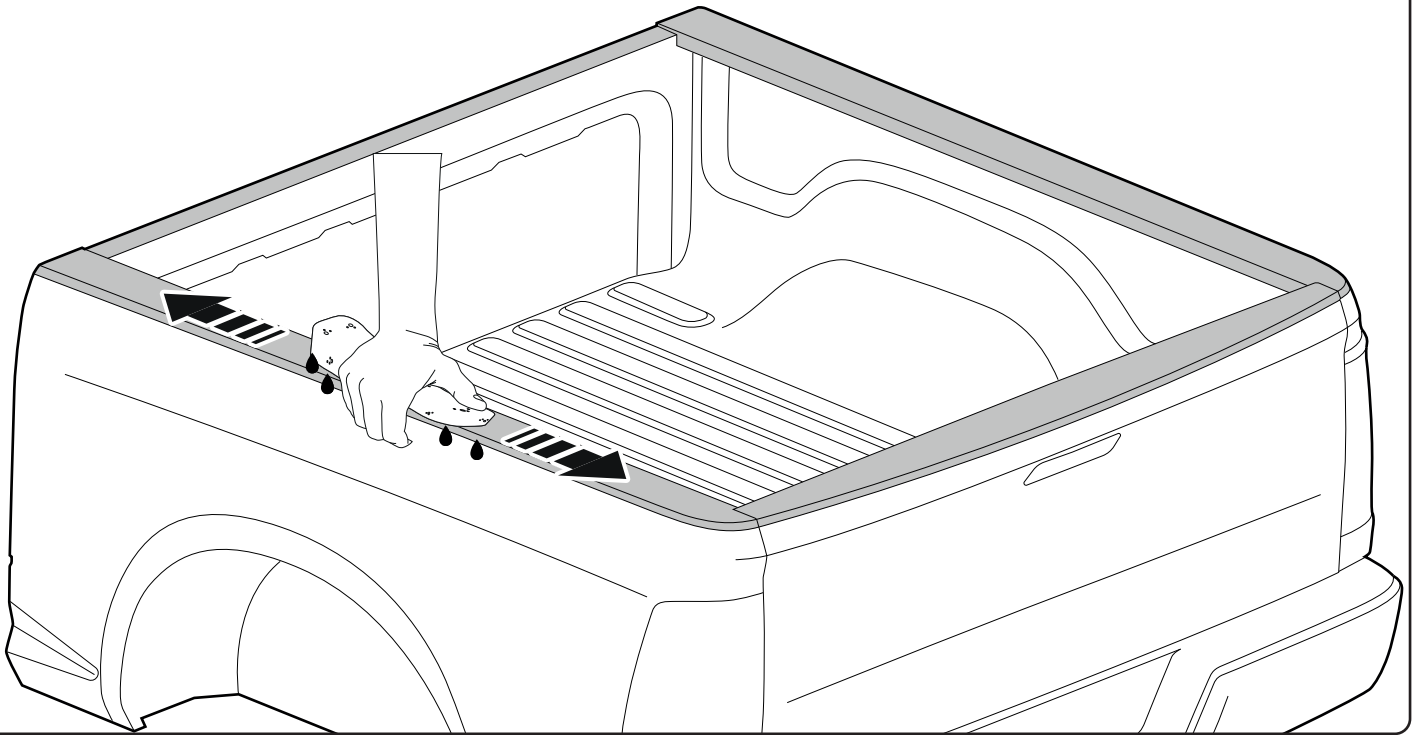




3



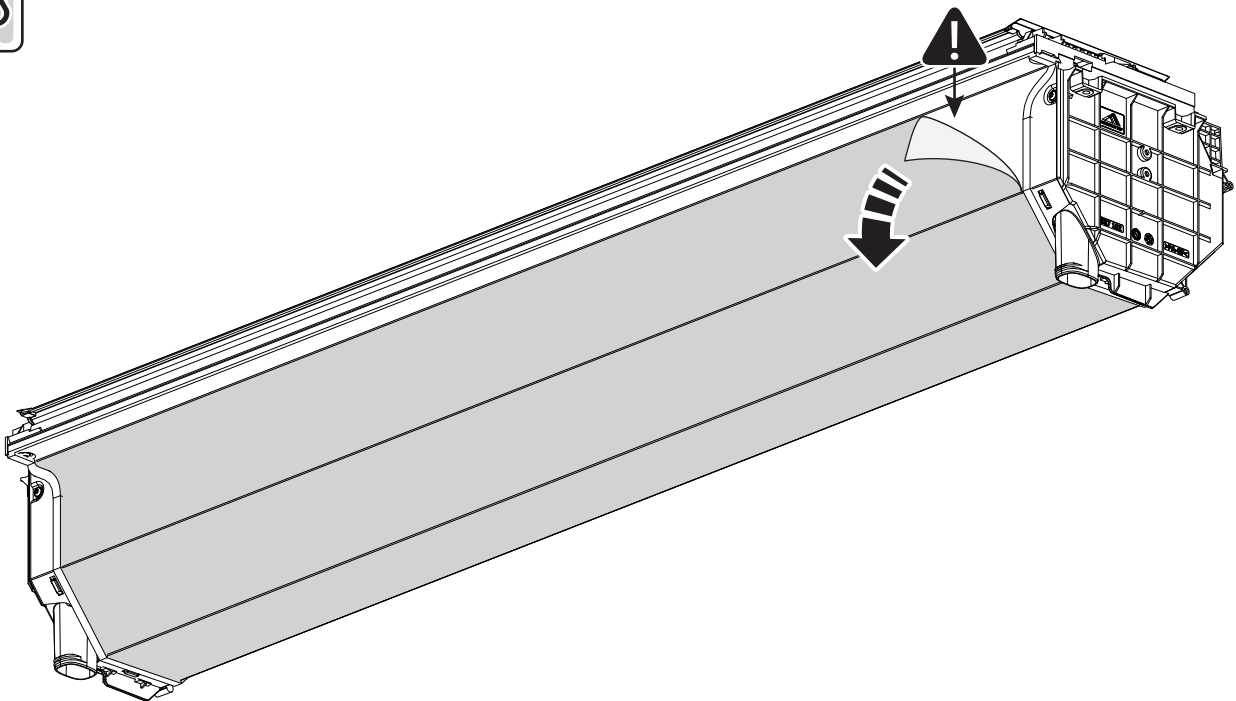


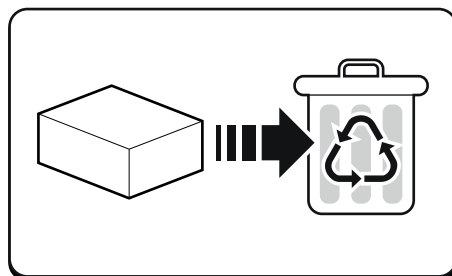
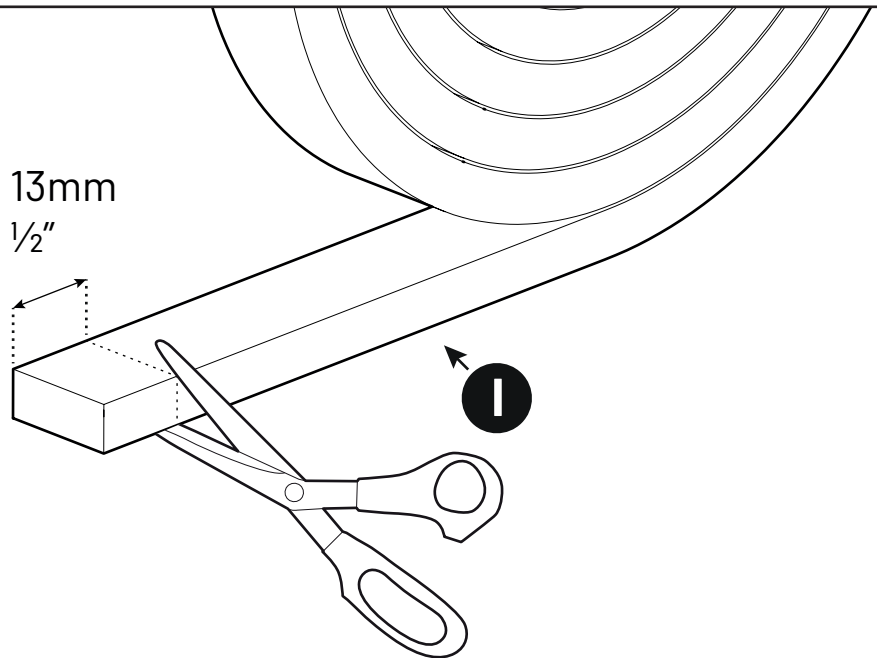
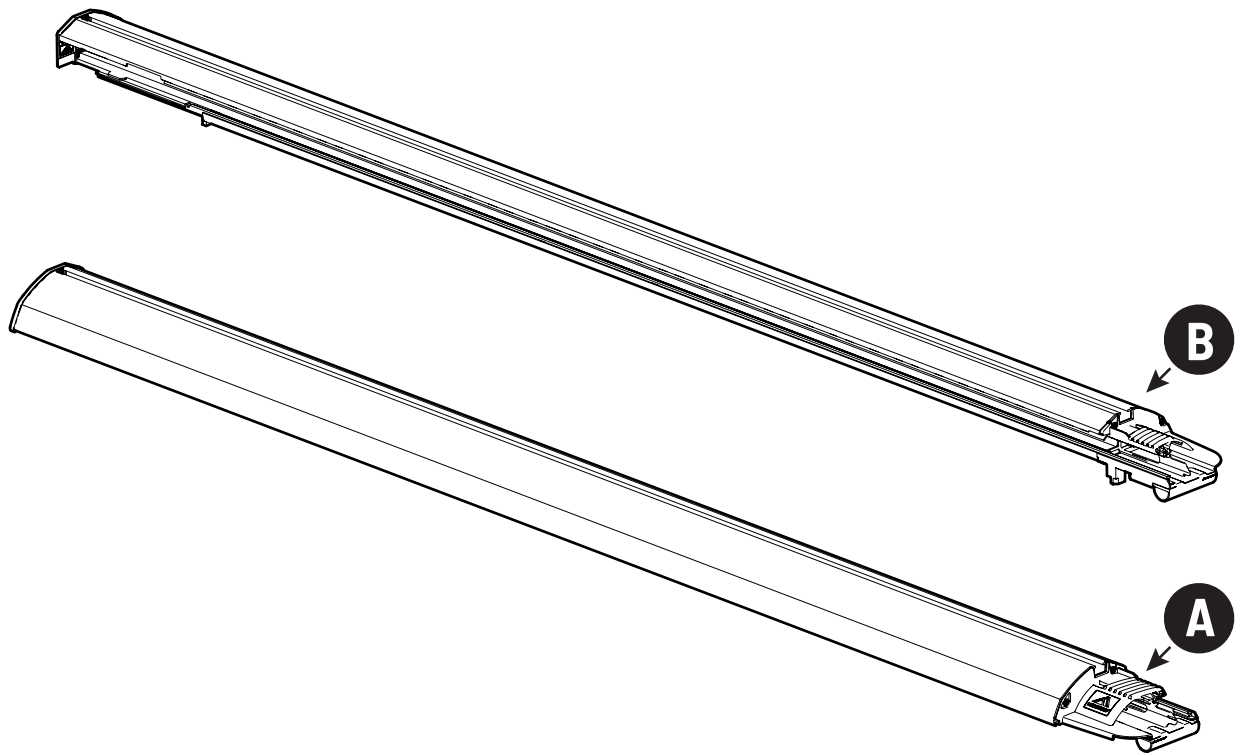


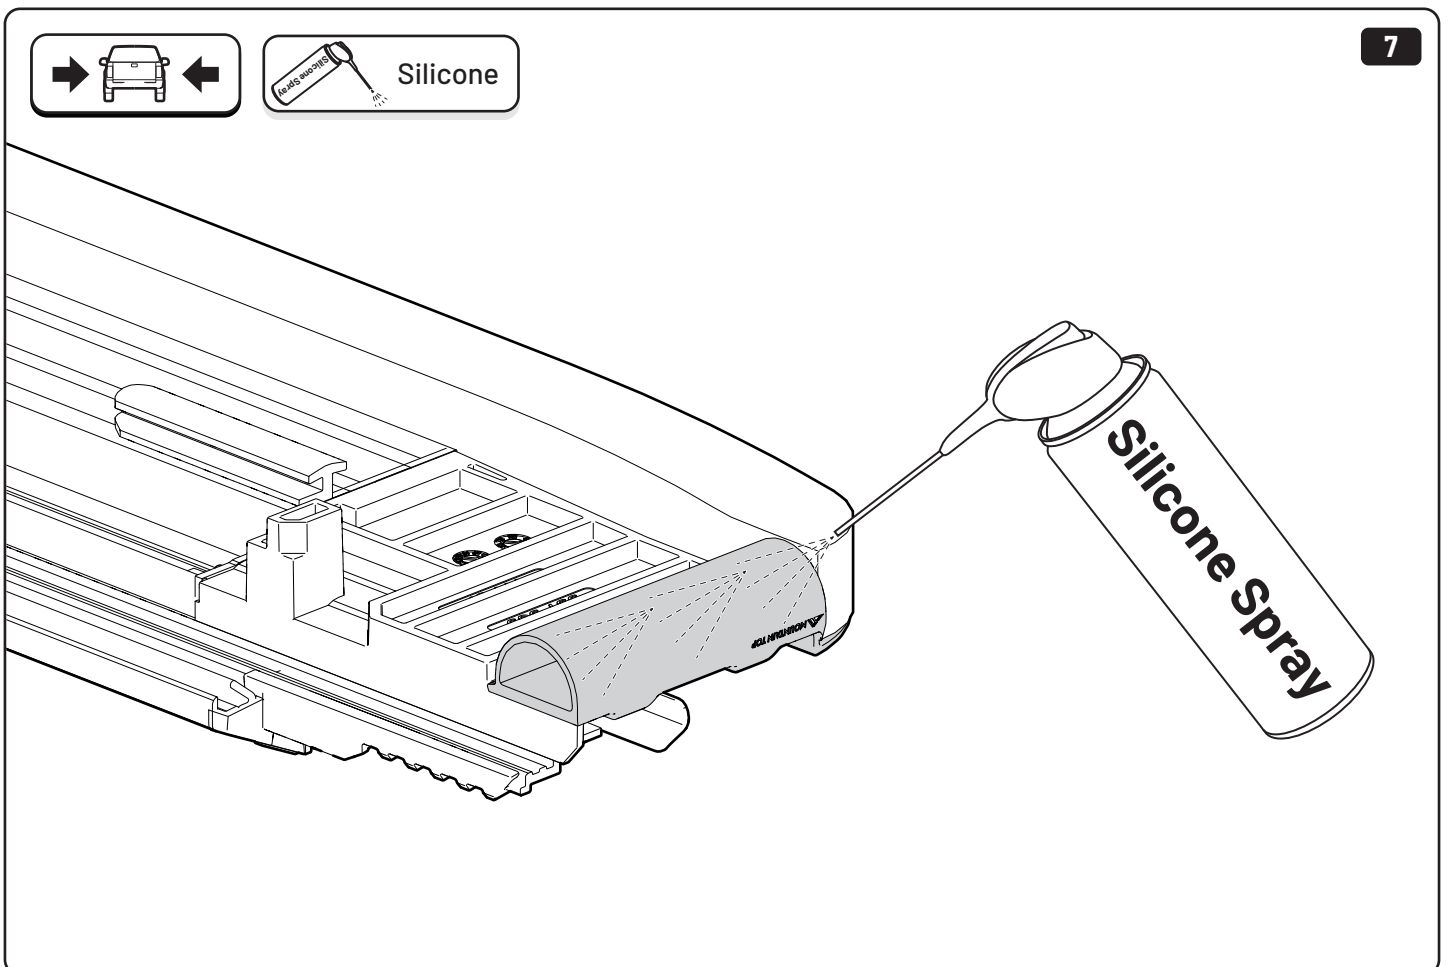
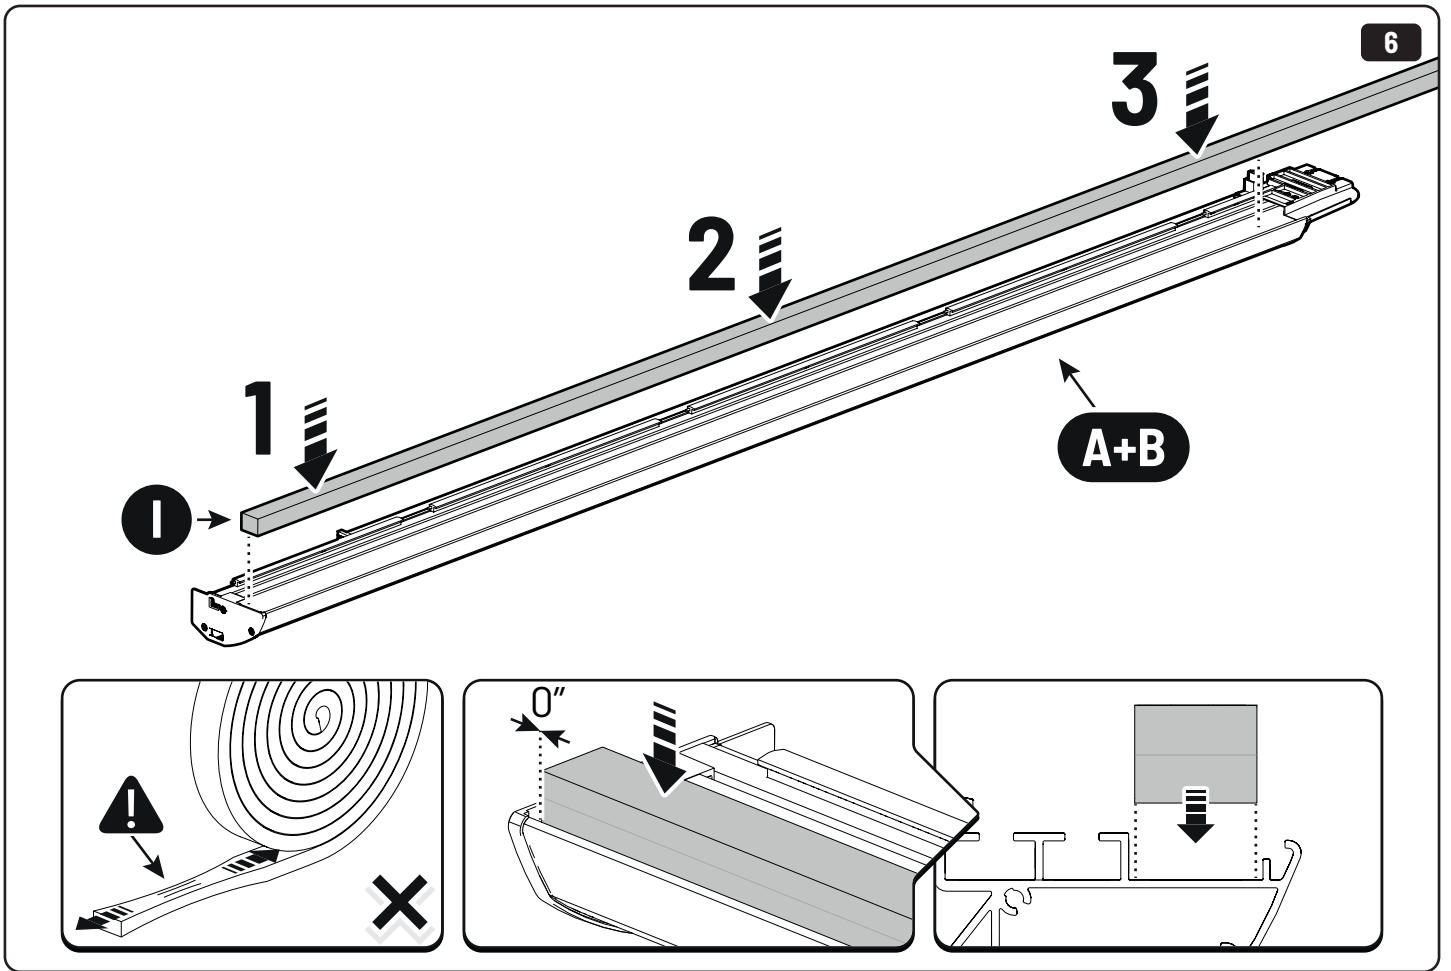


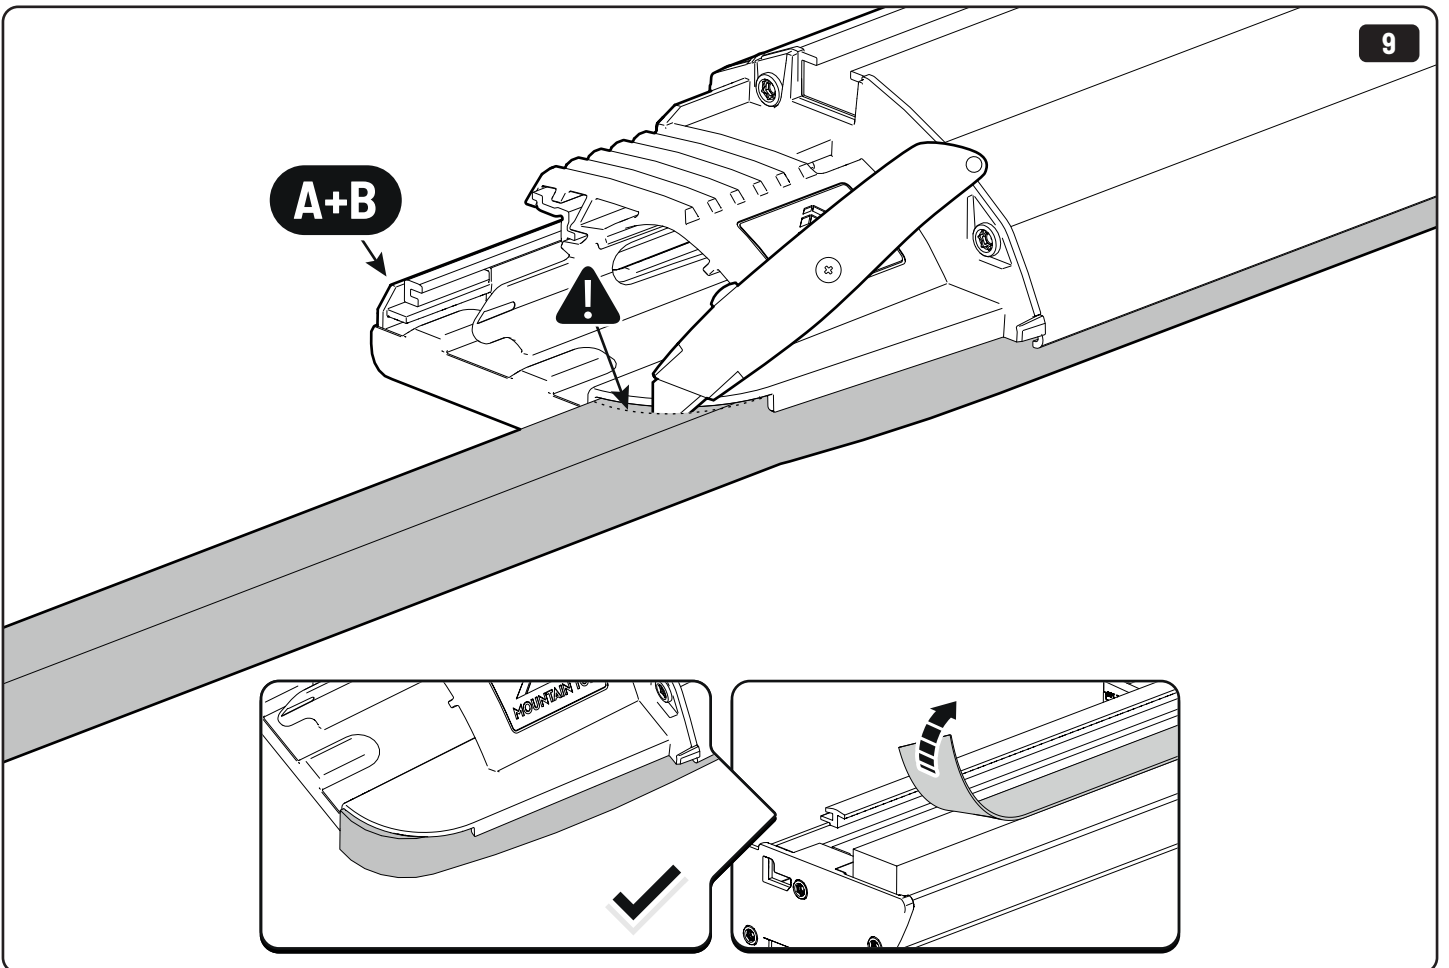
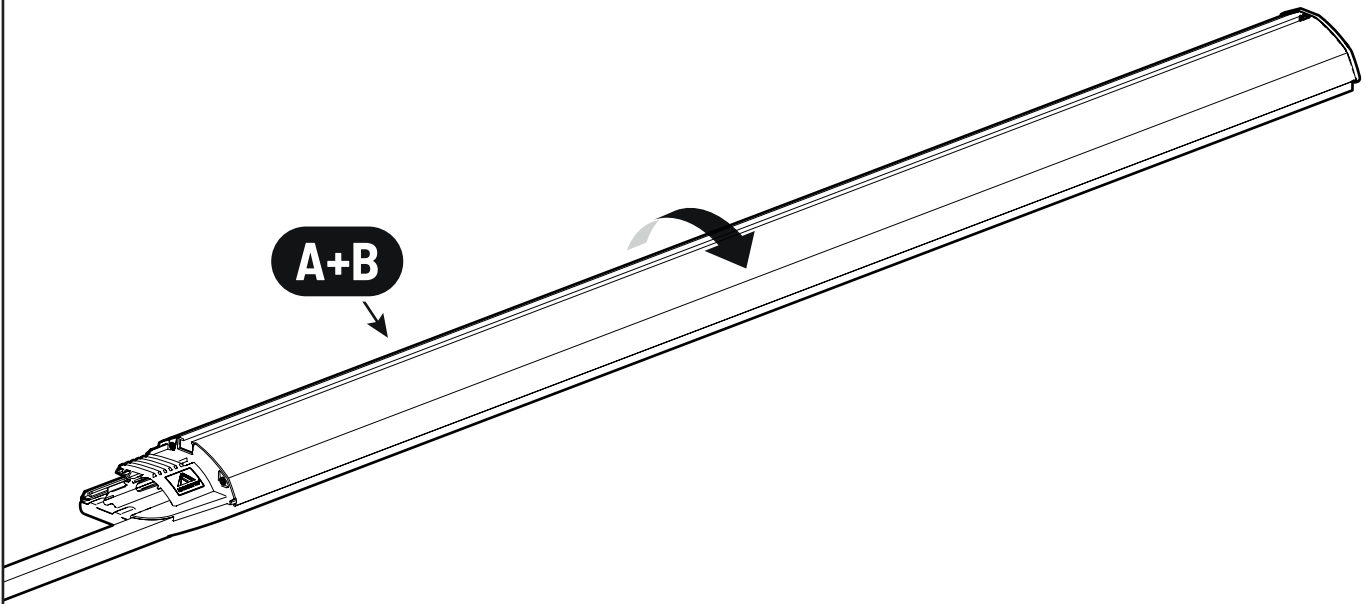


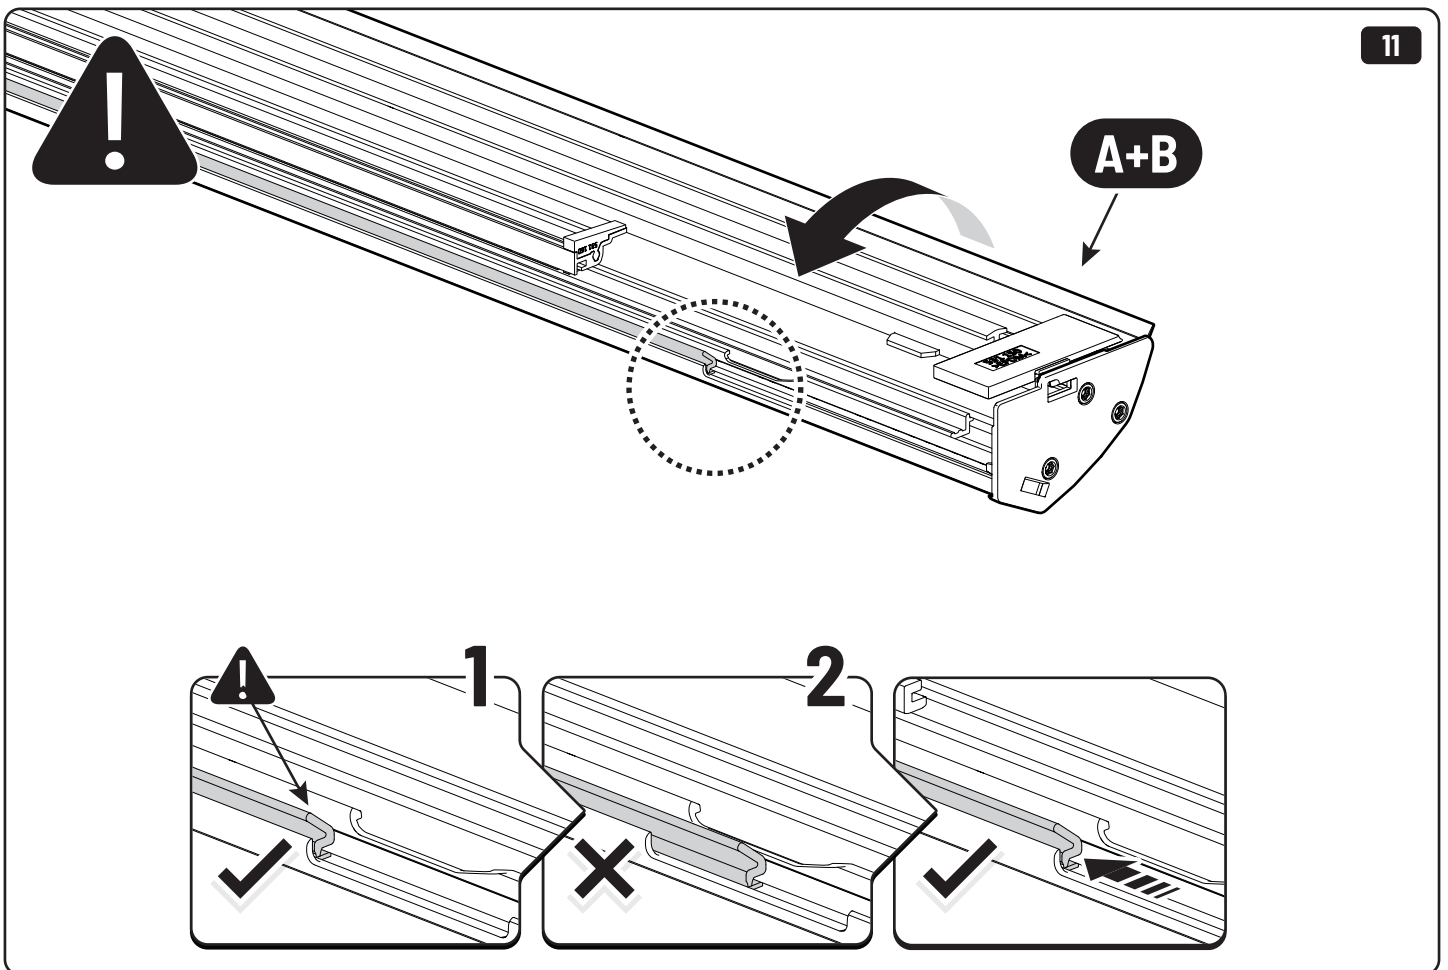
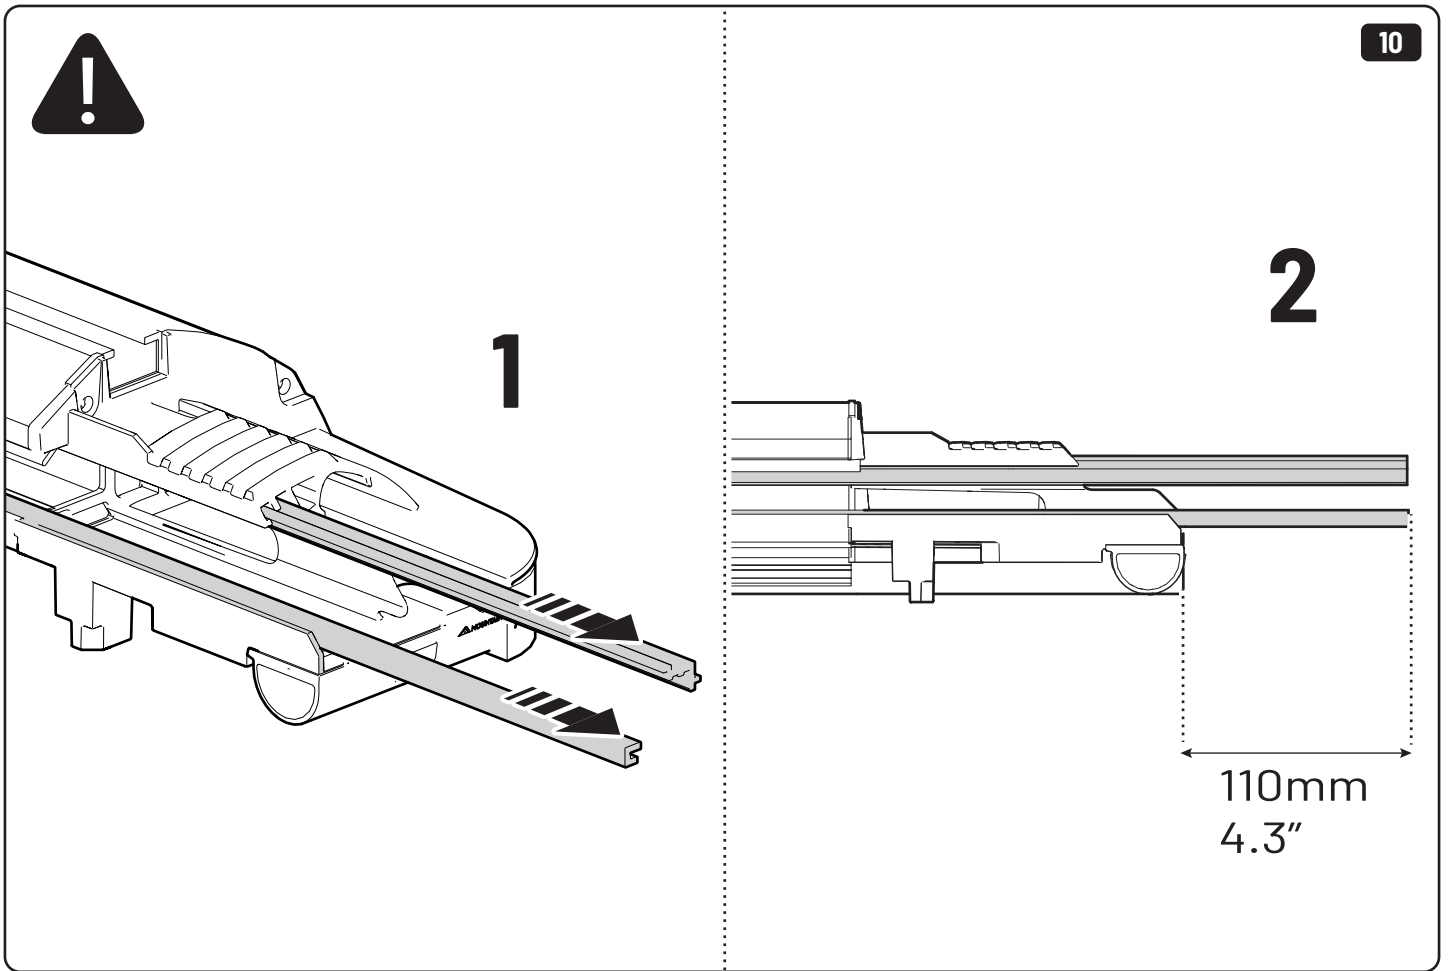


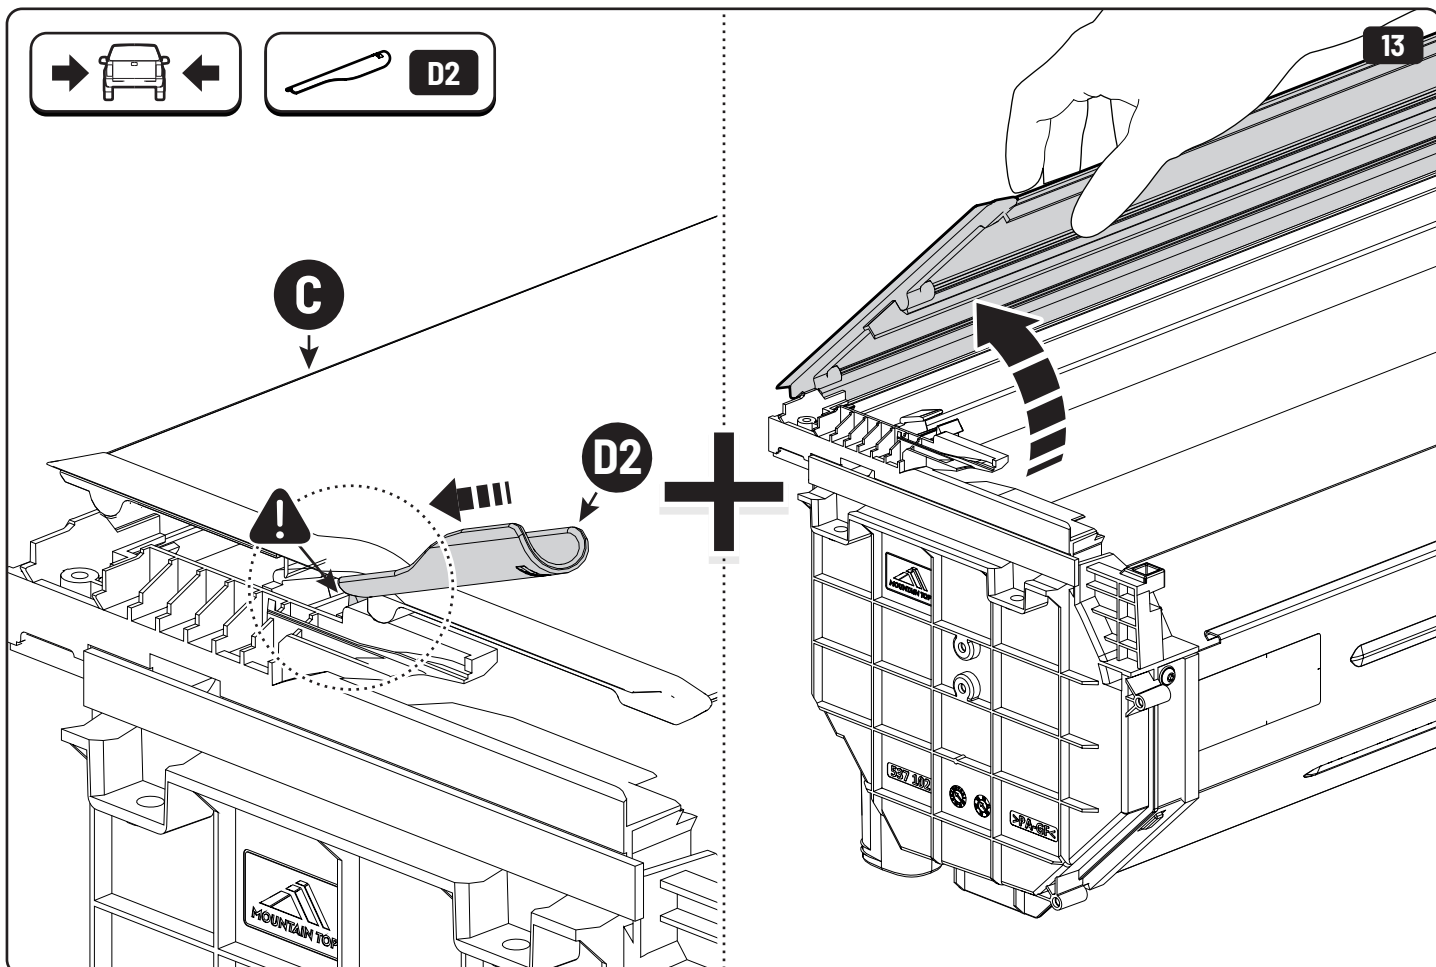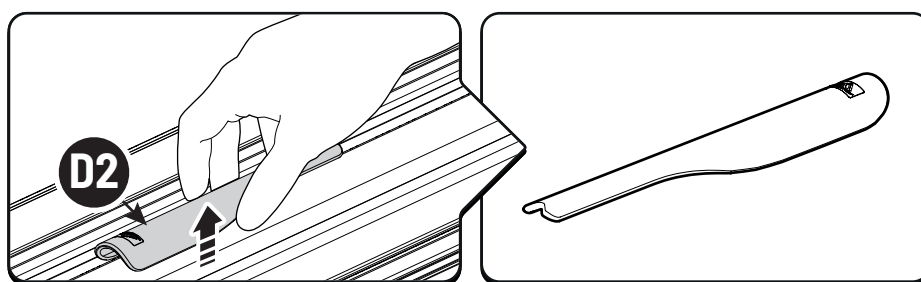
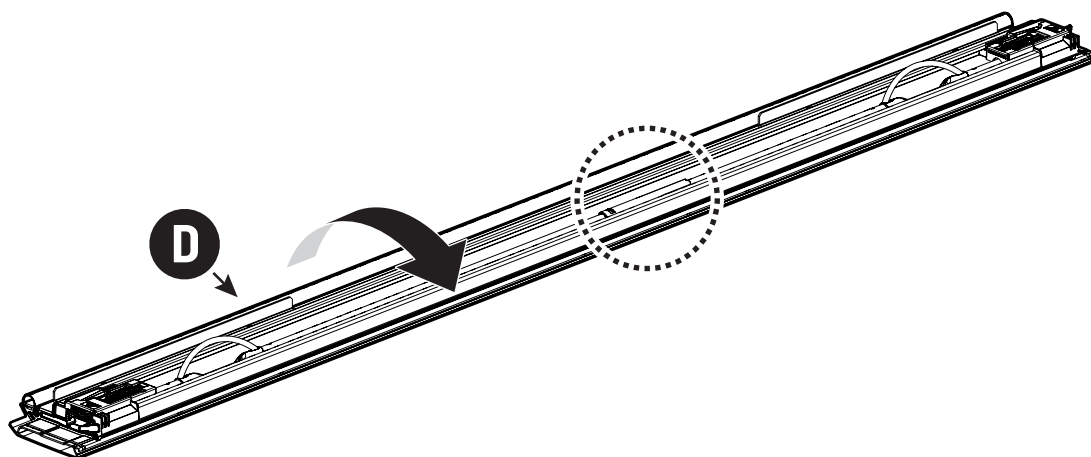


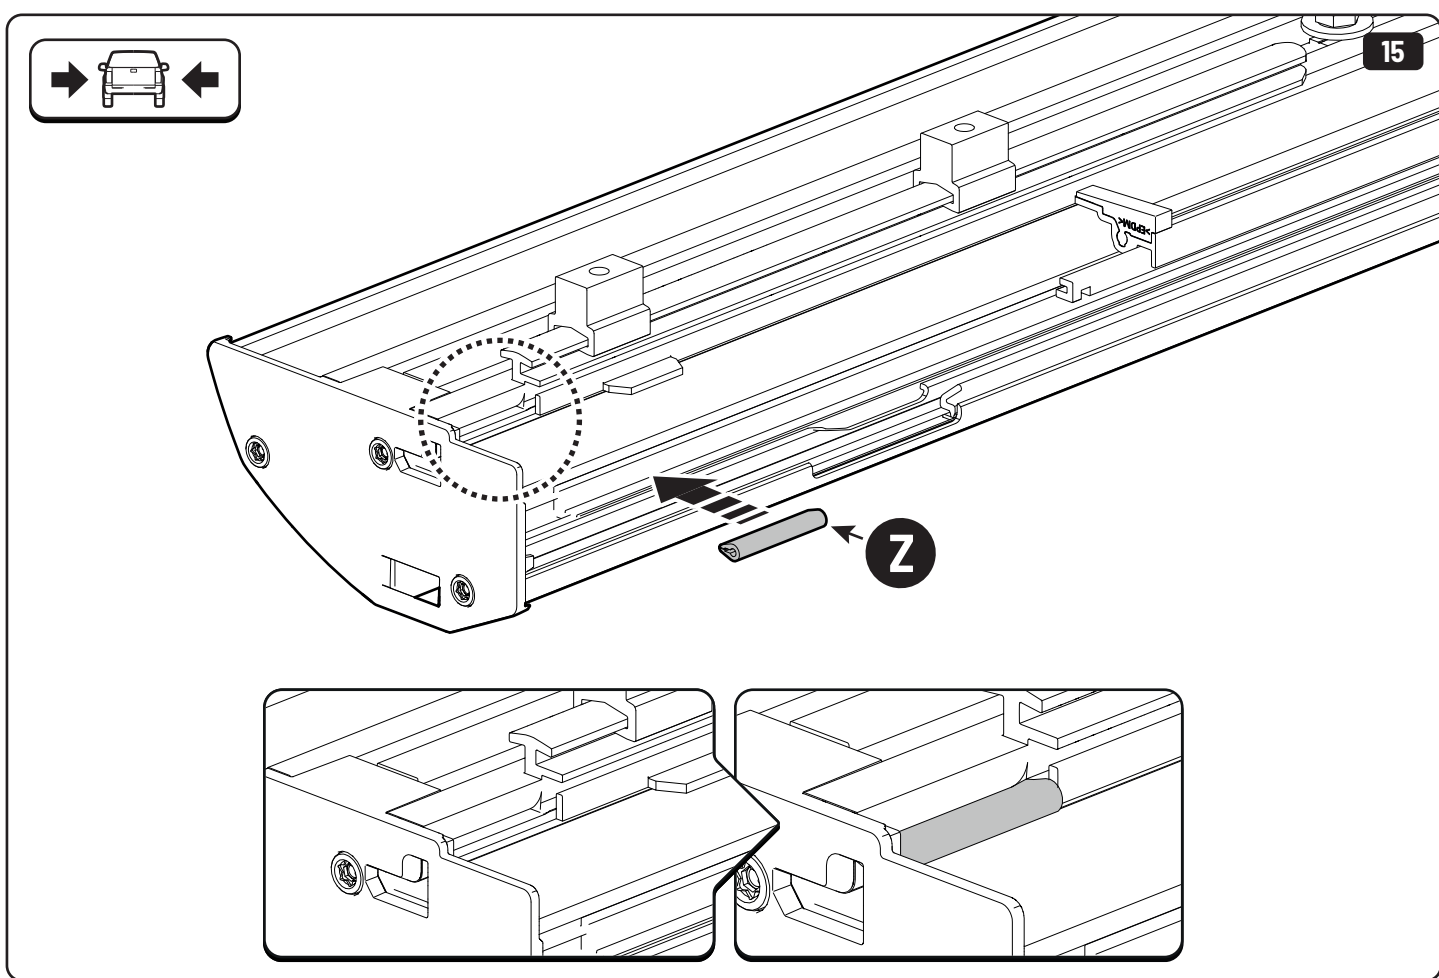
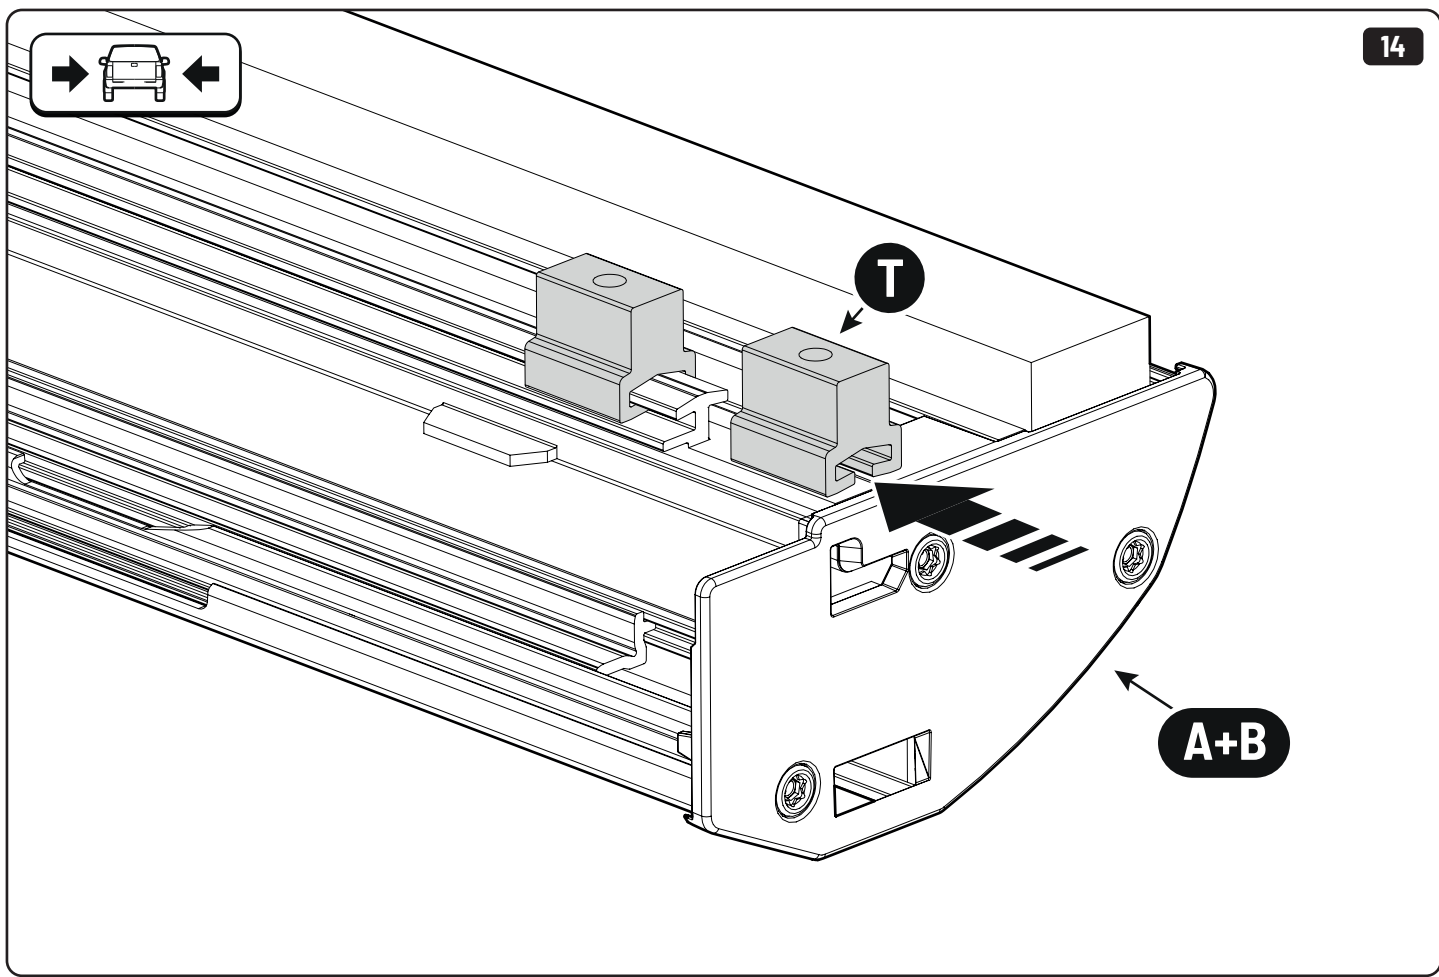


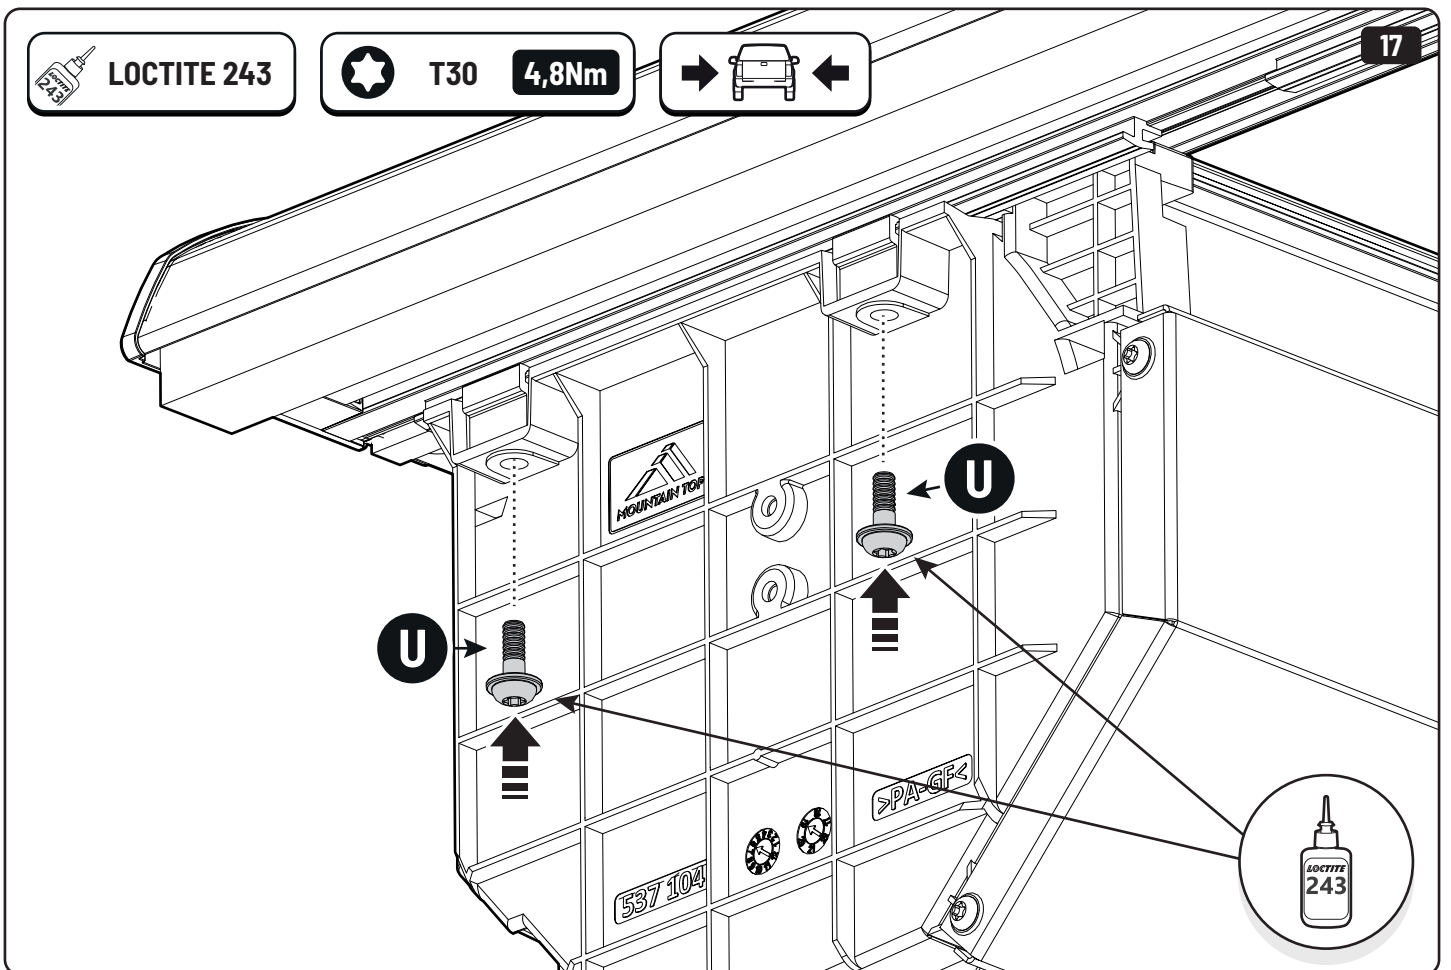
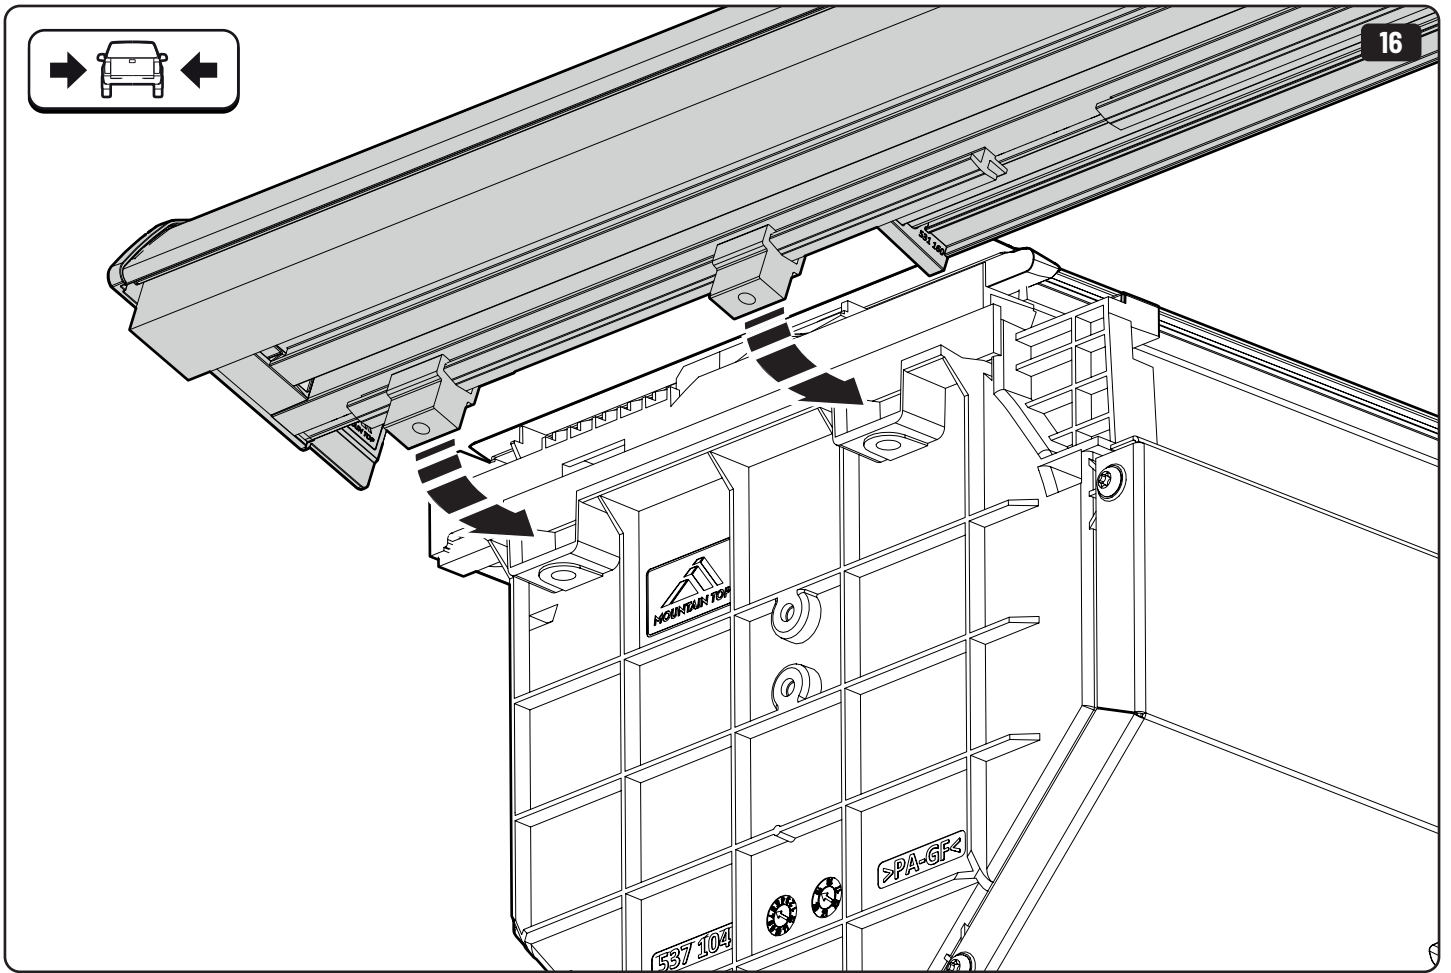


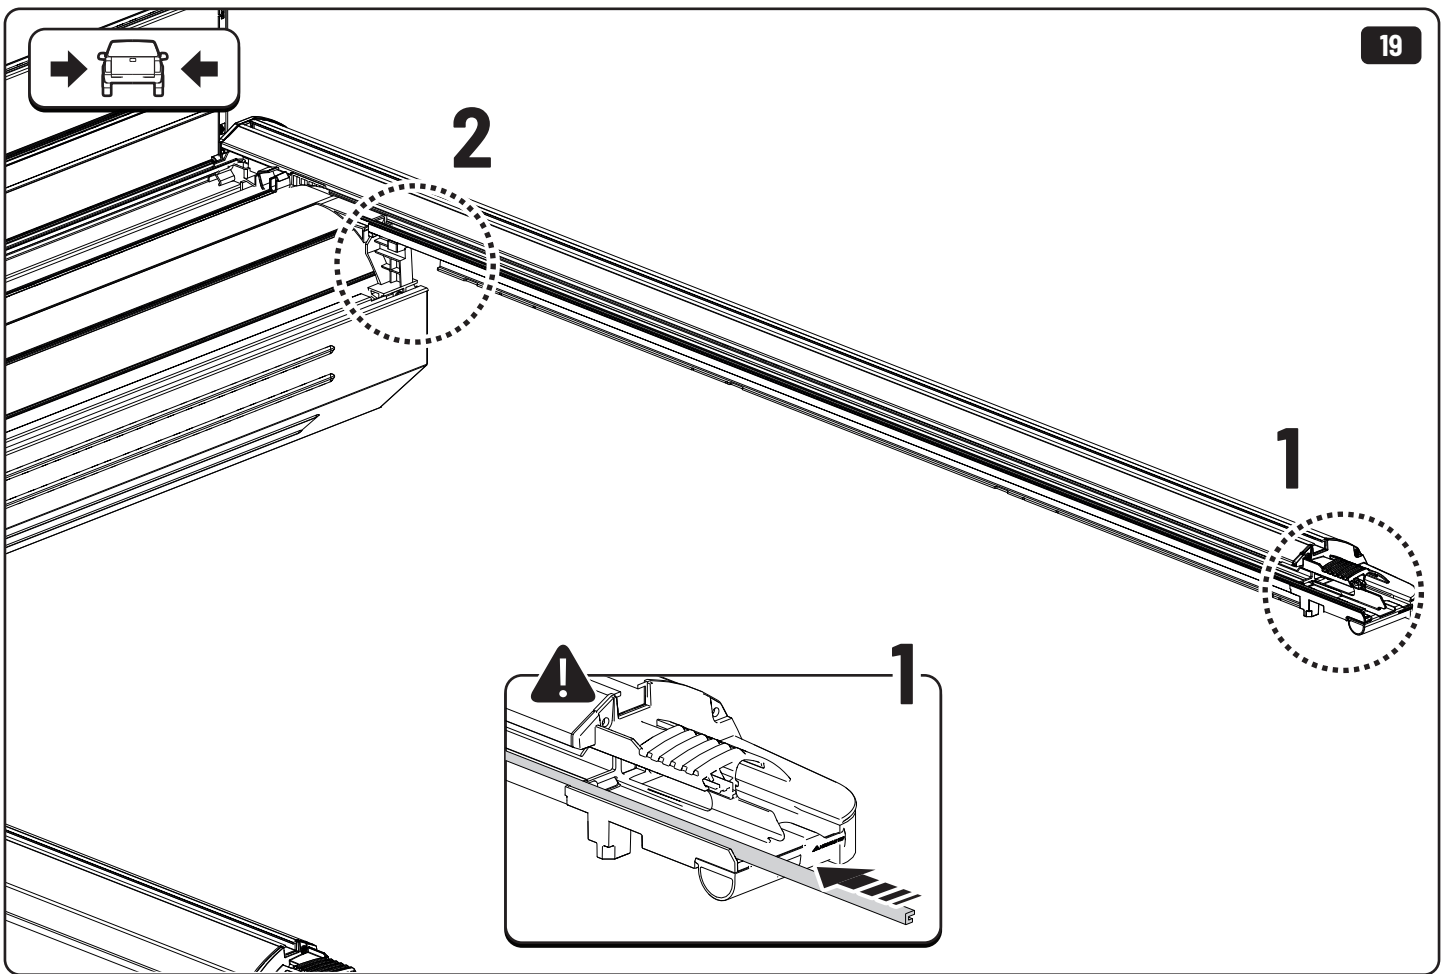
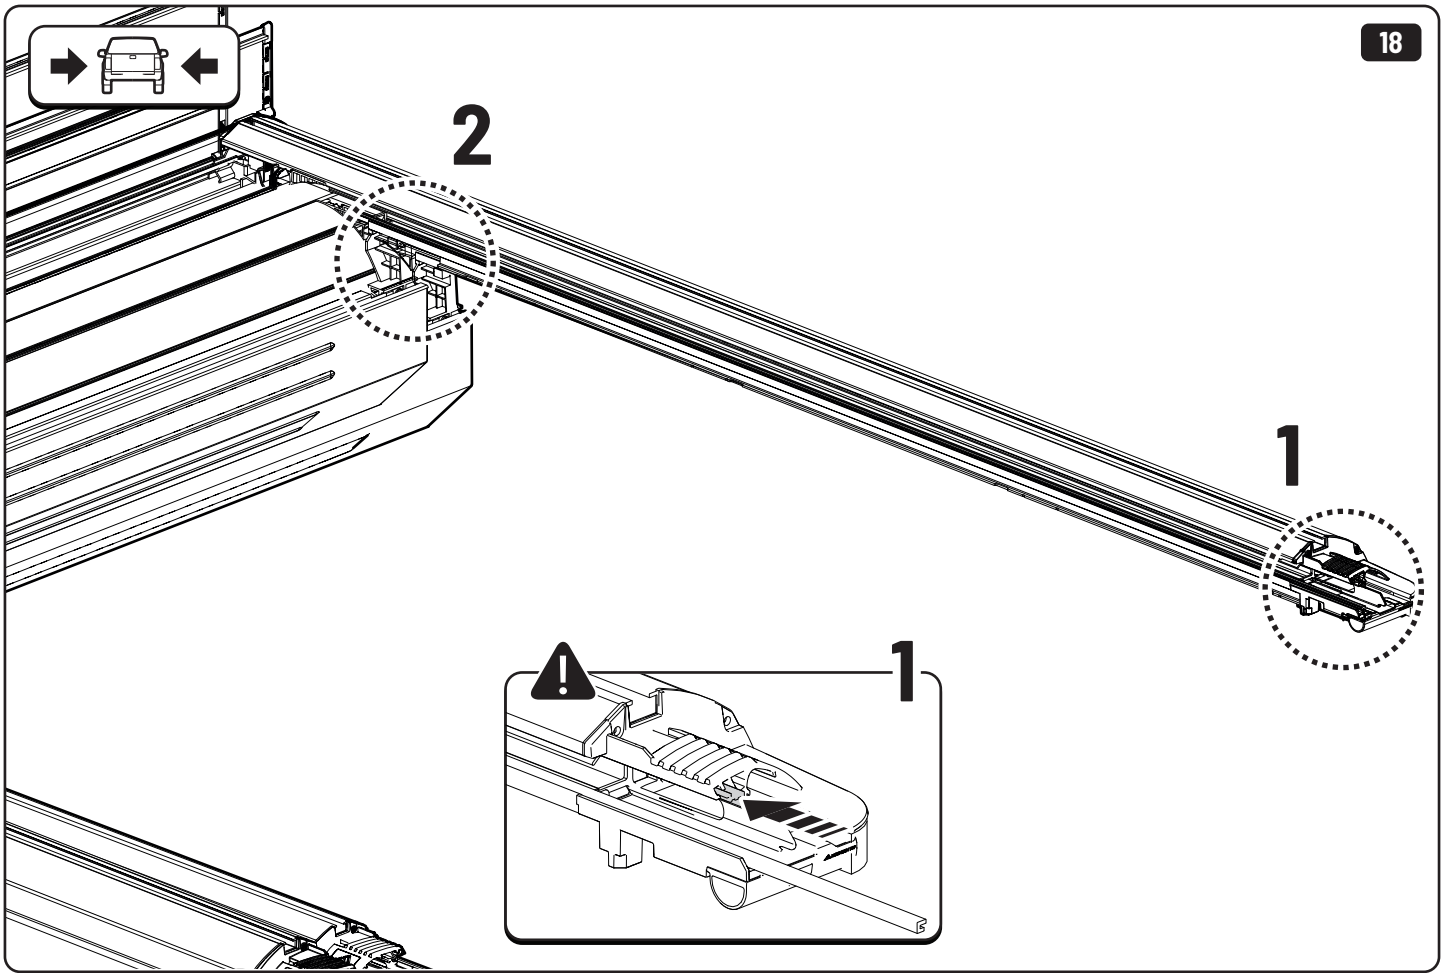


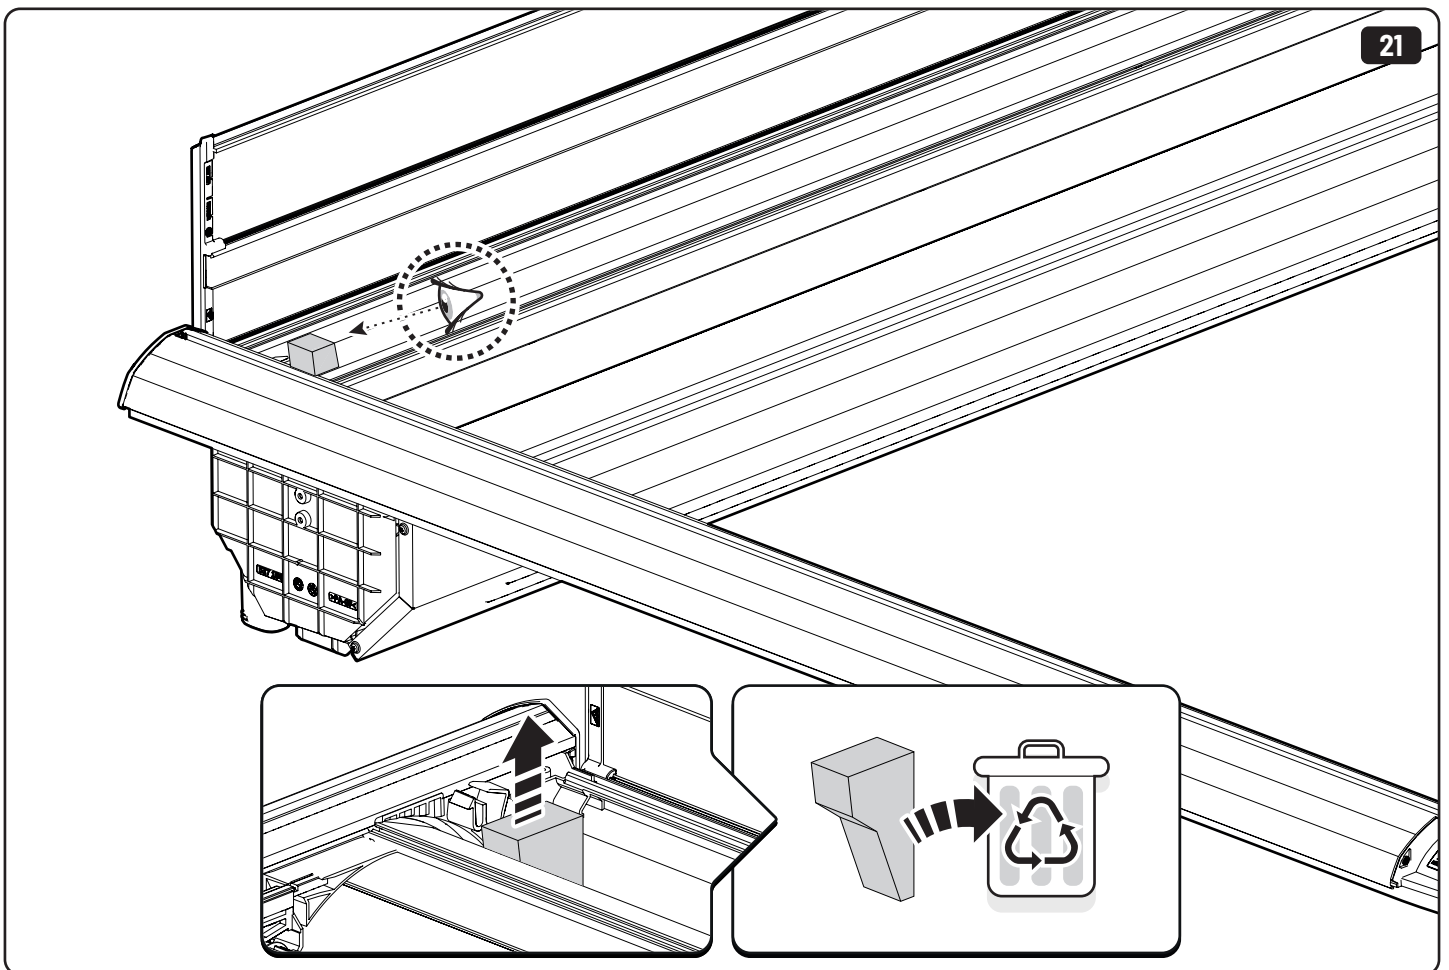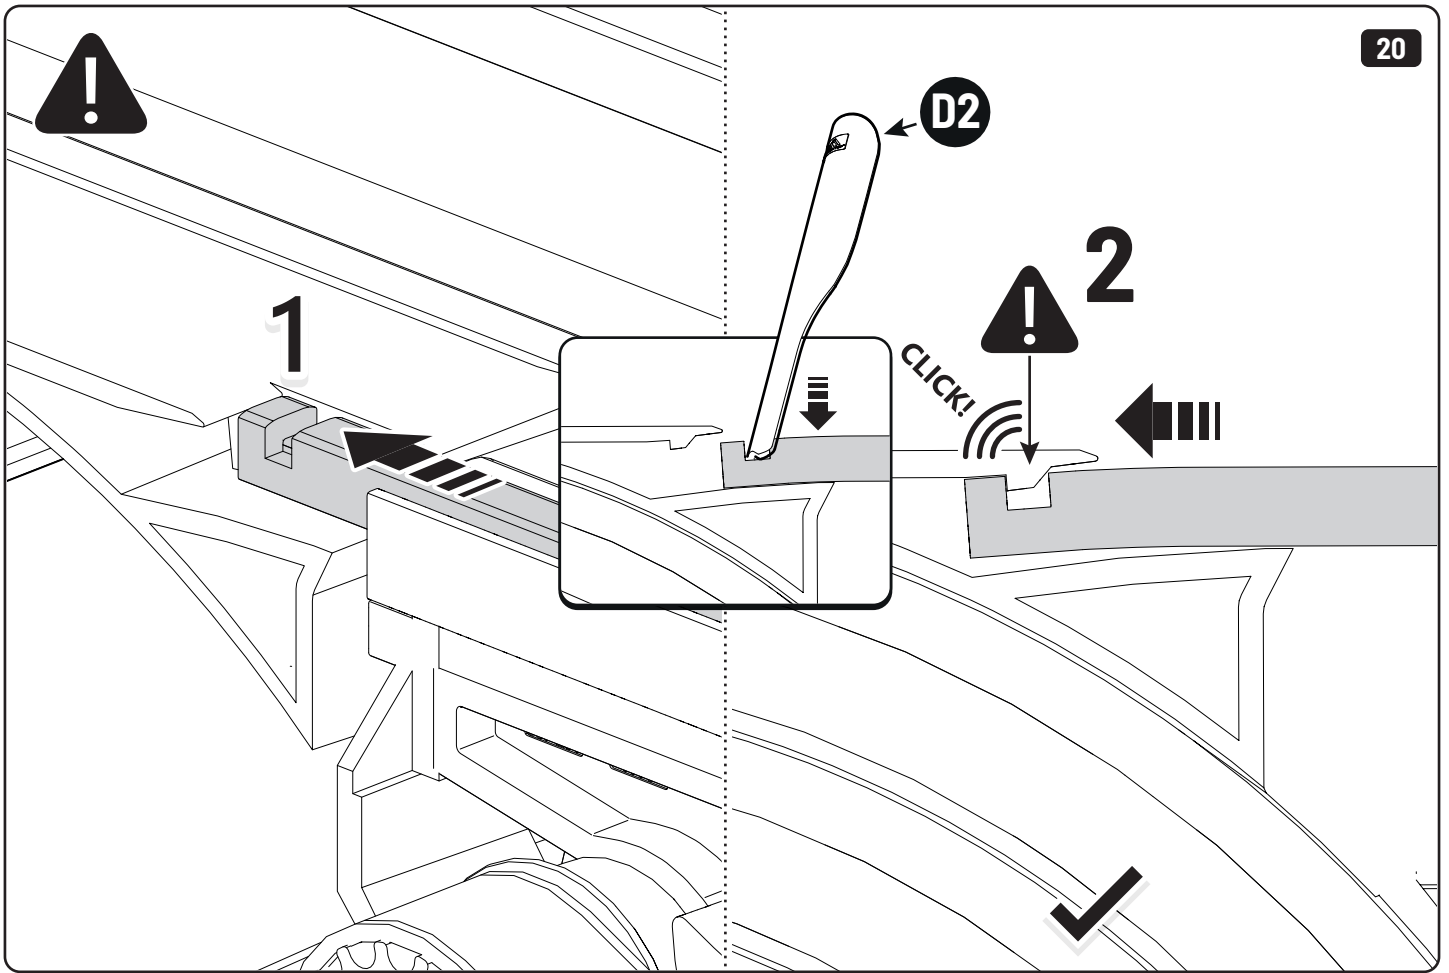


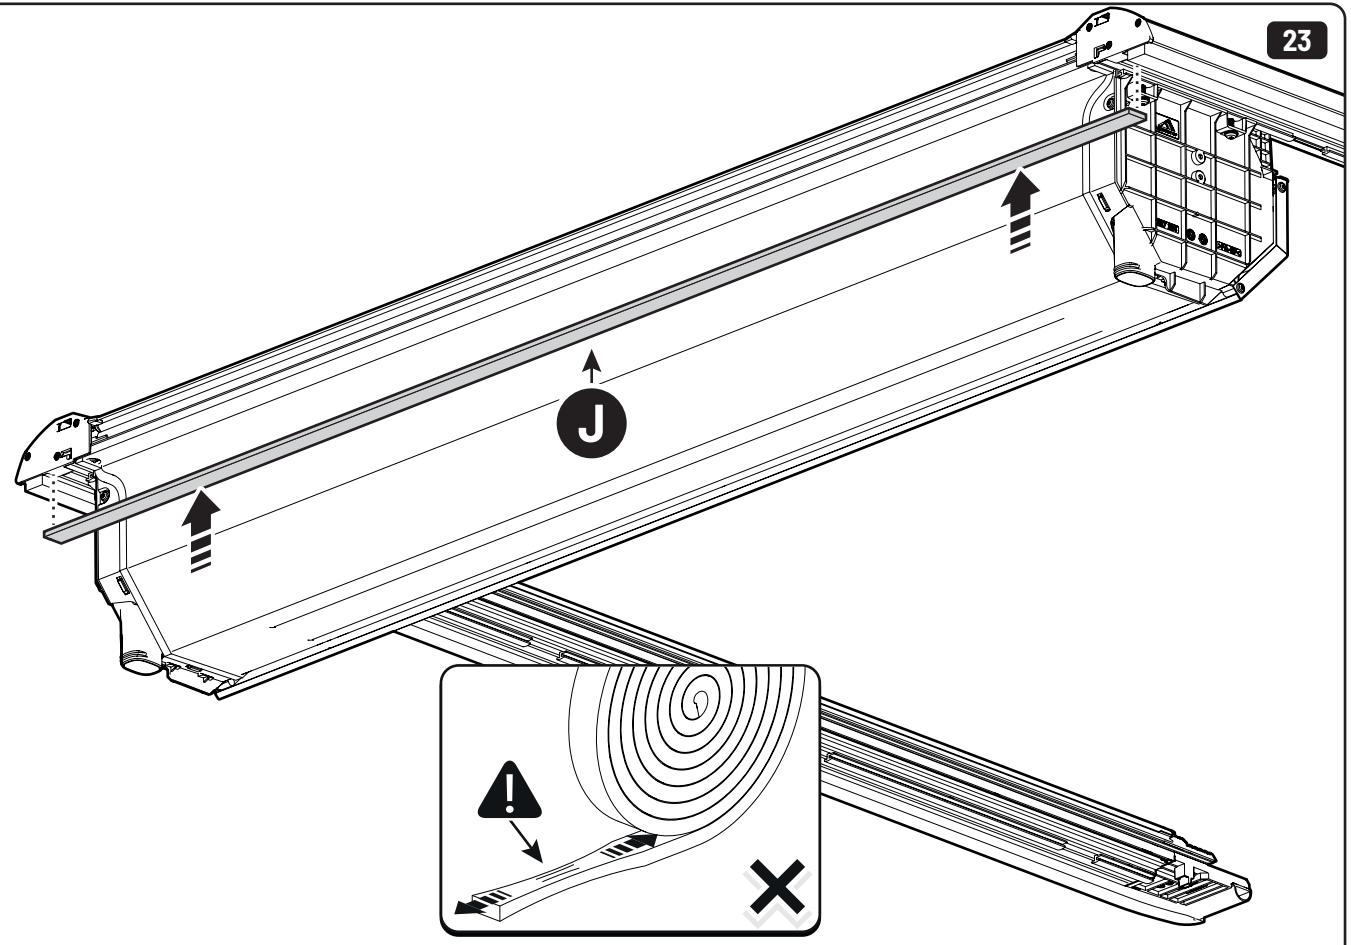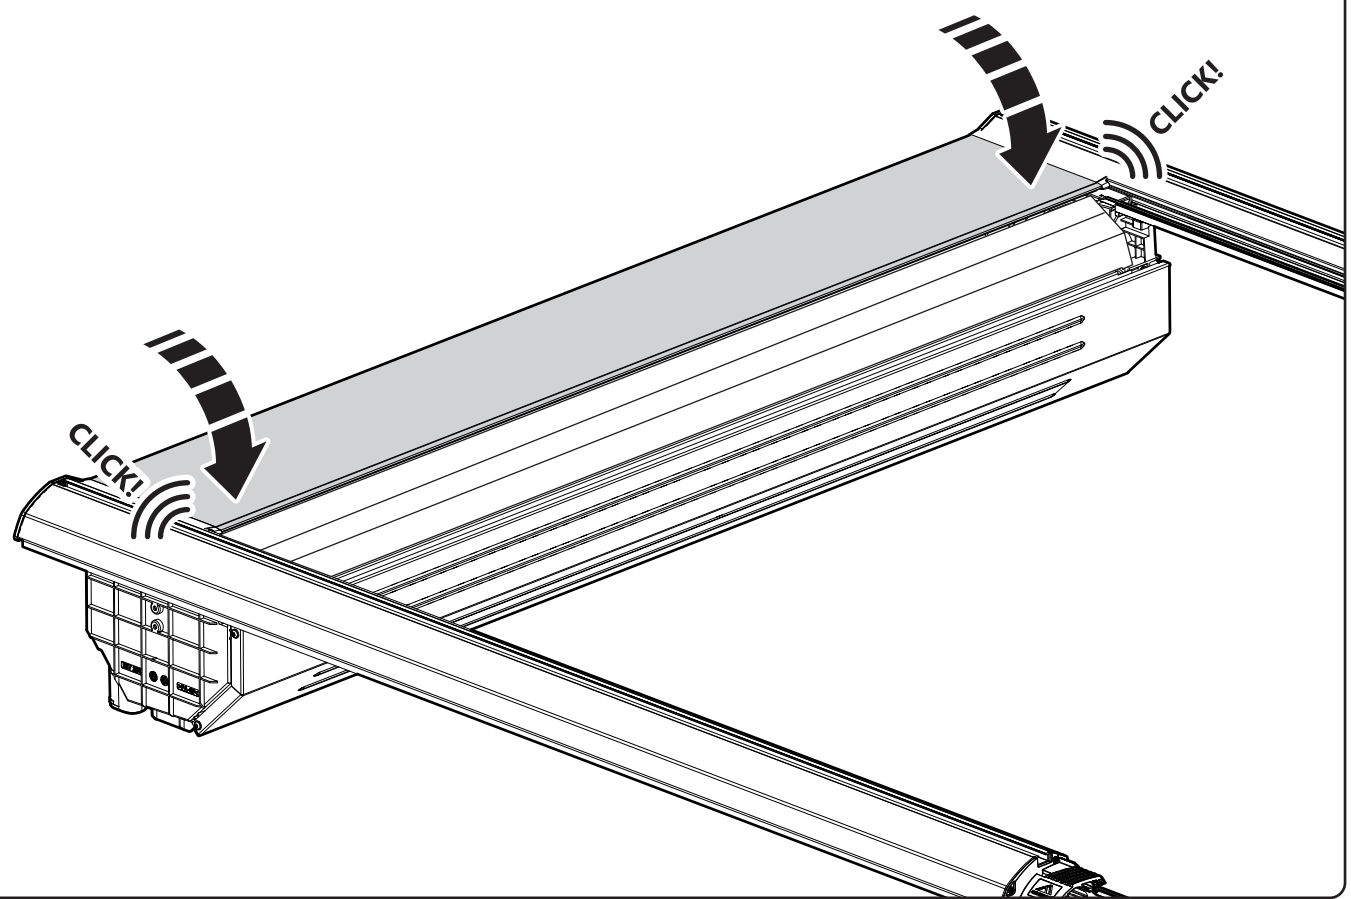

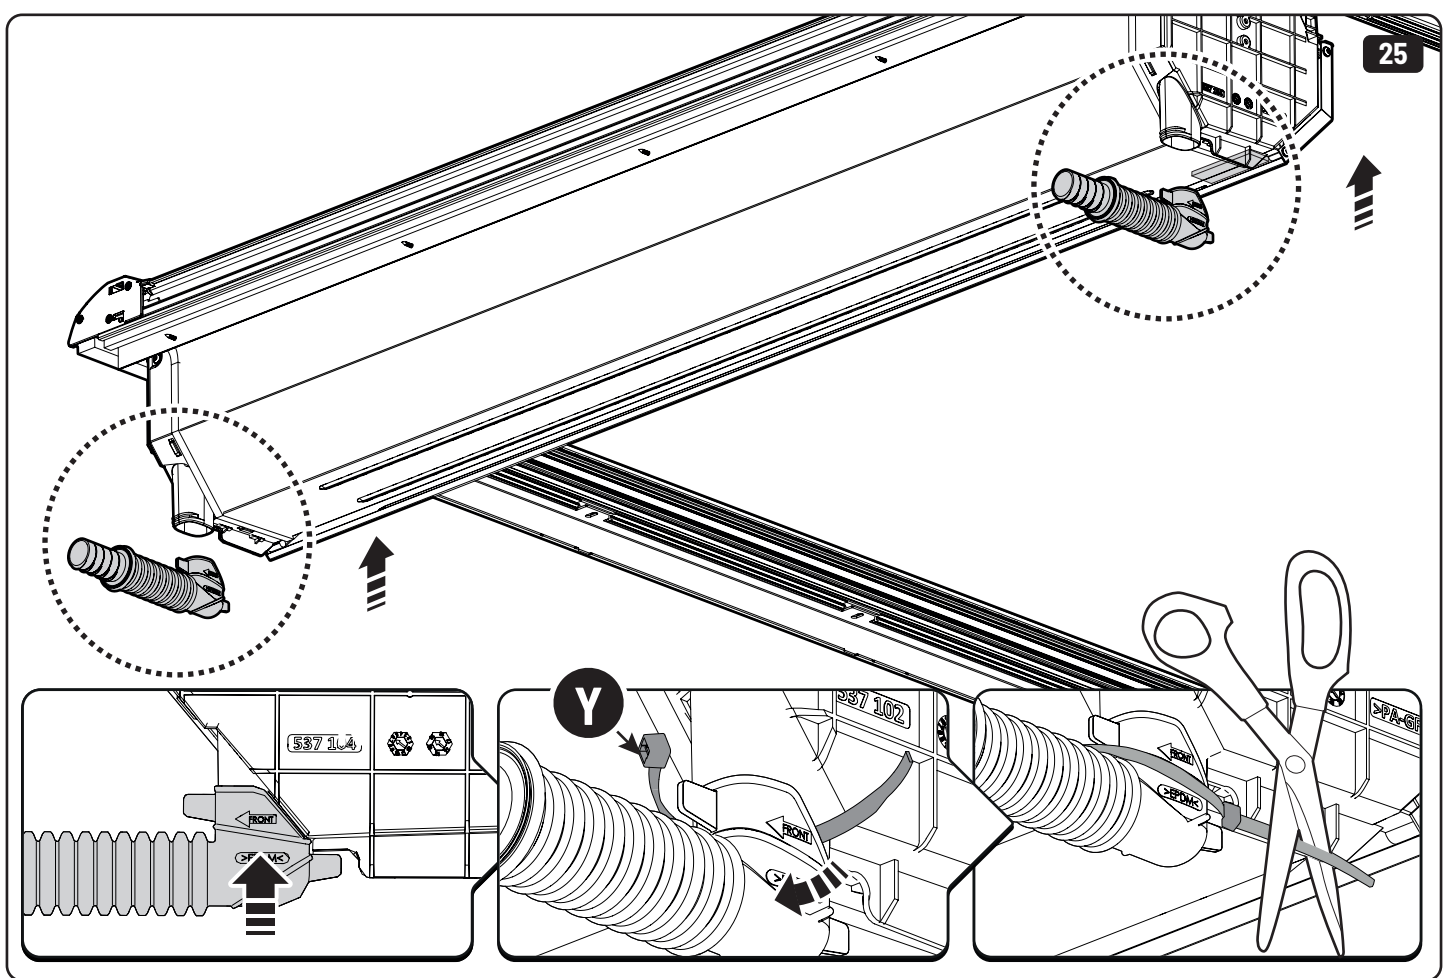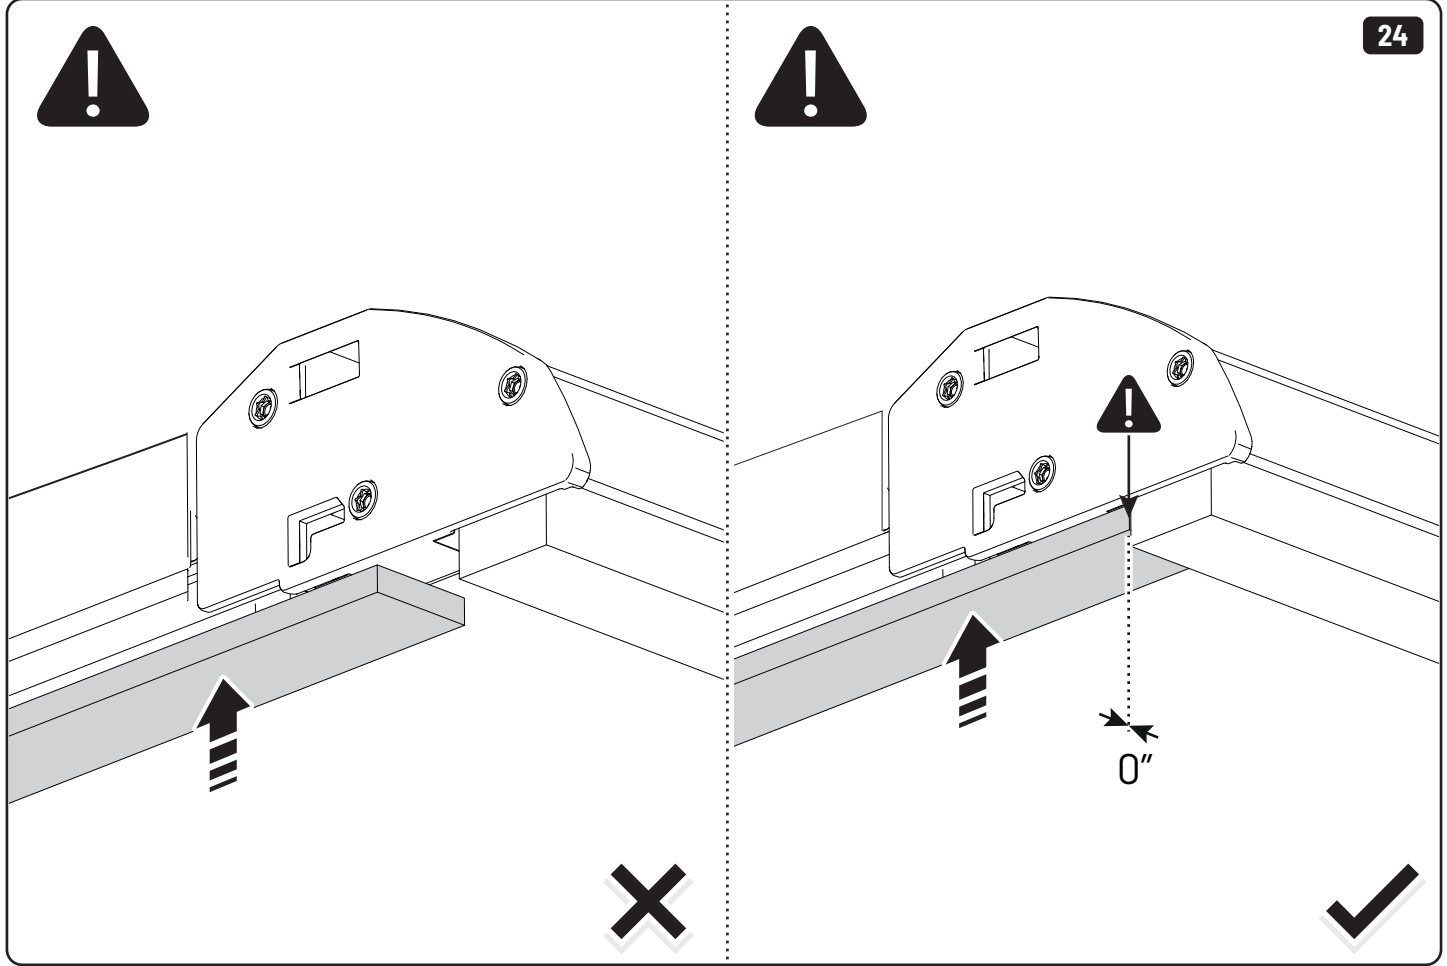

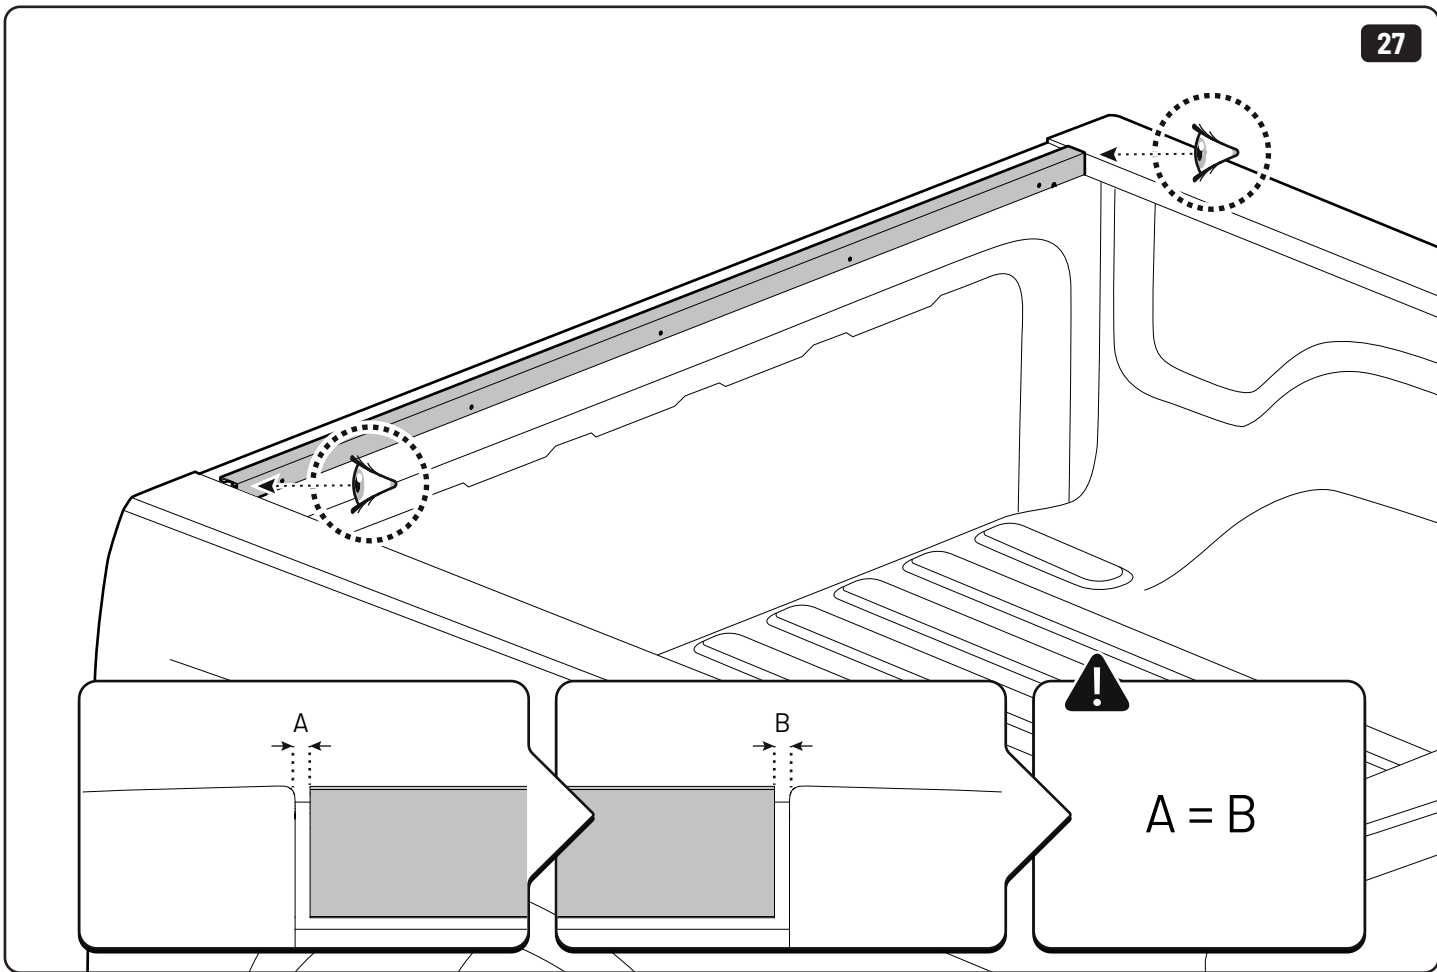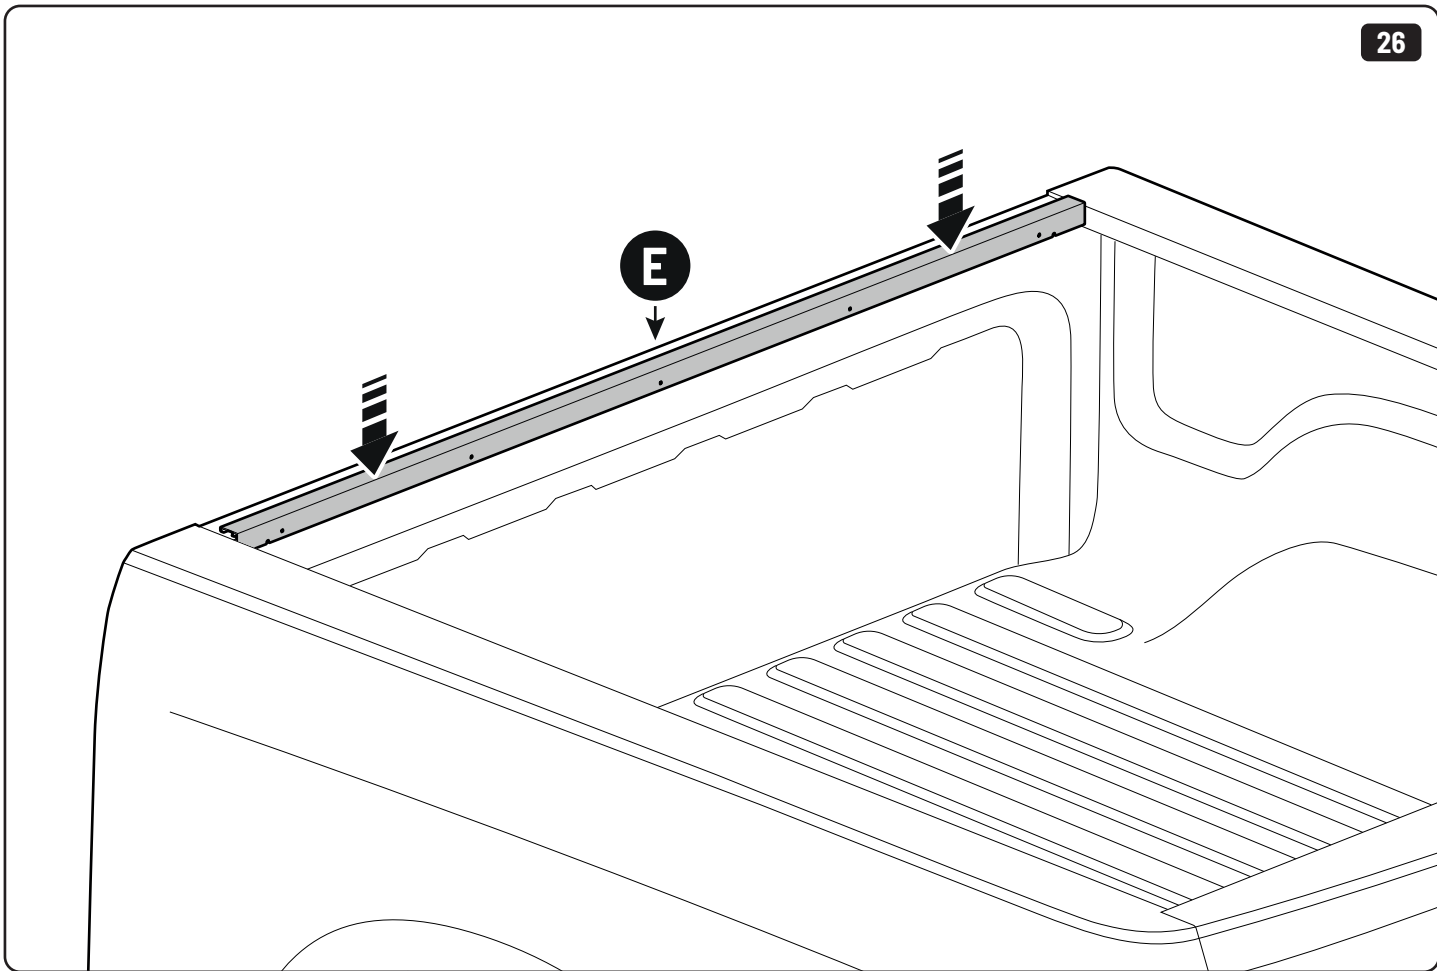




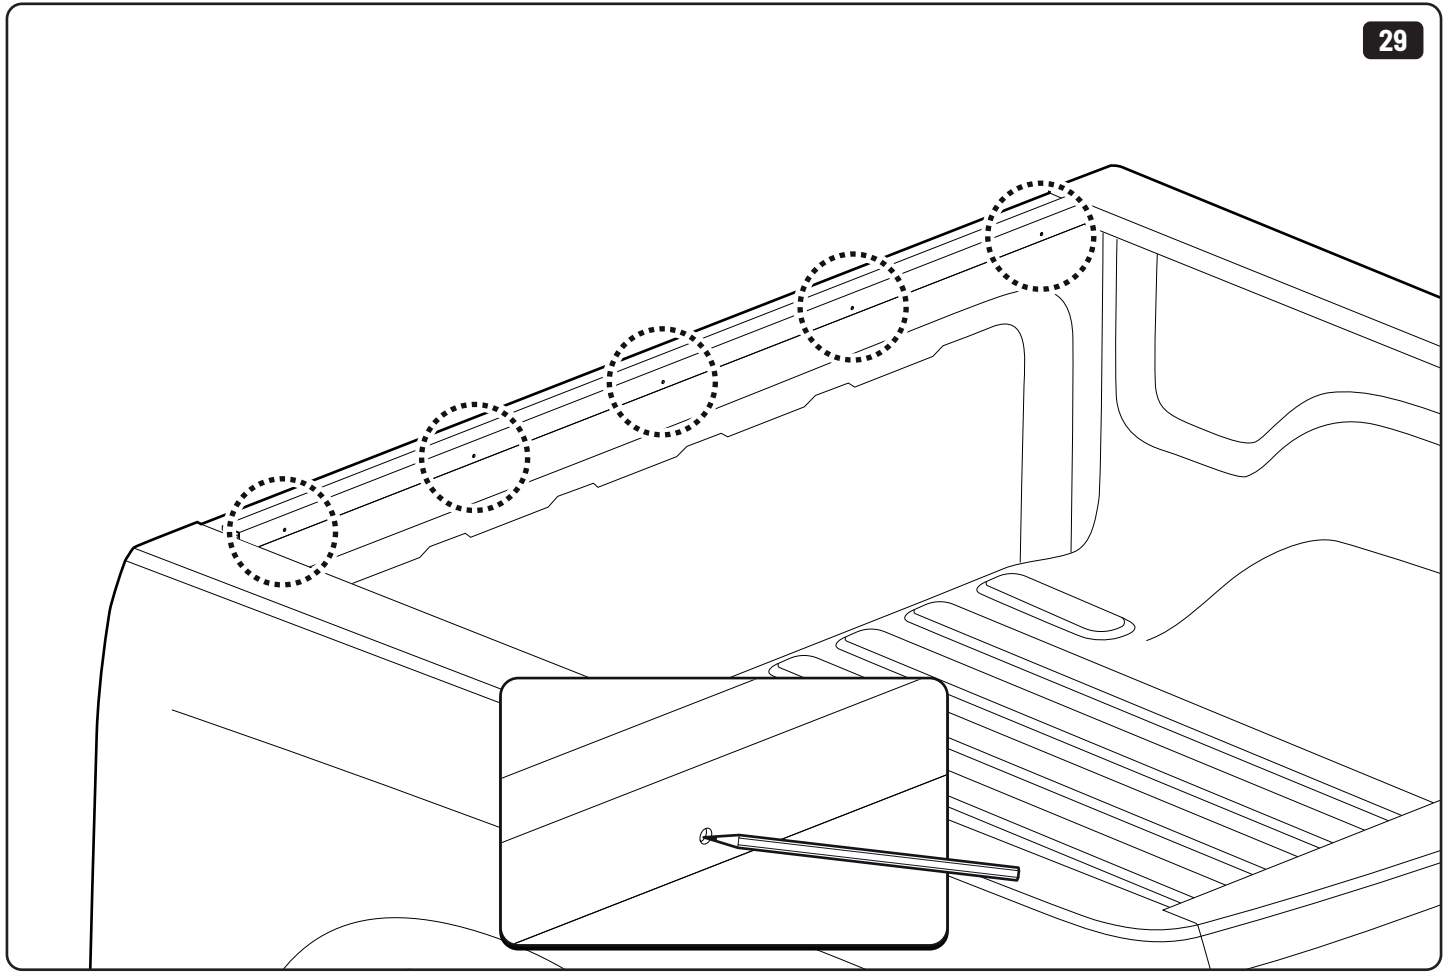
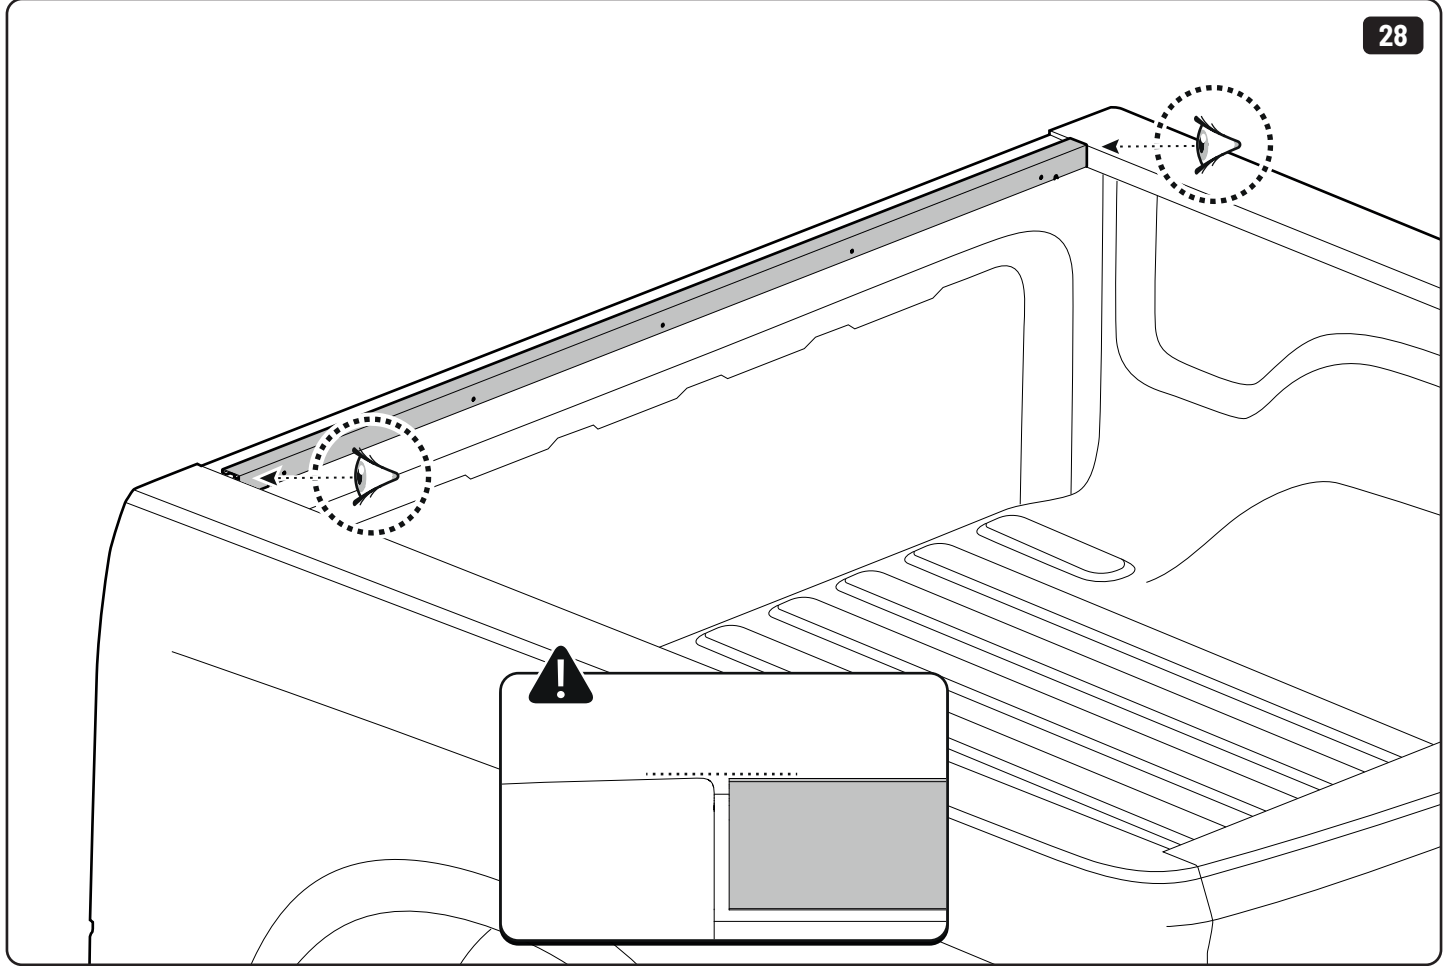



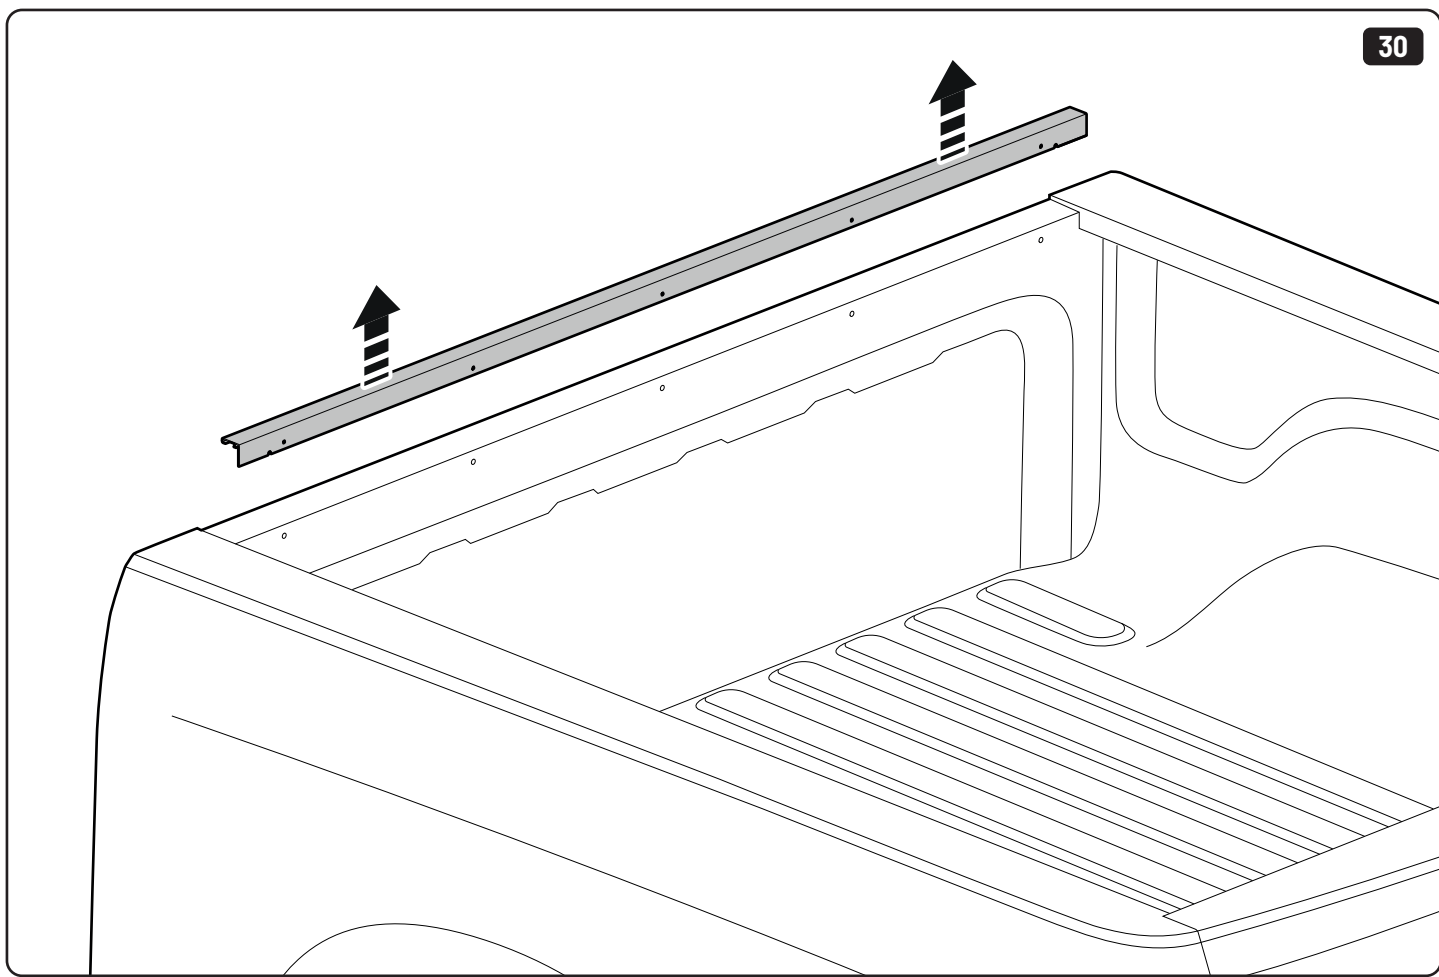


 Ø 2,4mm 3/32"

 Rust Protection

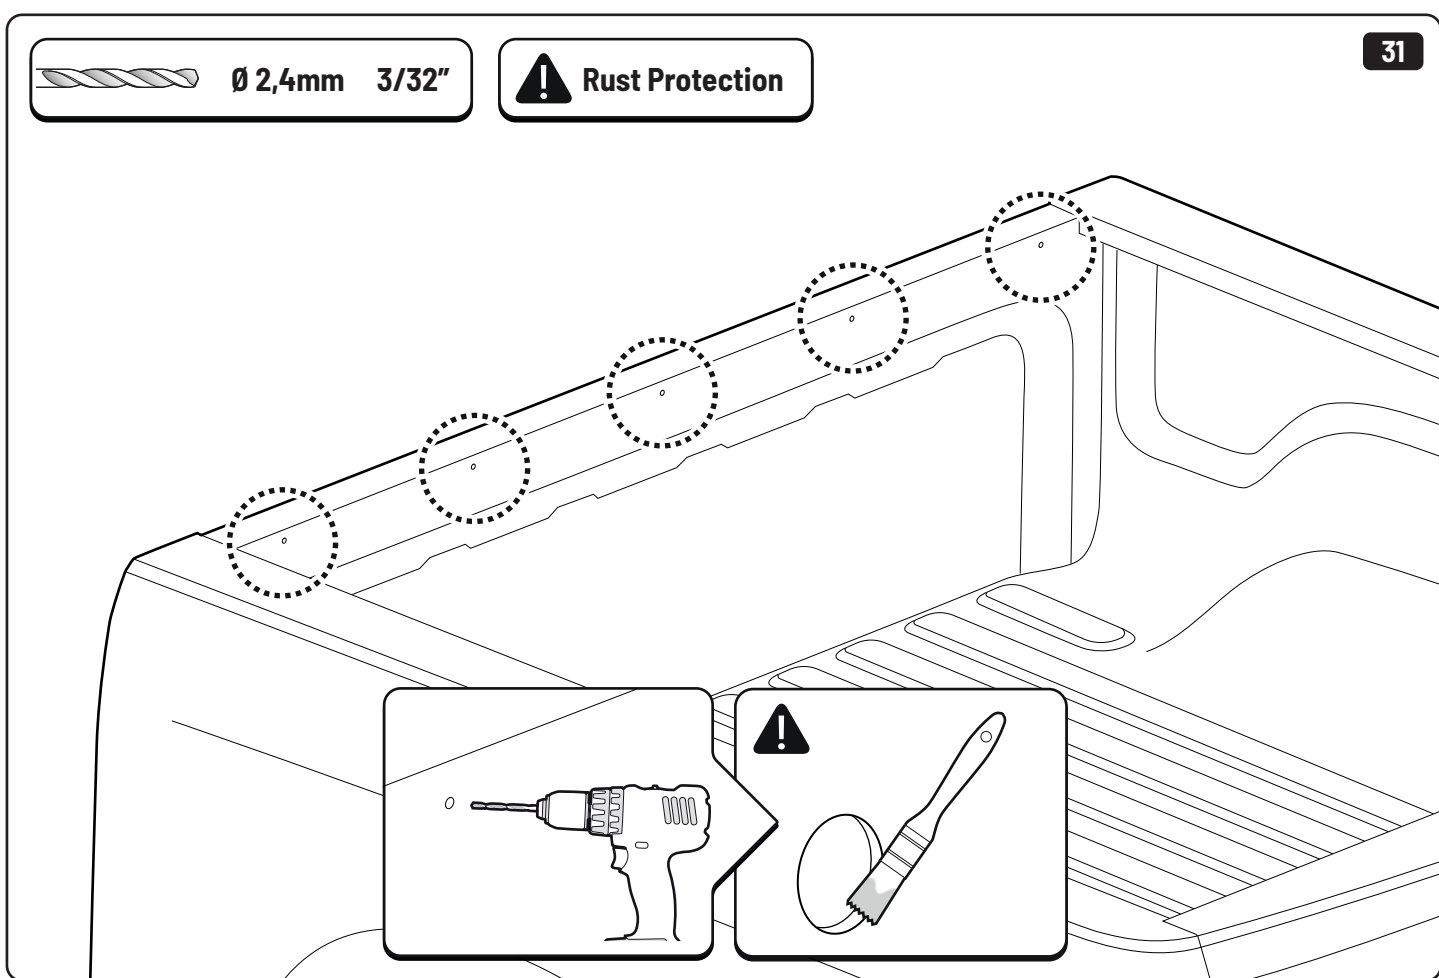


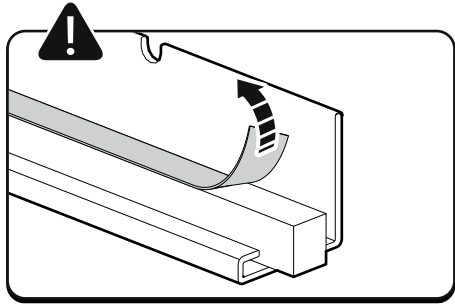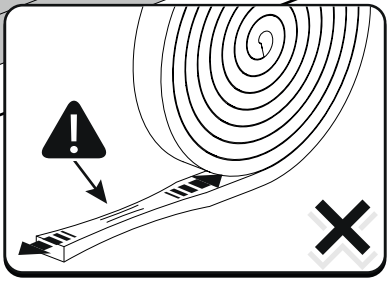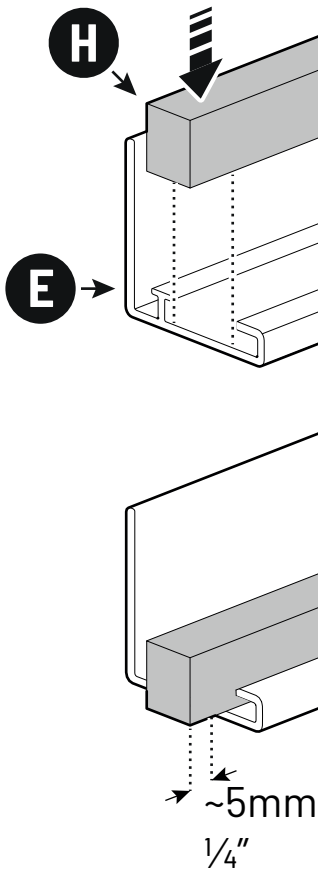

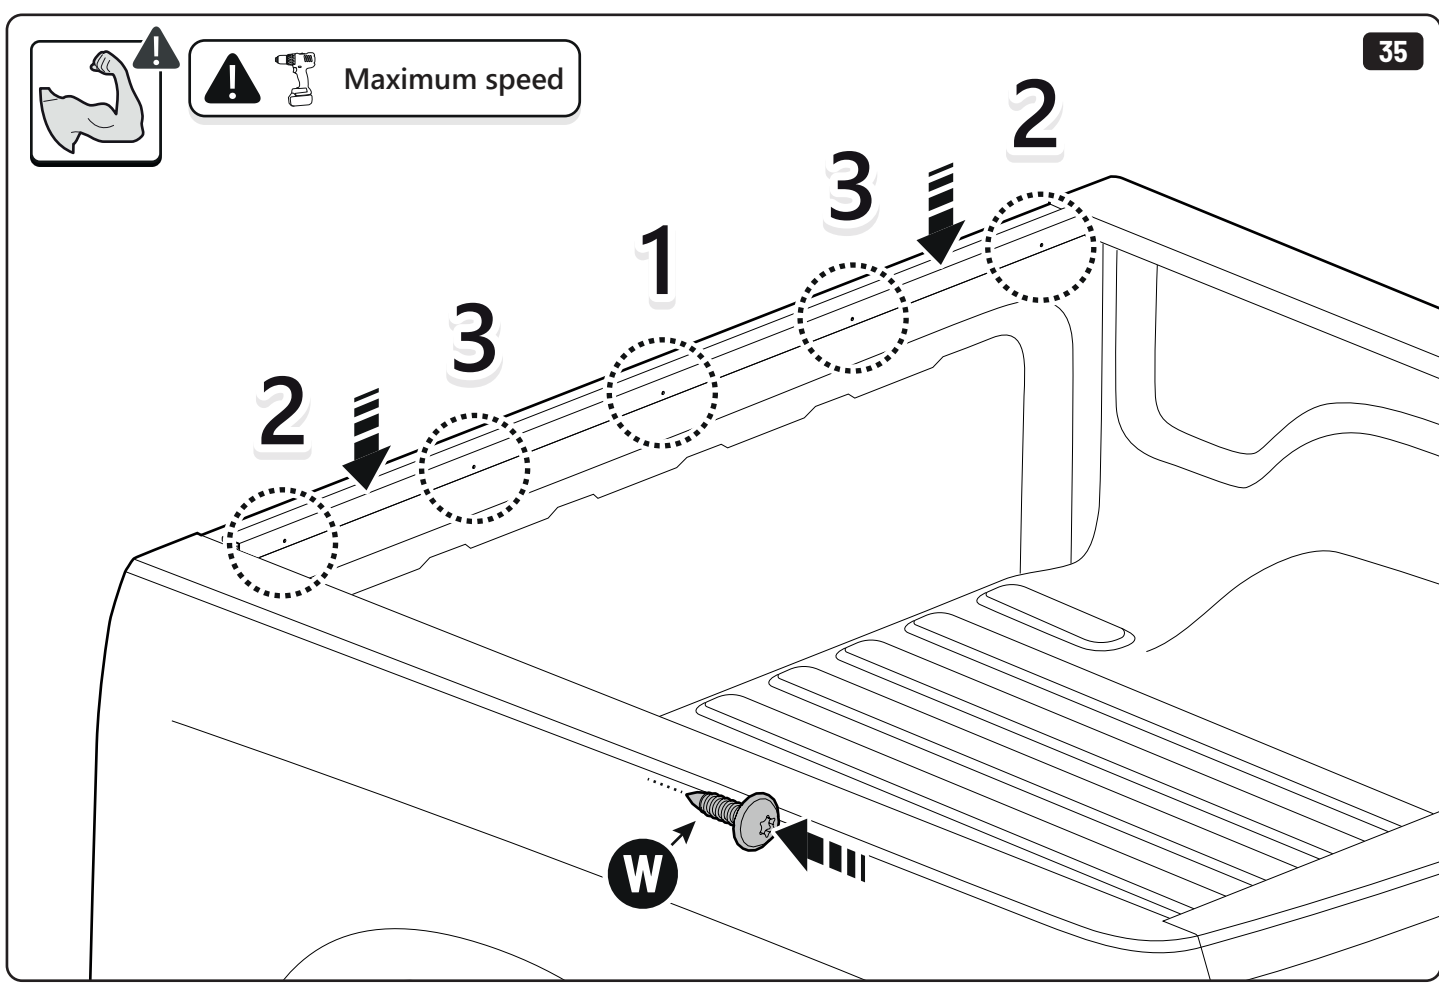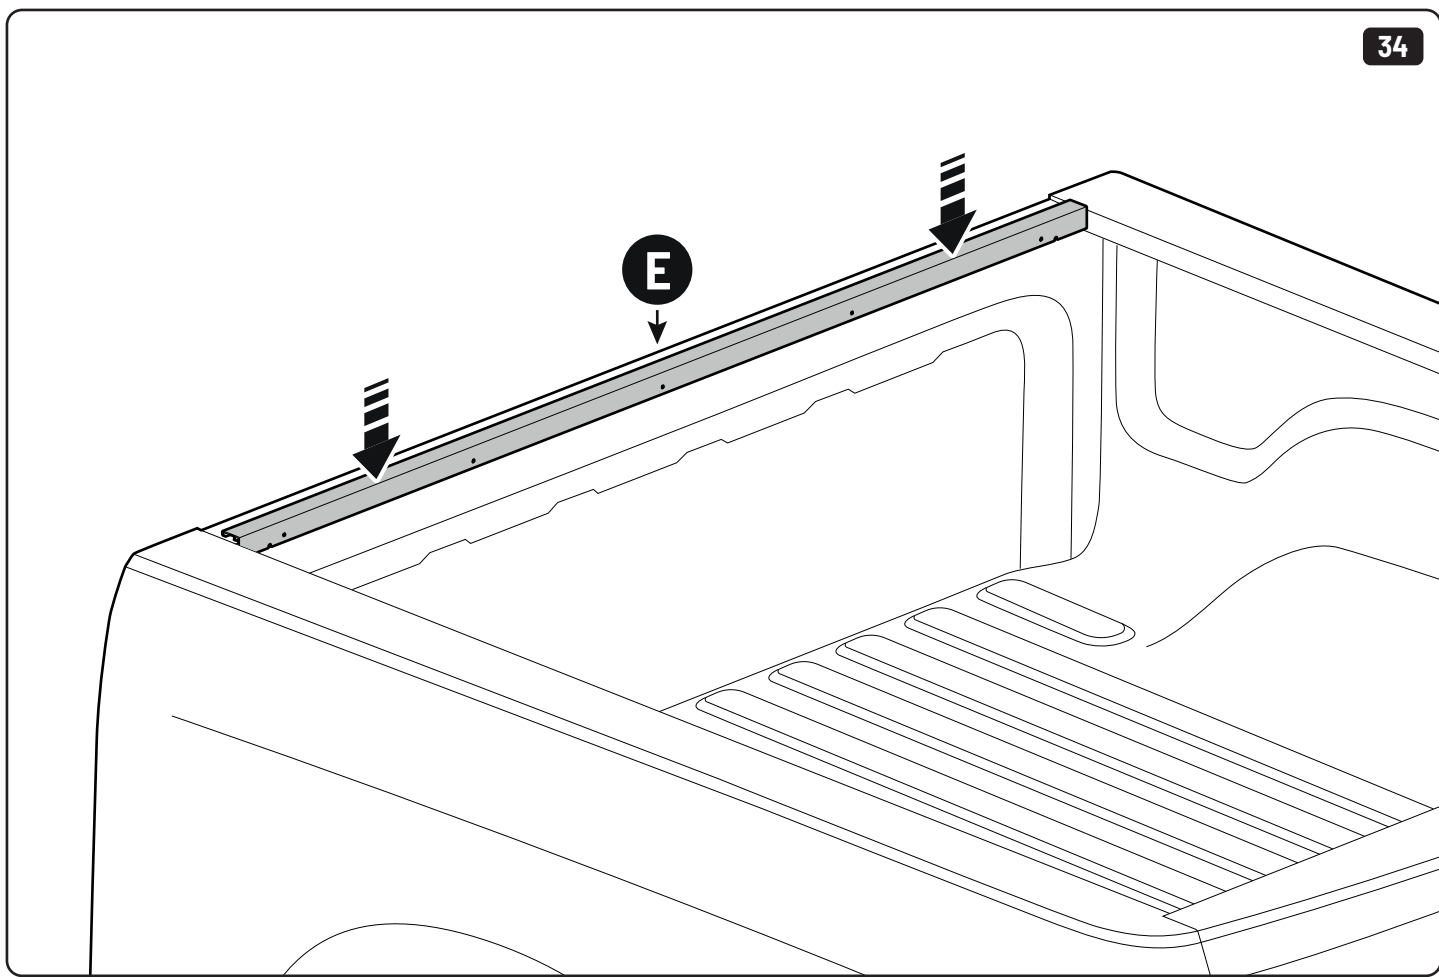











Sealer

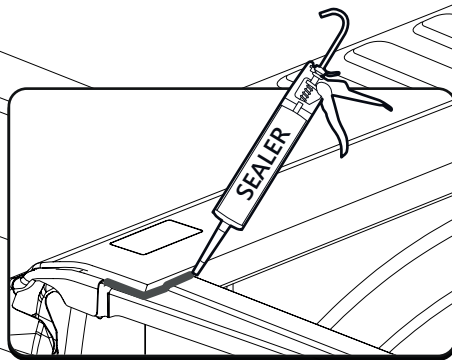





265mm
10 1/2"



265mm
10 1/2"

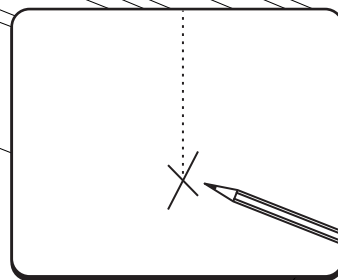
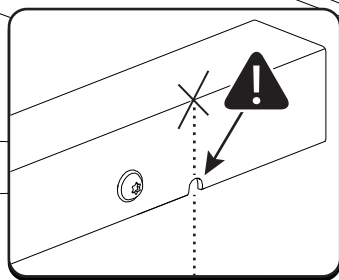


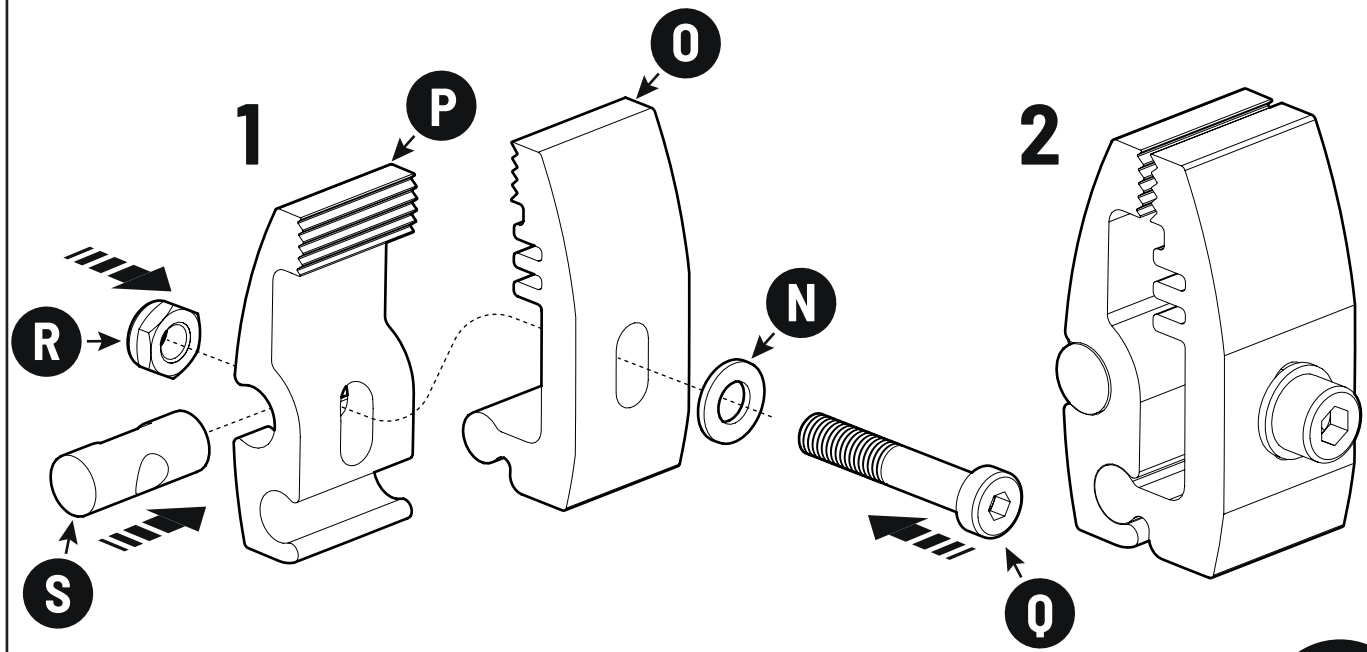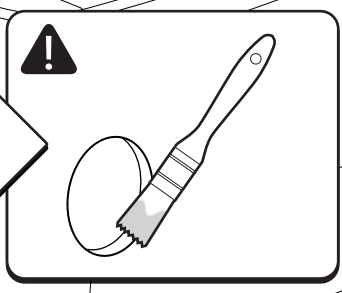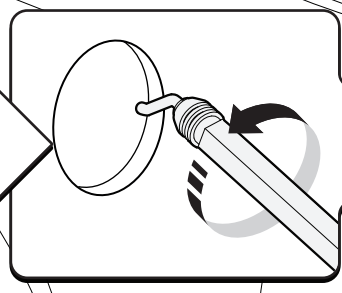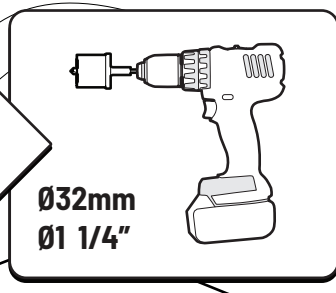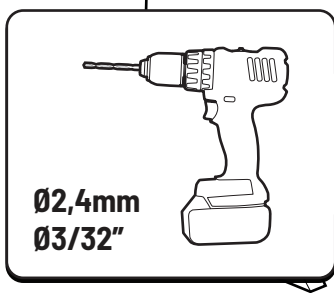
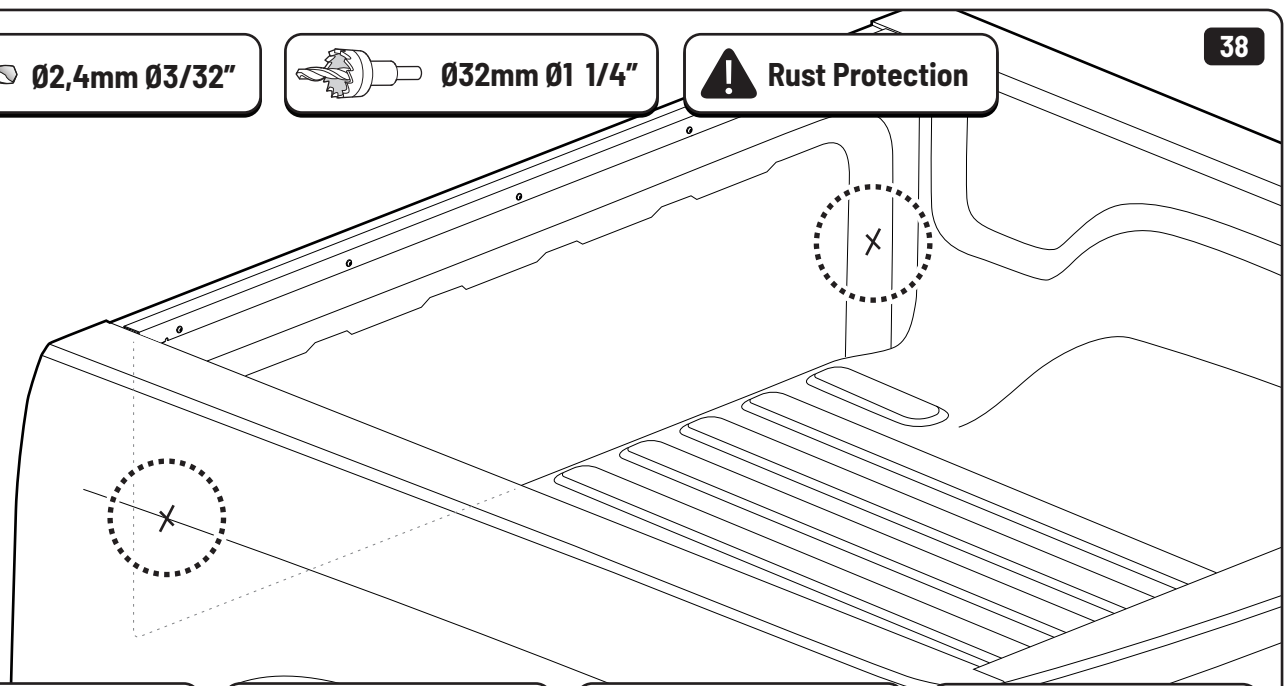




x8

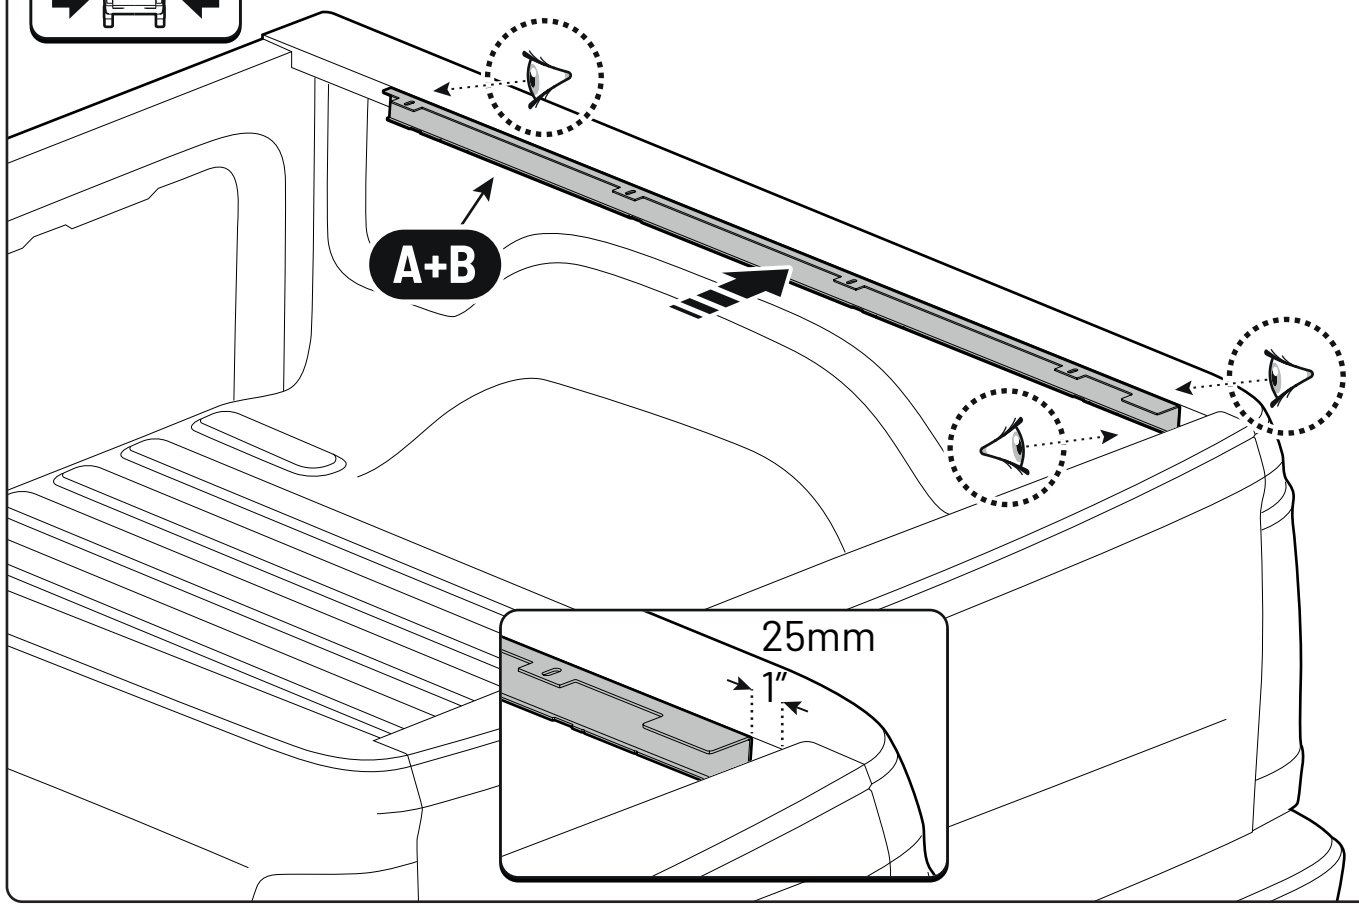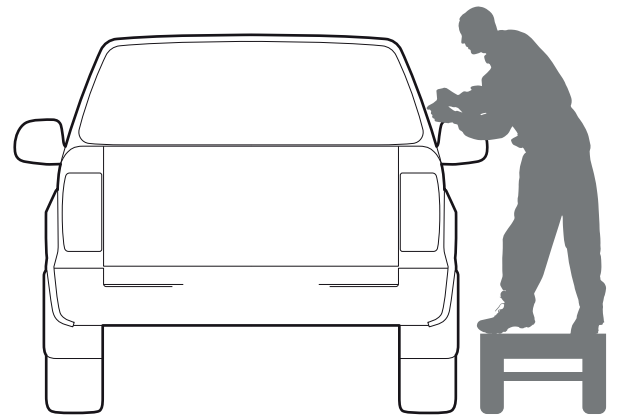
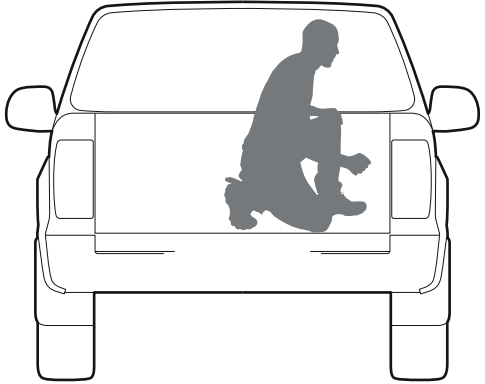


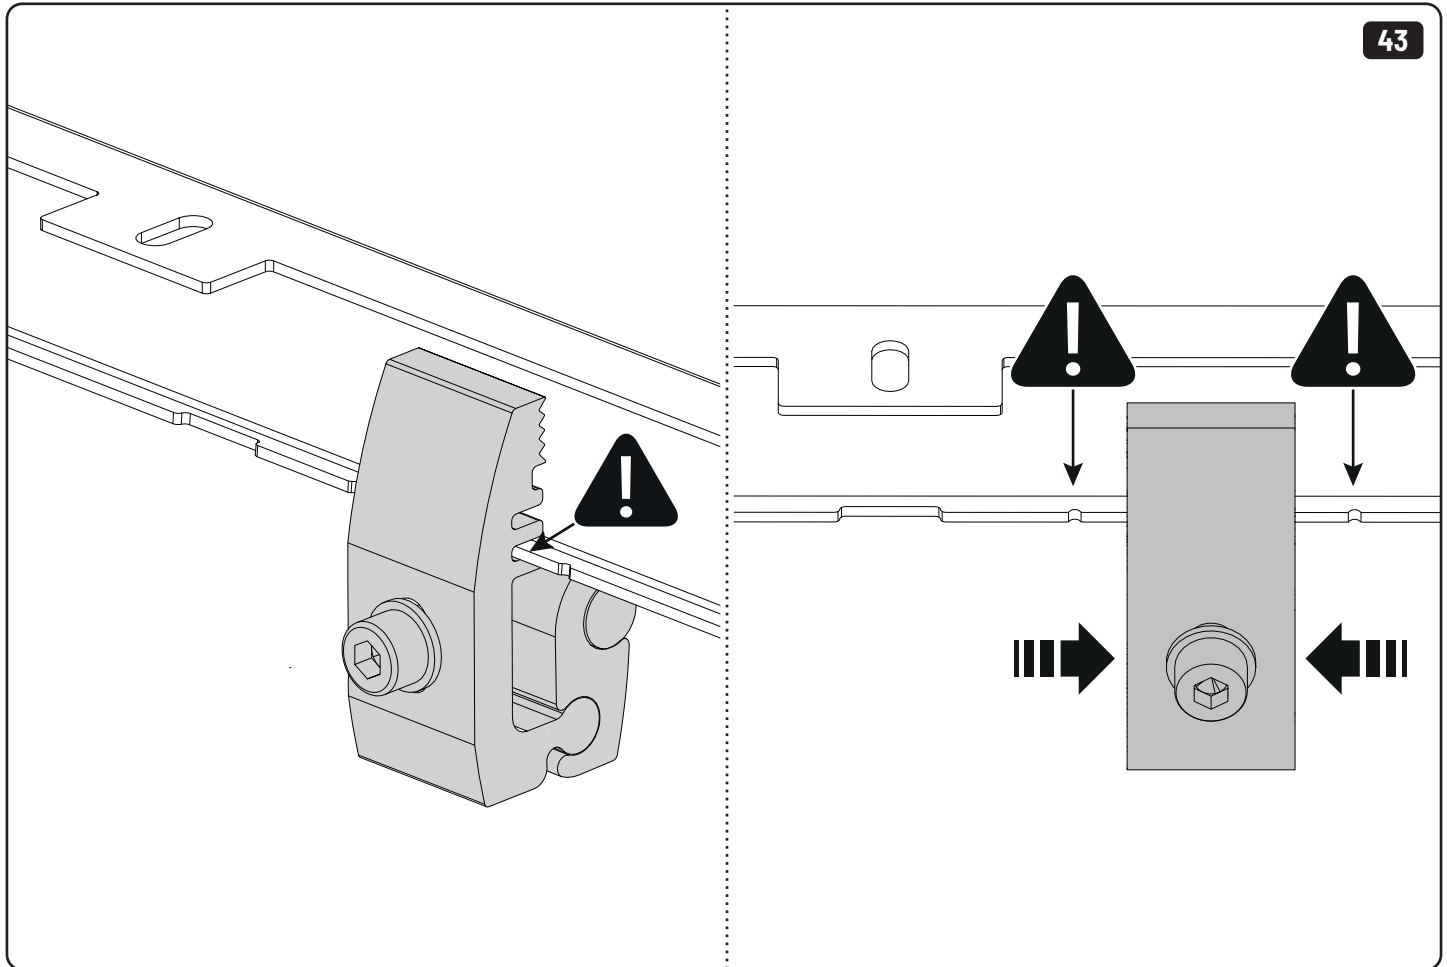
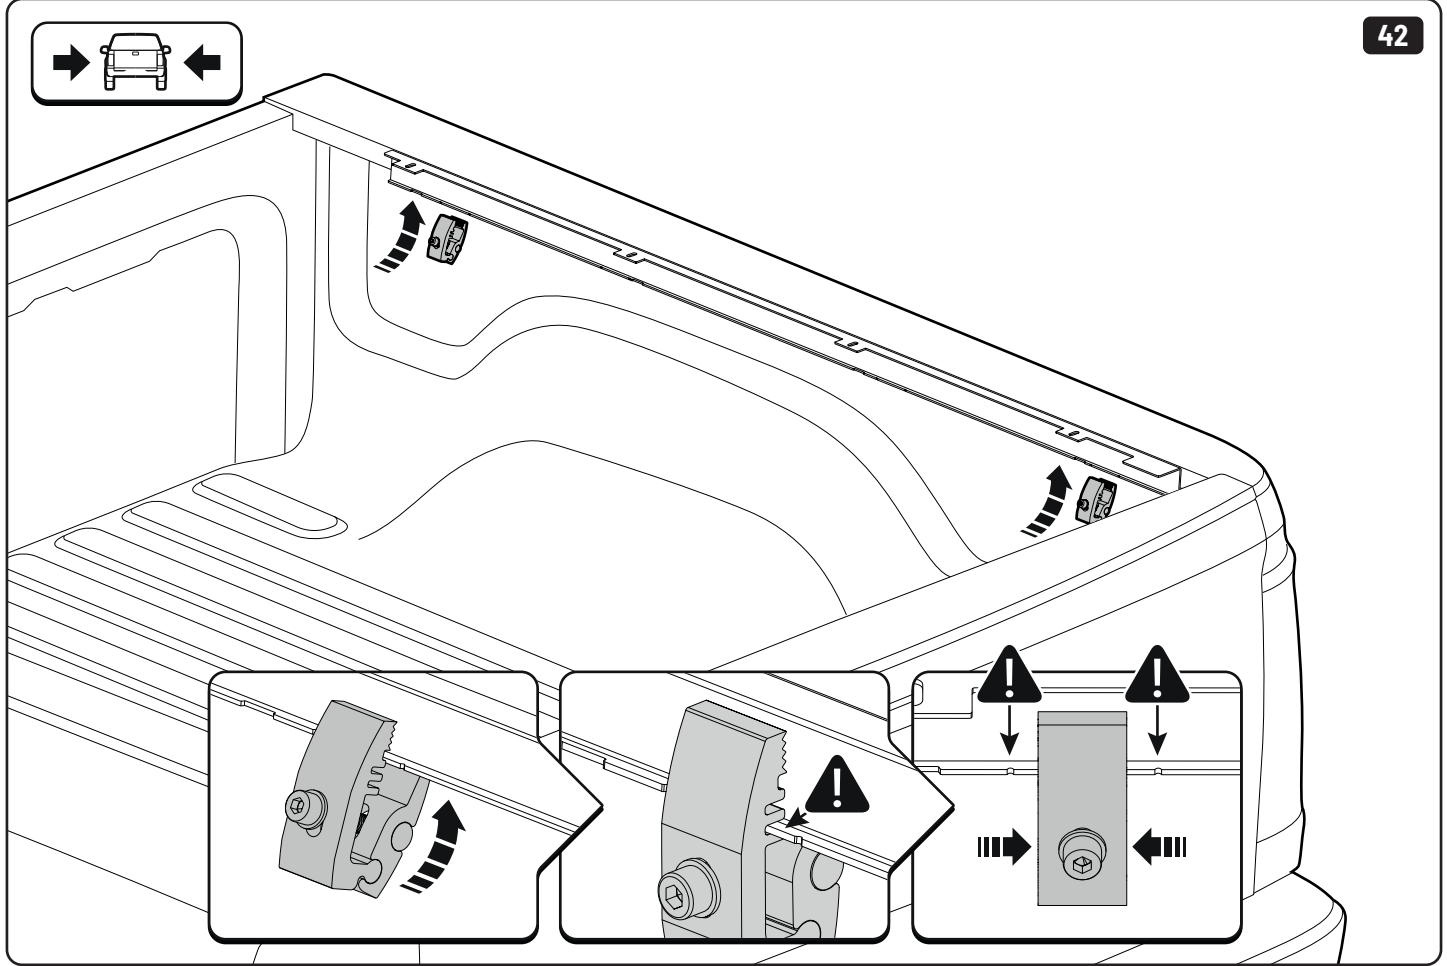


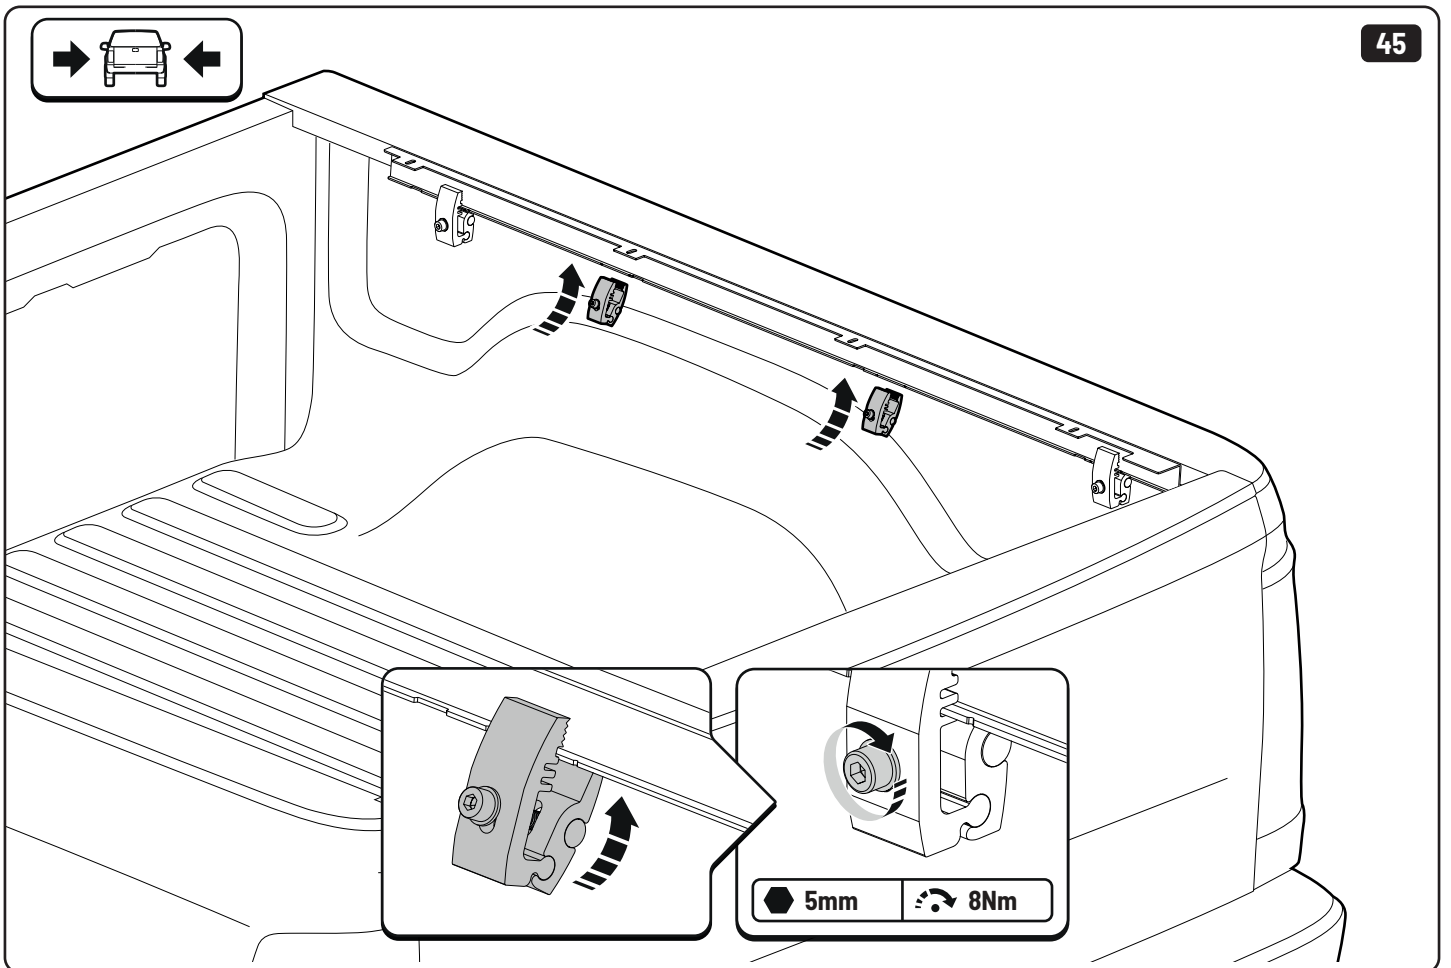
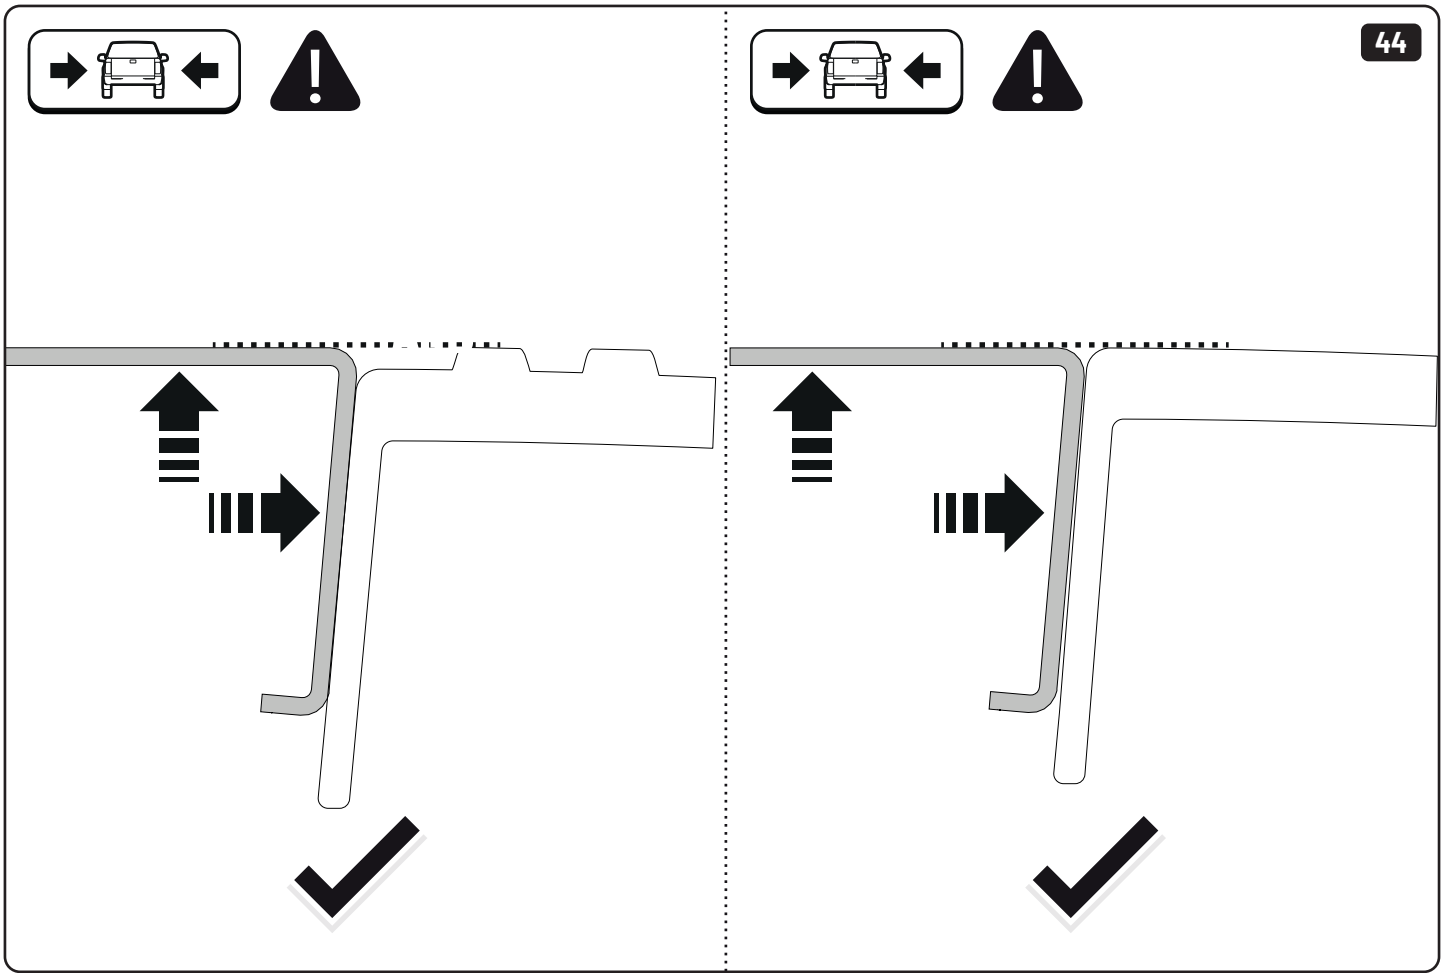


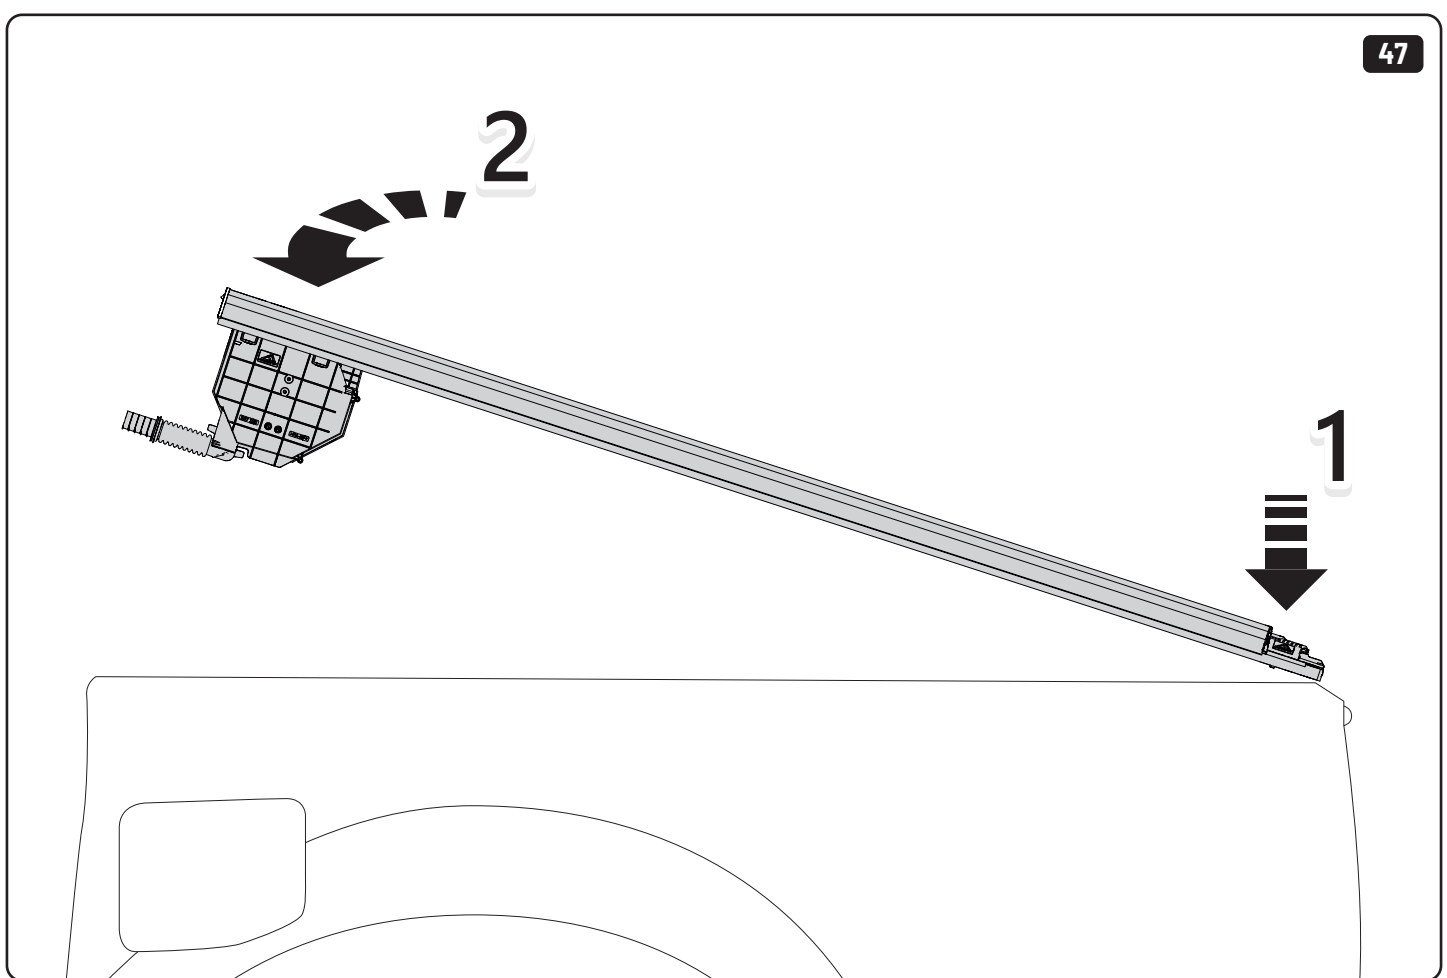
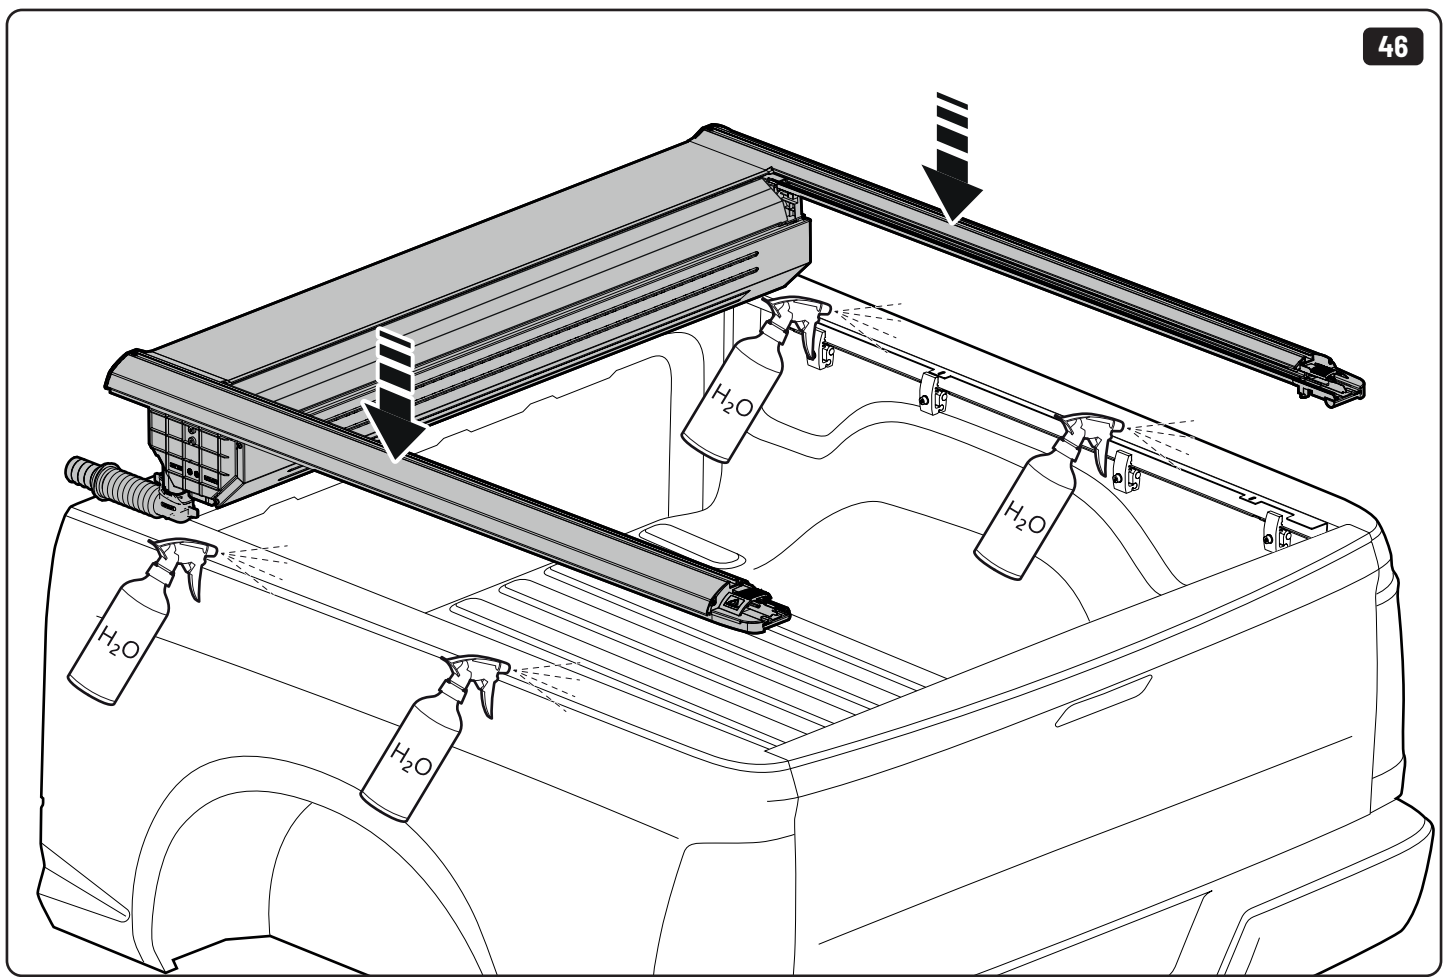


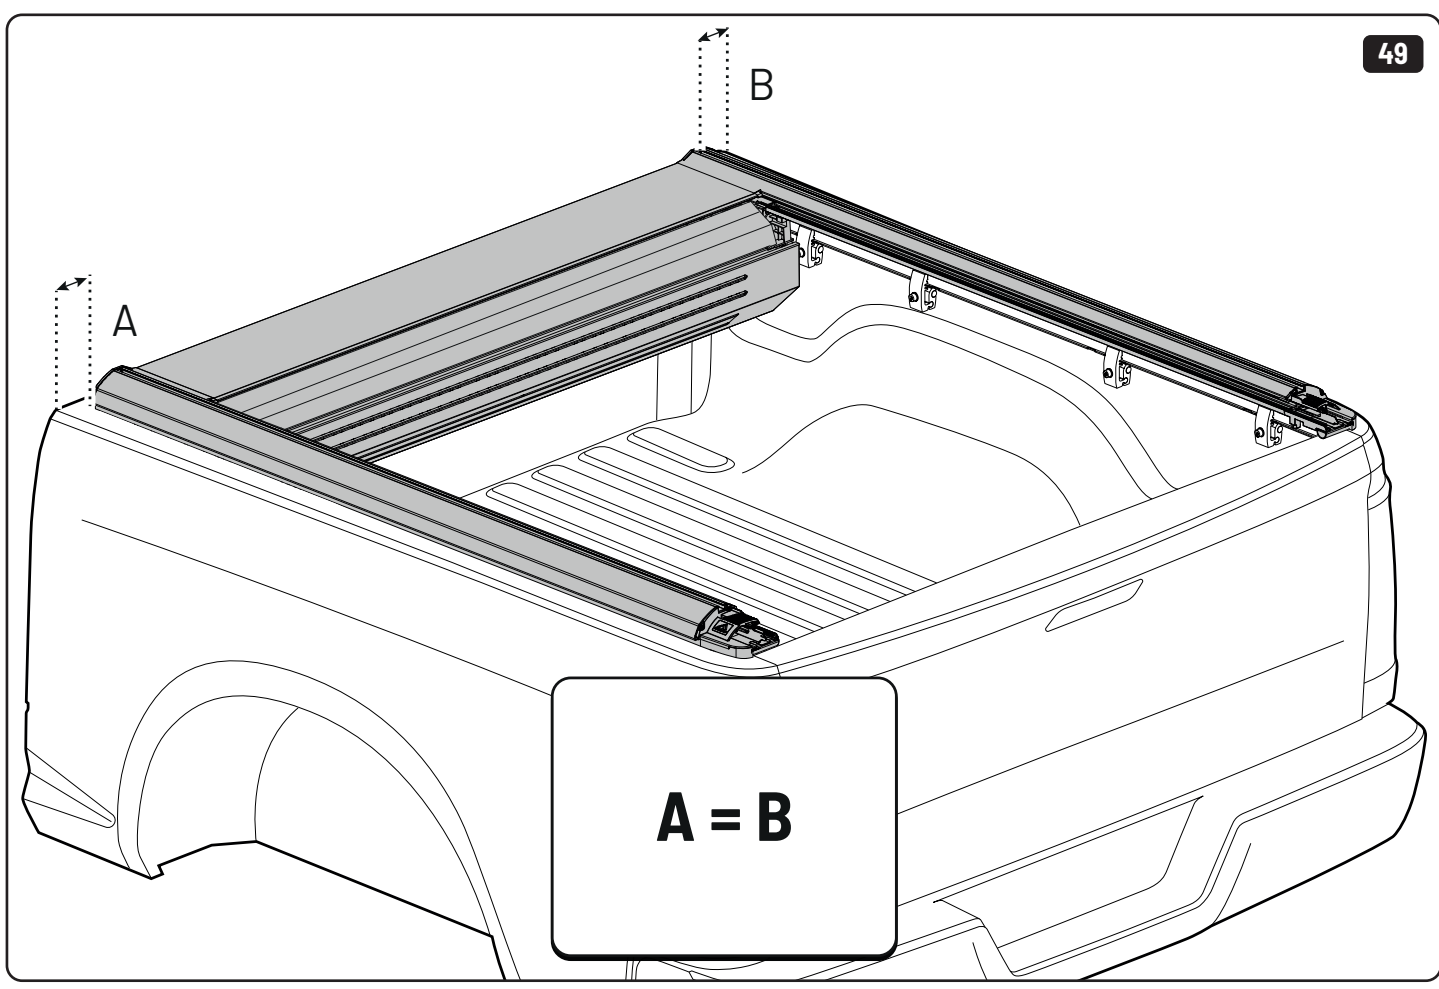
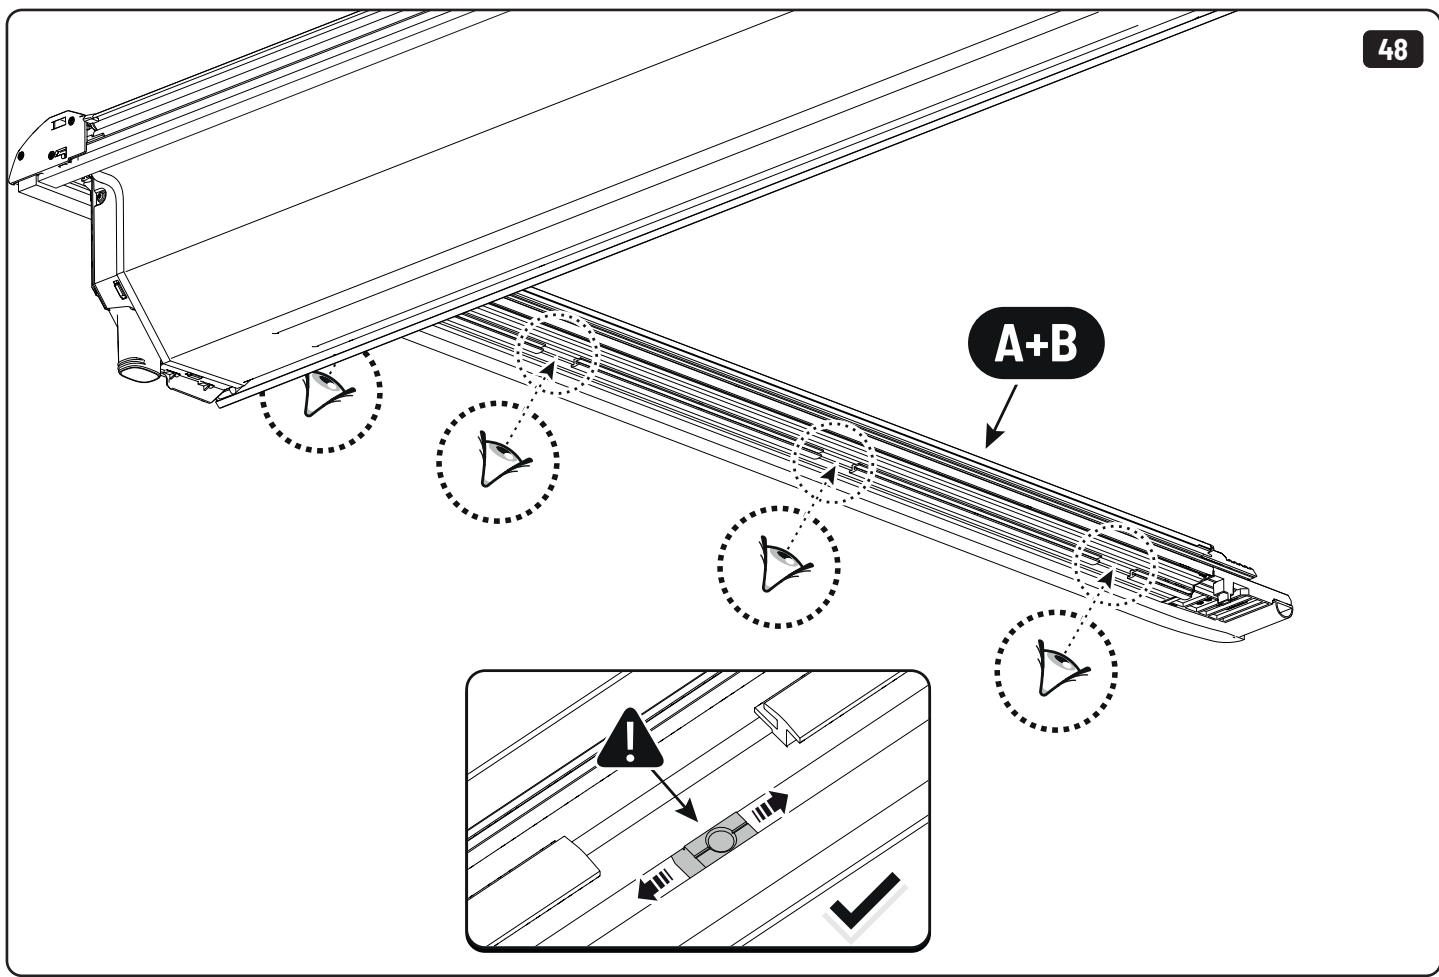


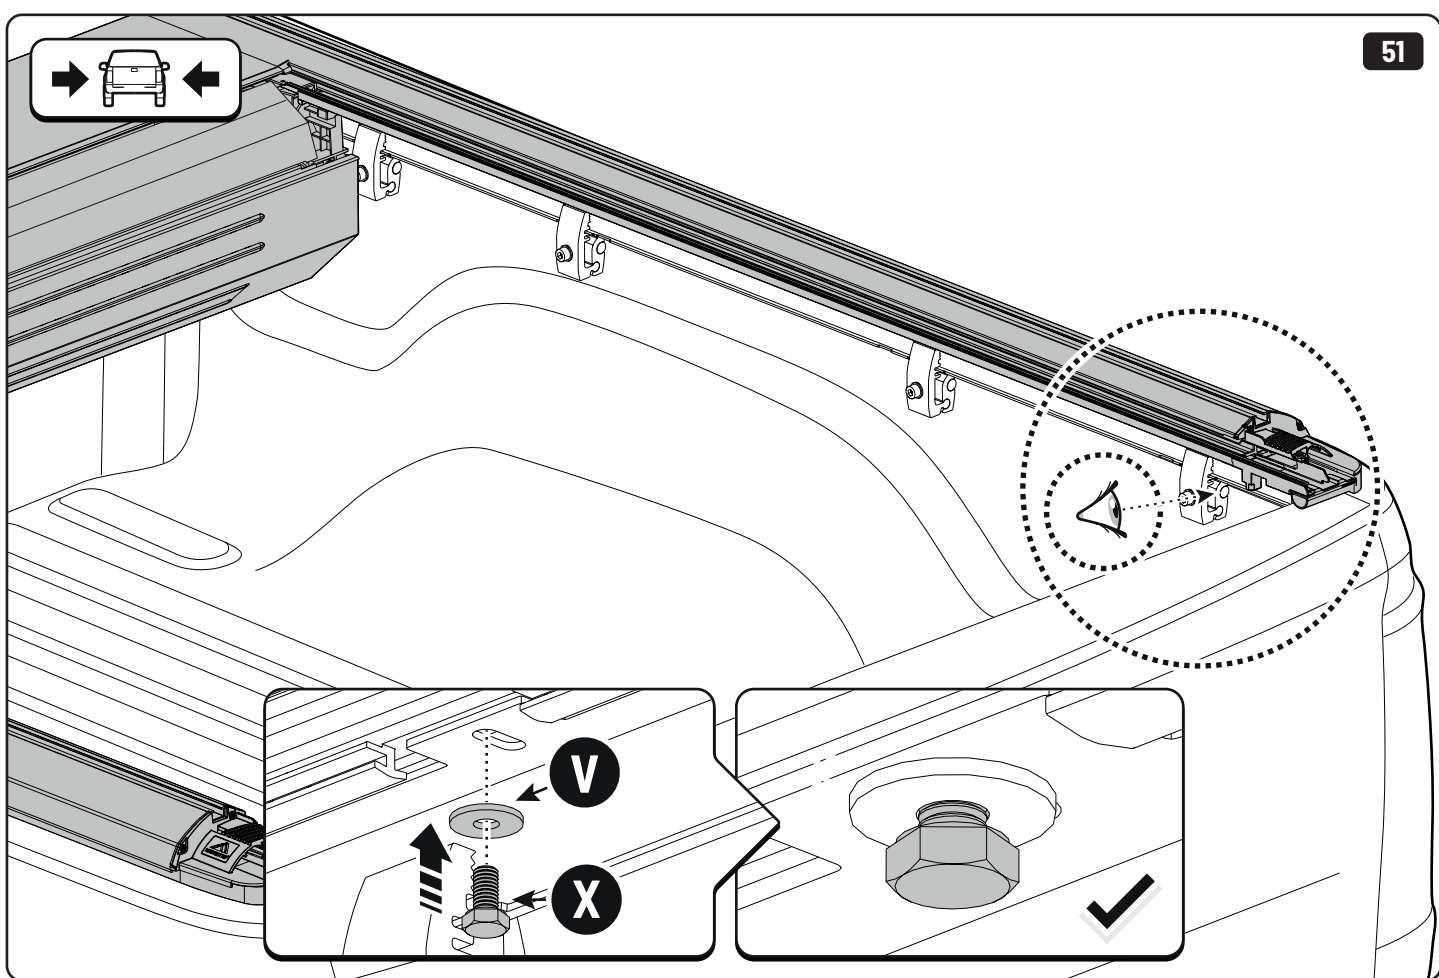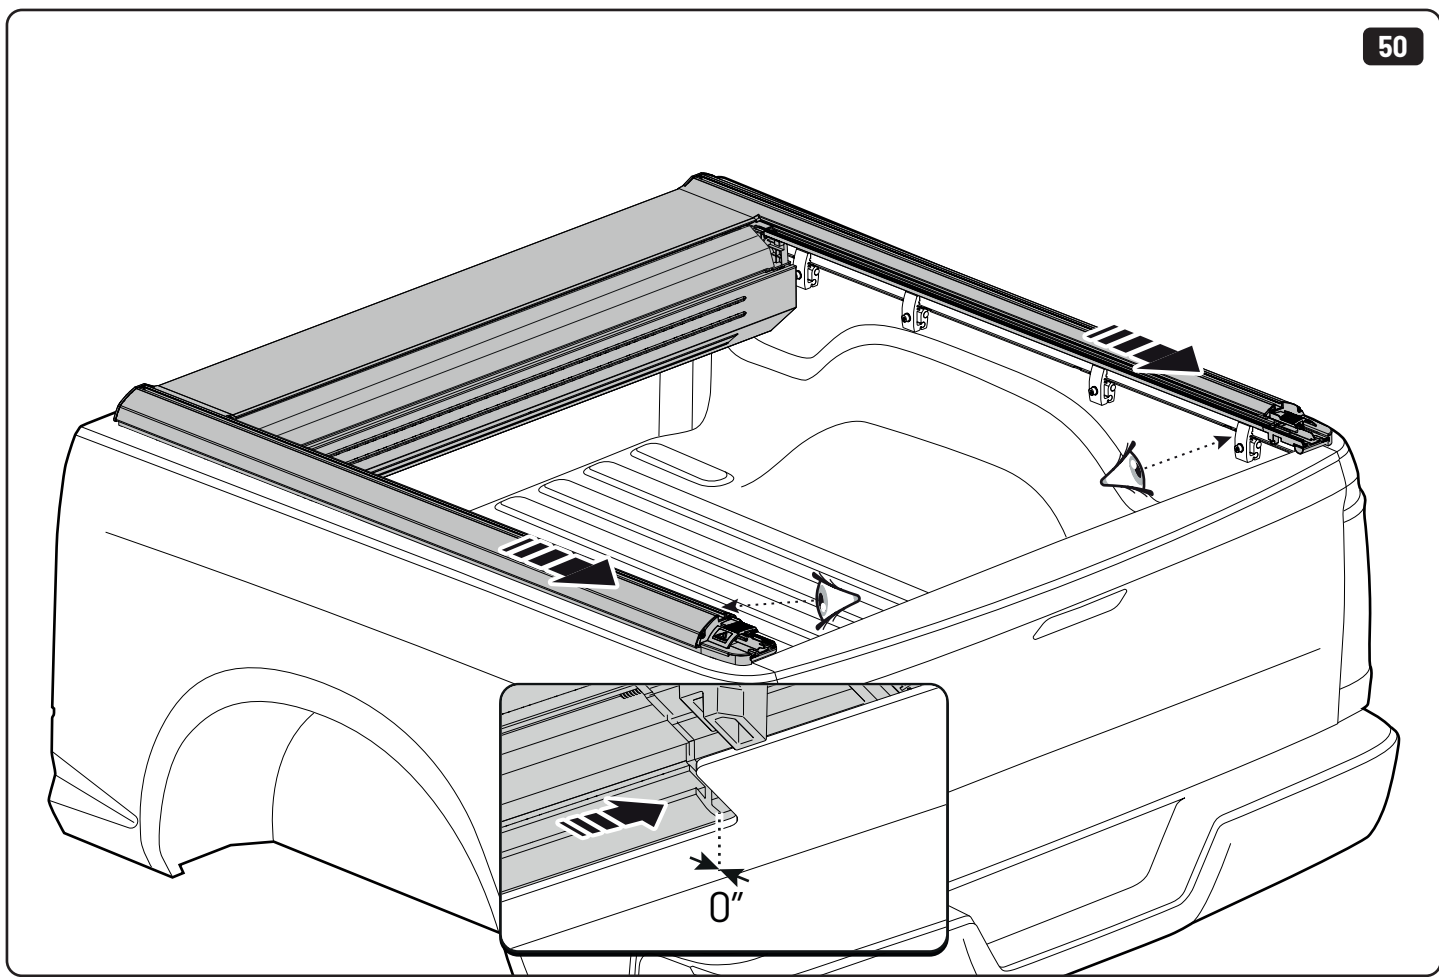



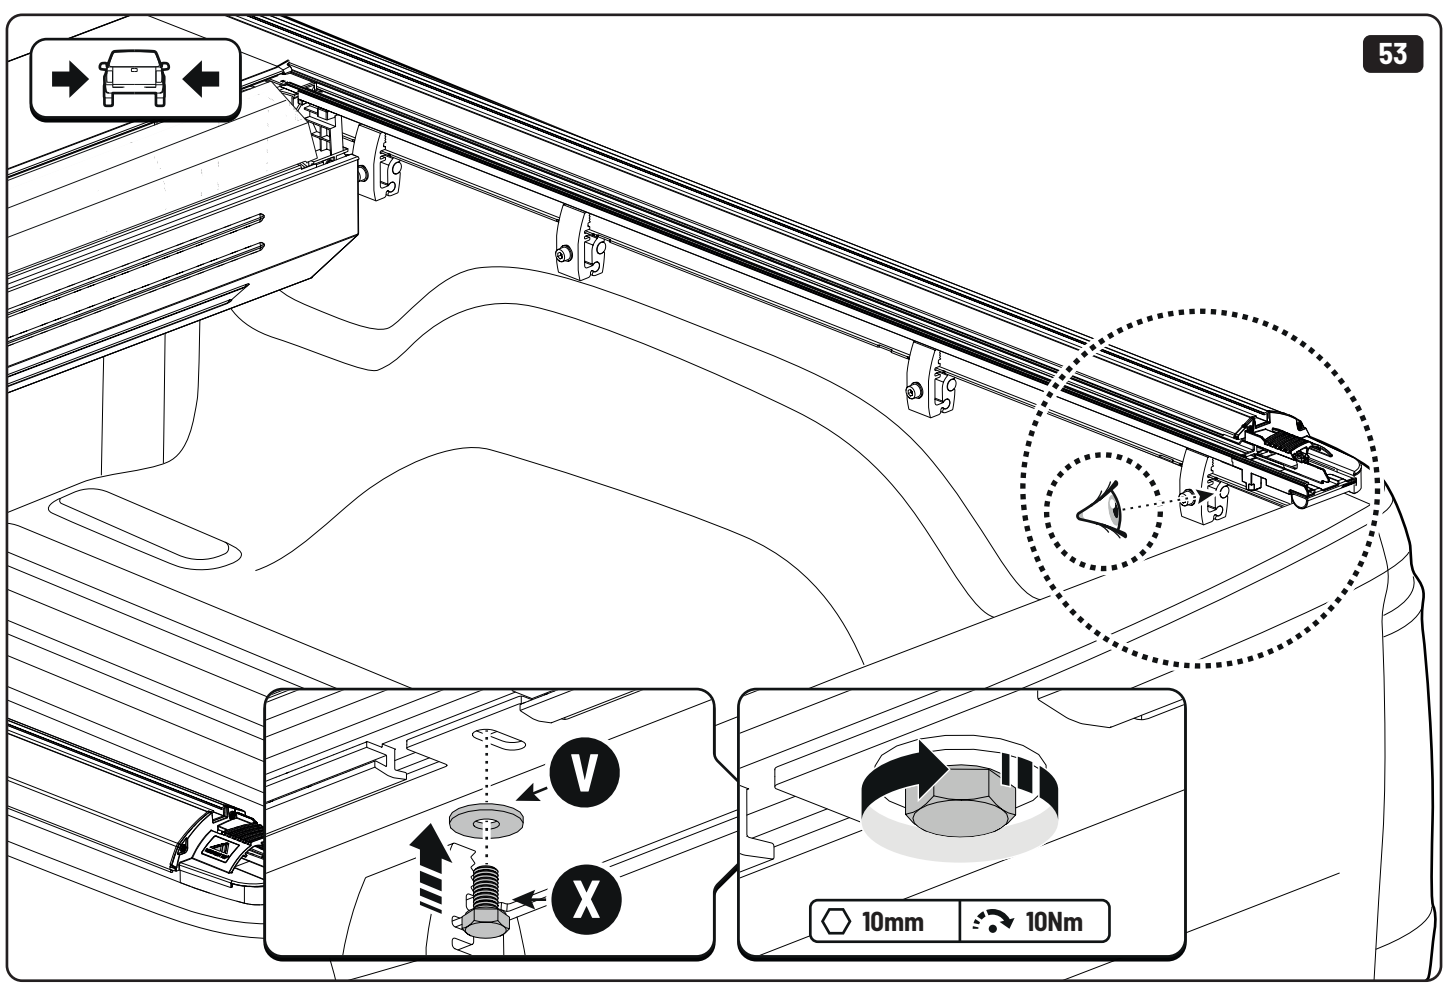
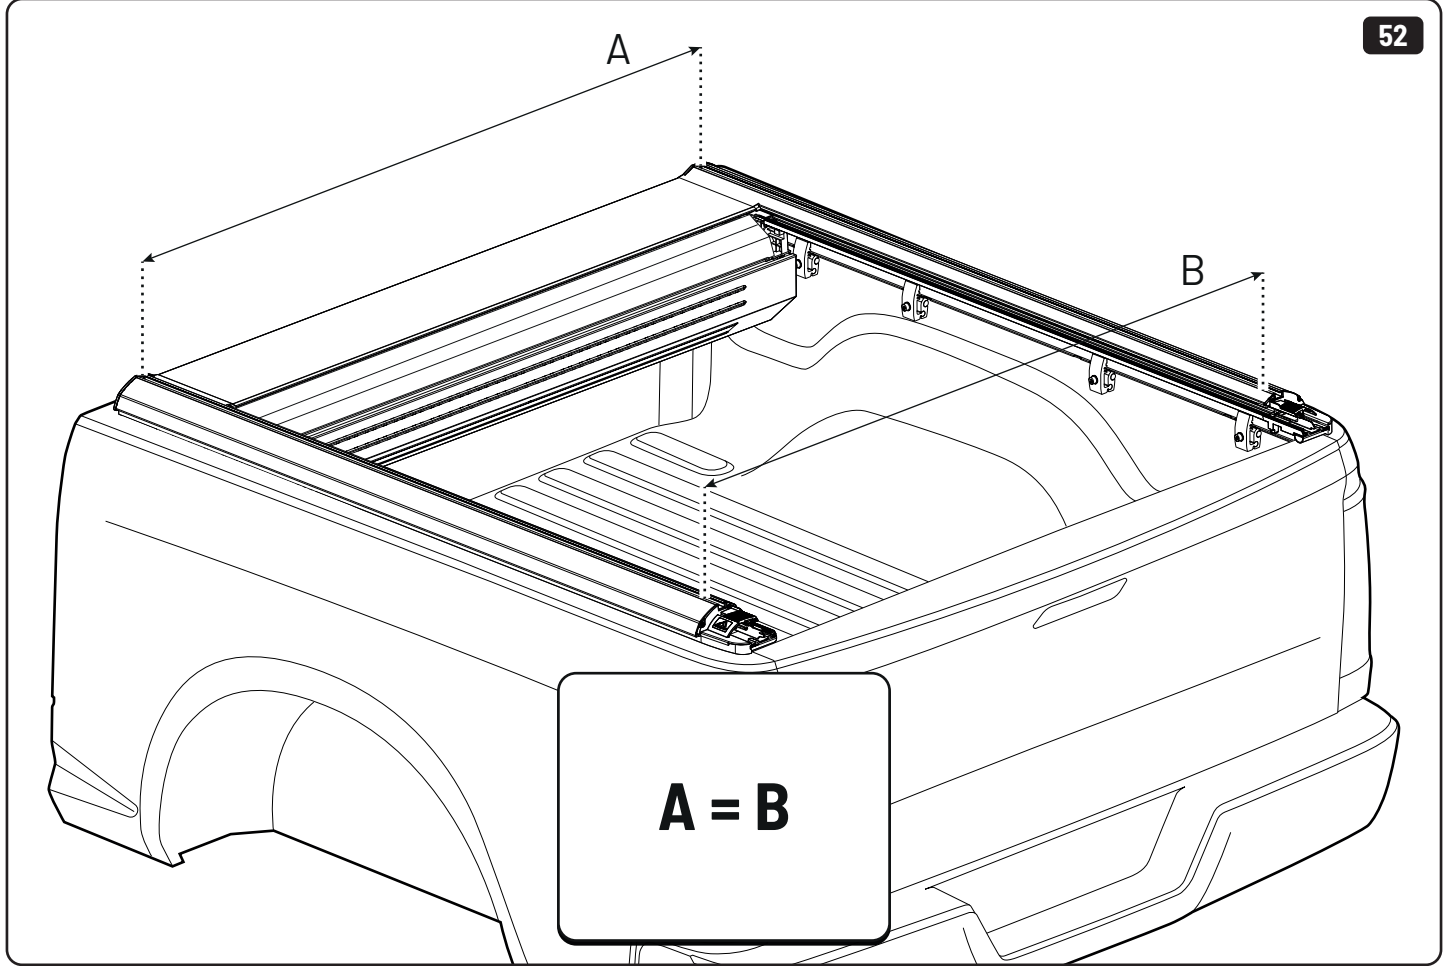


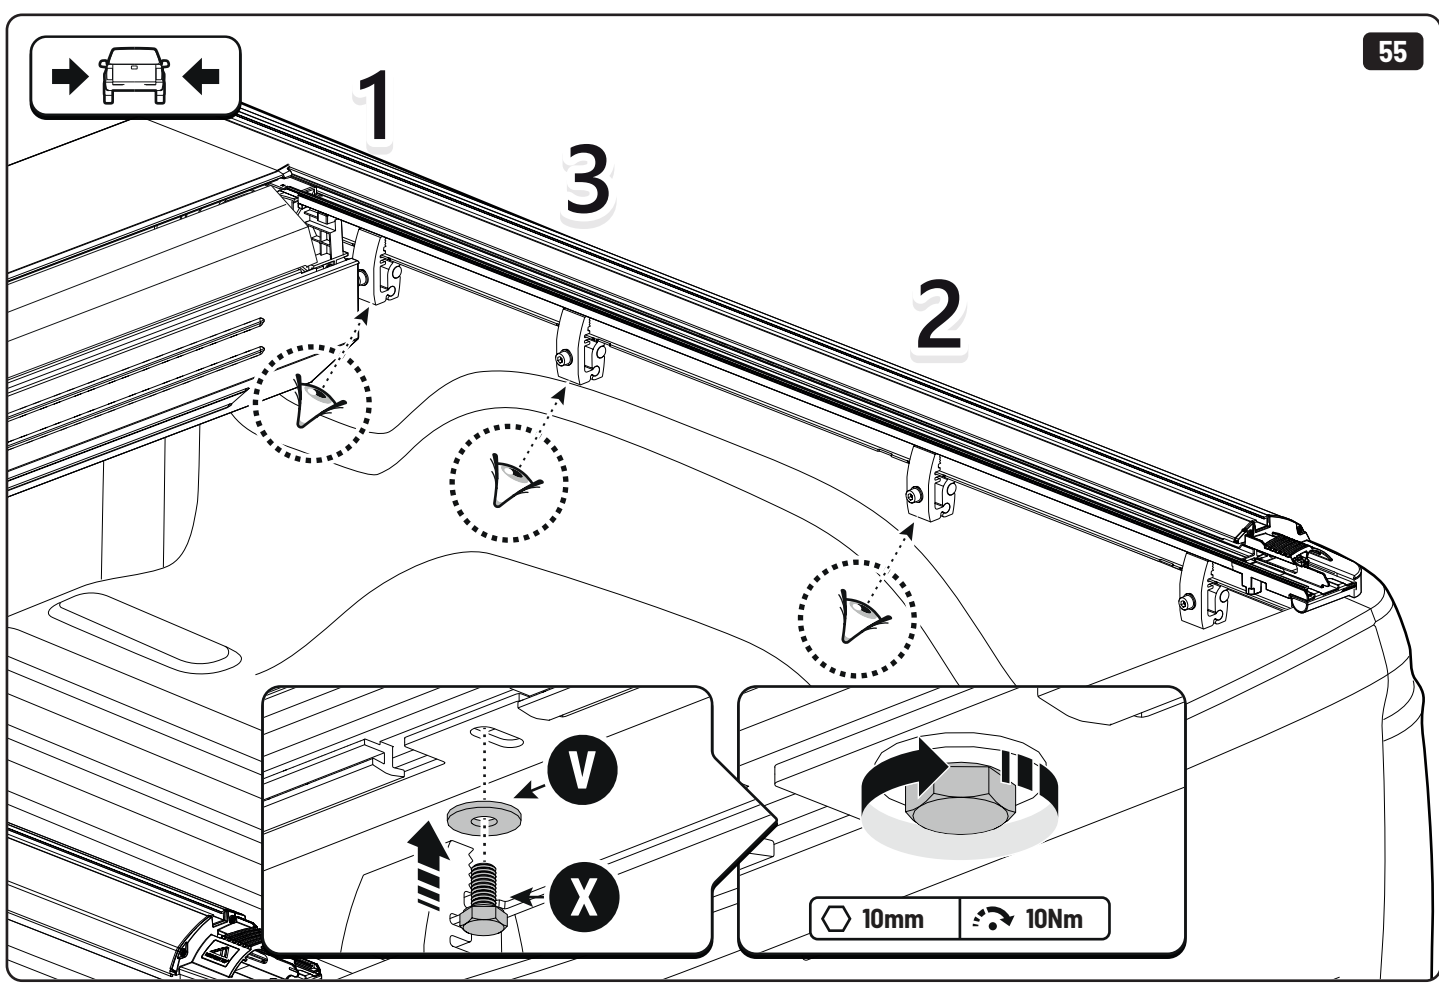
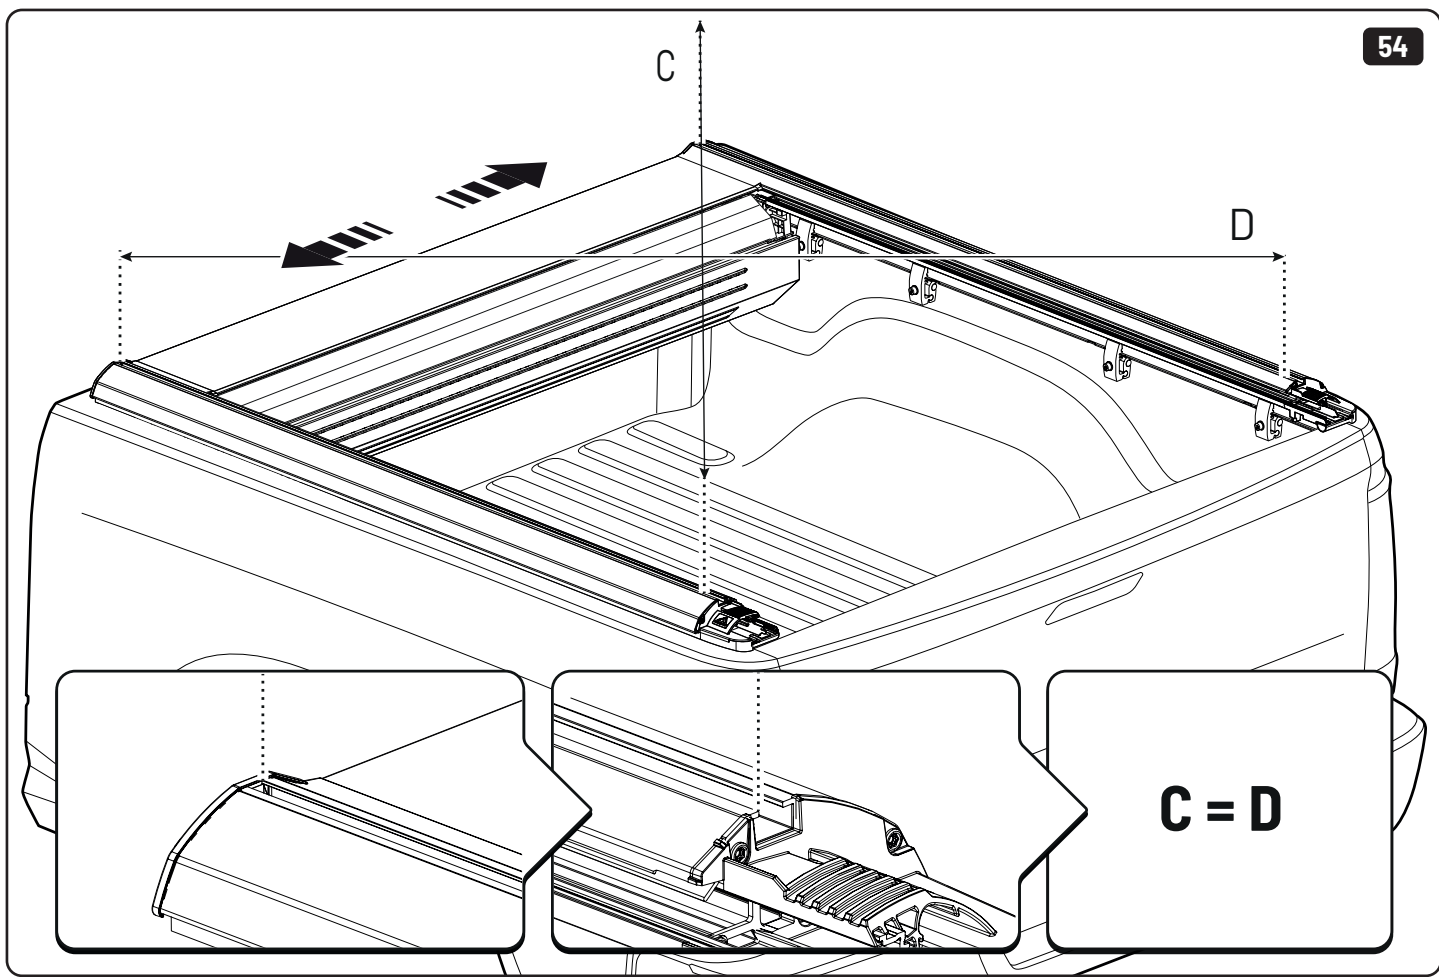


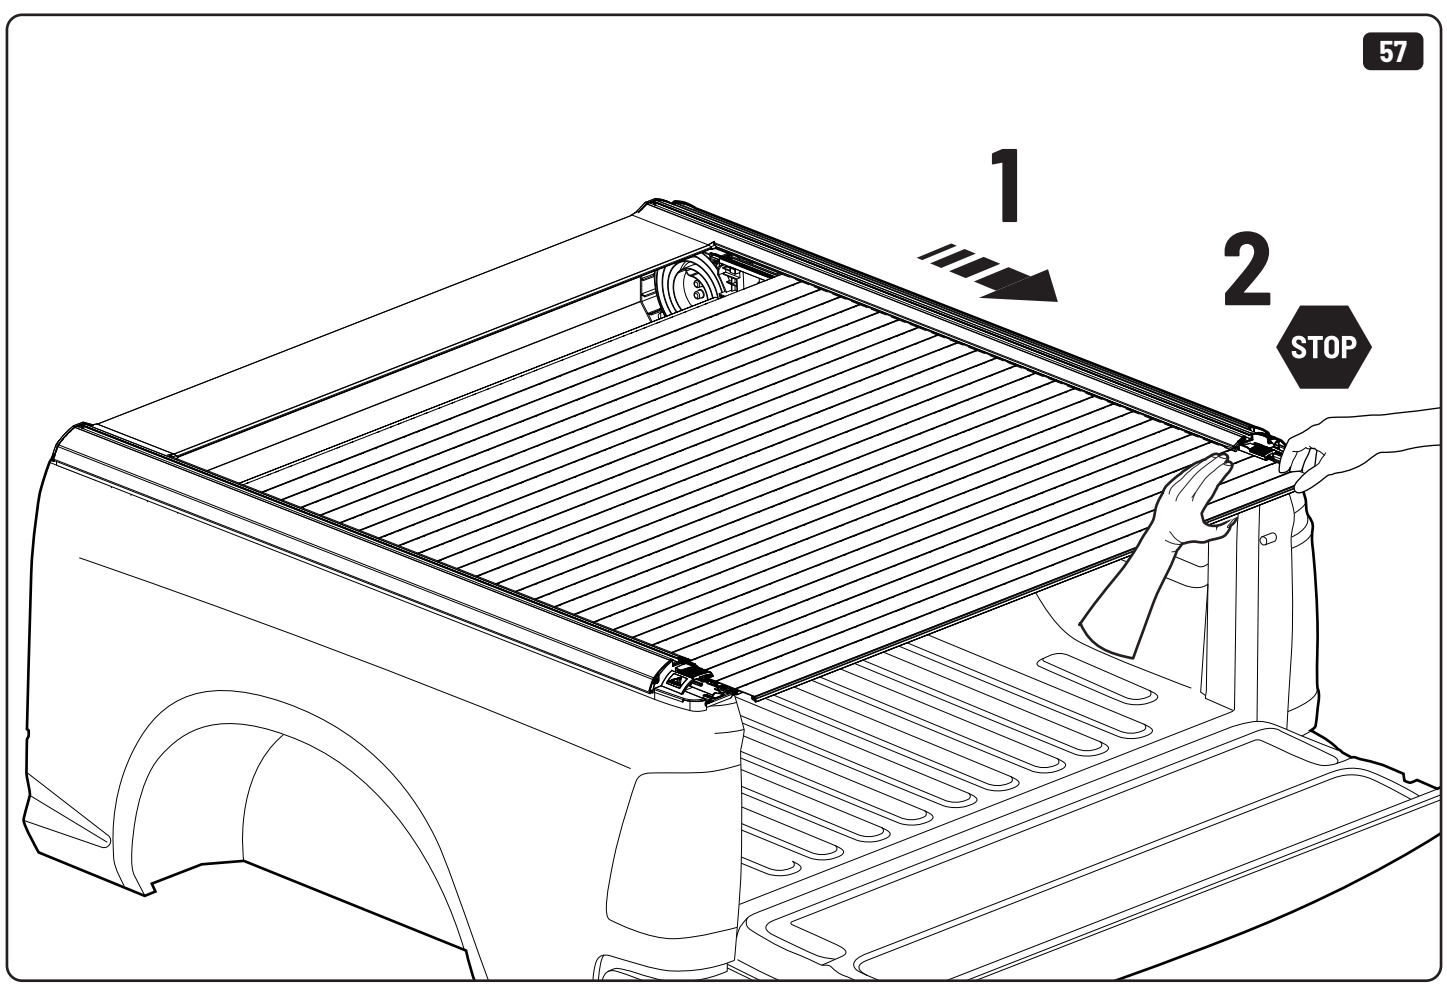
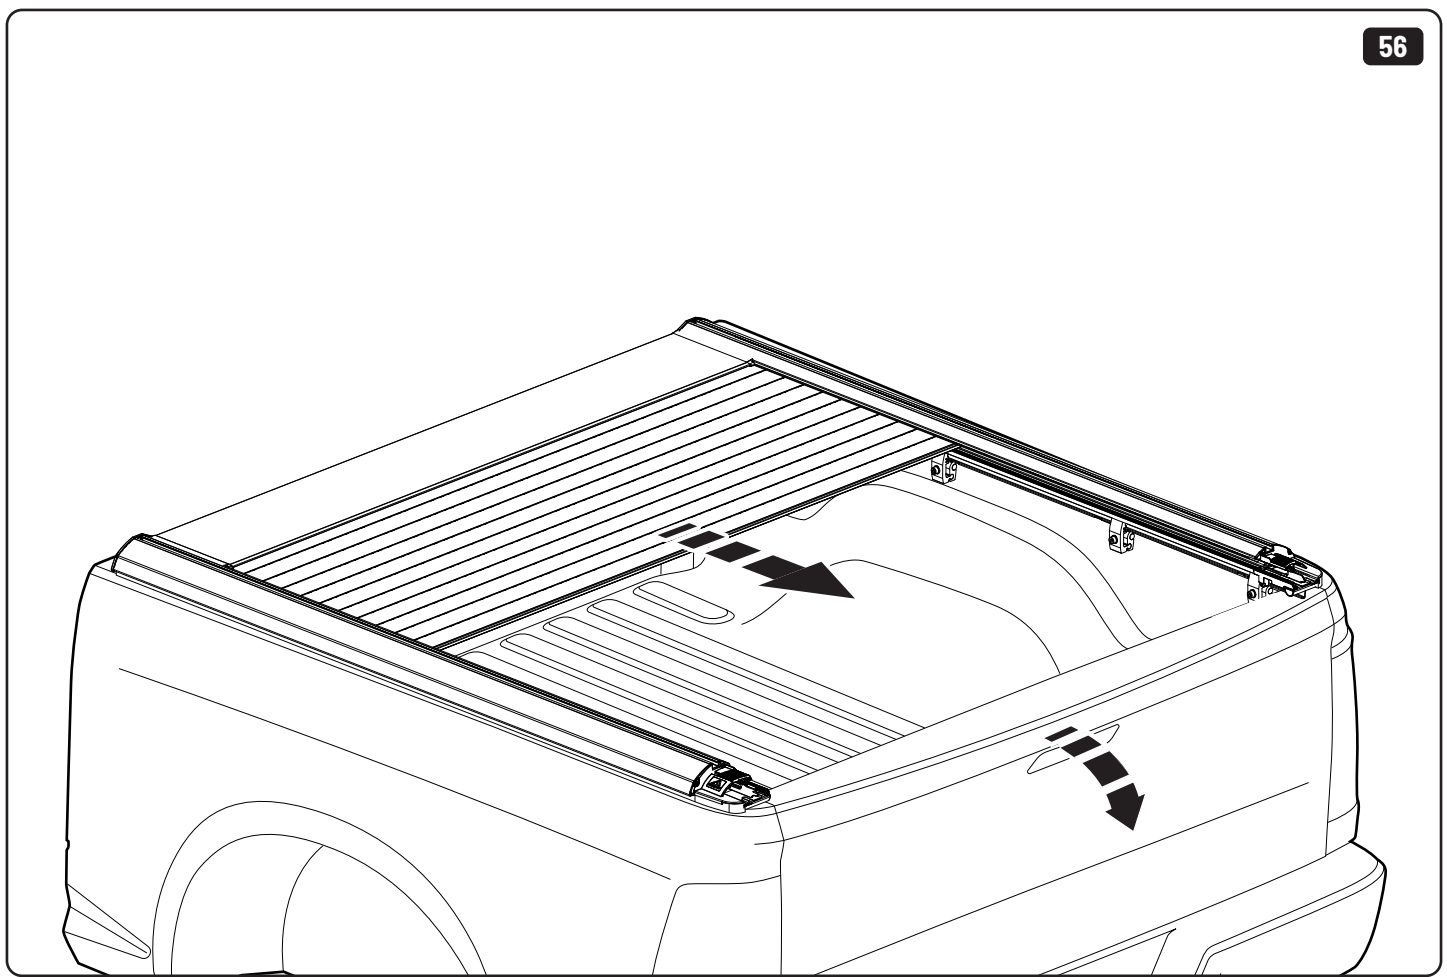


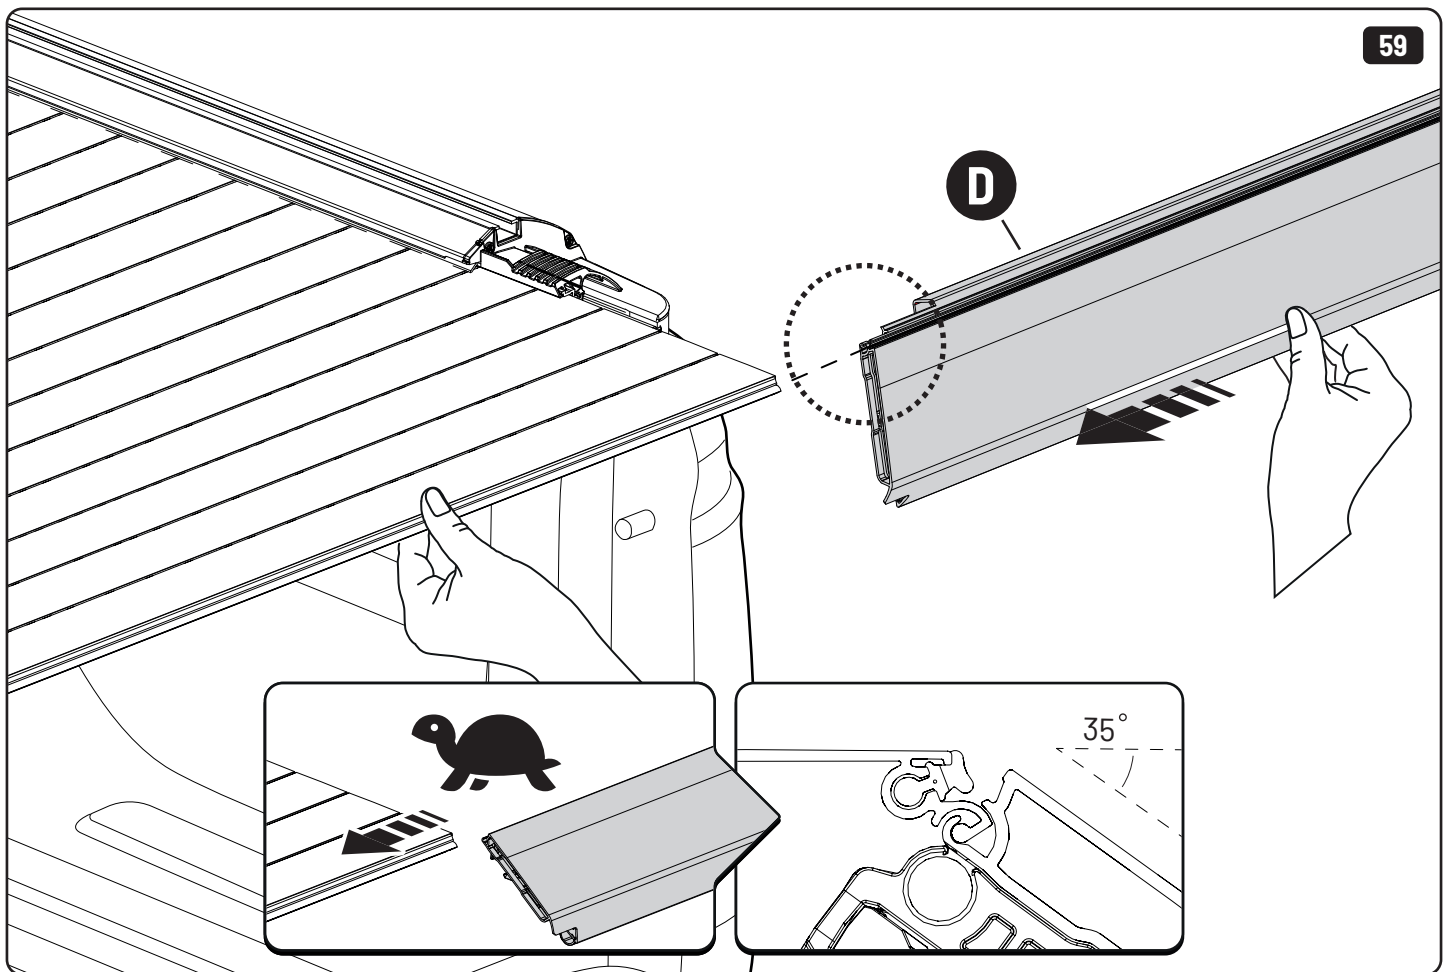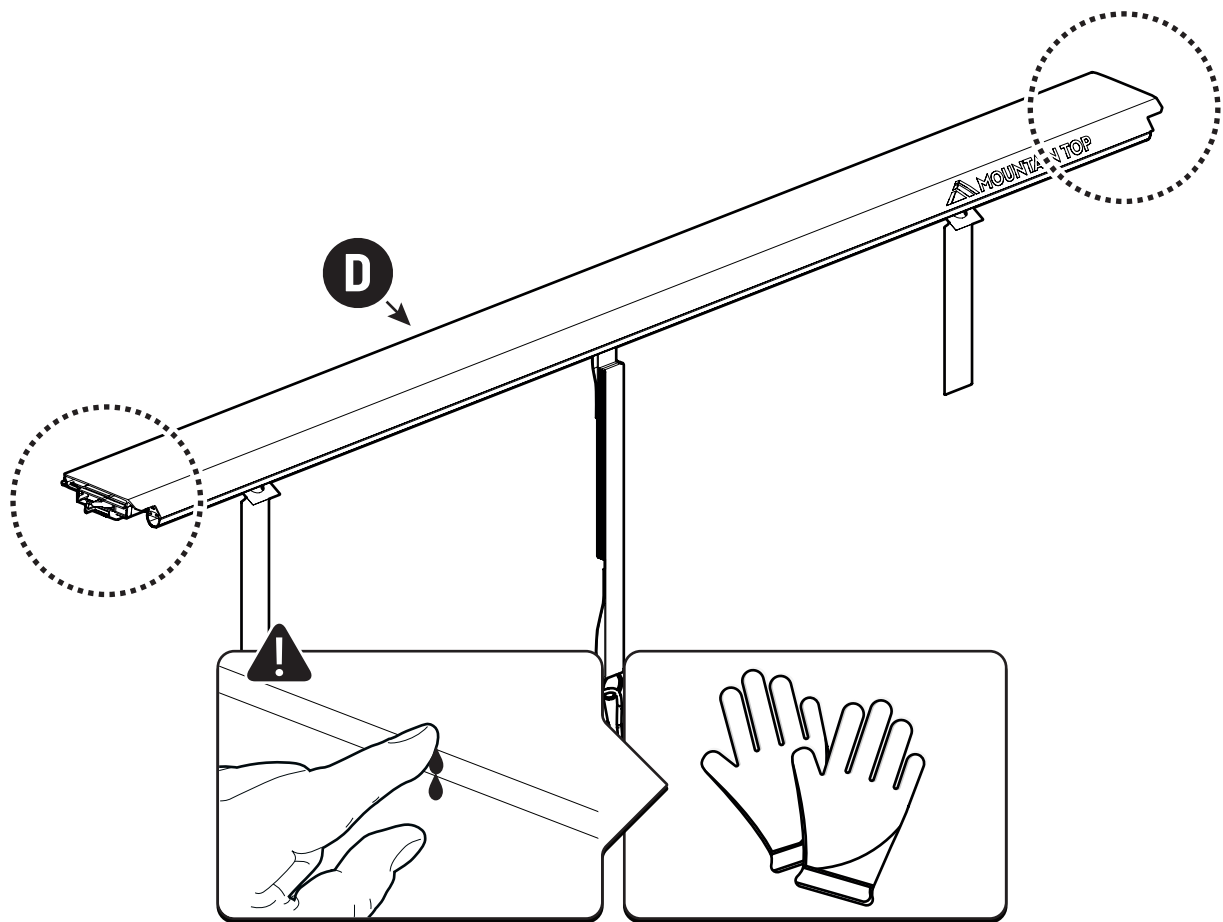

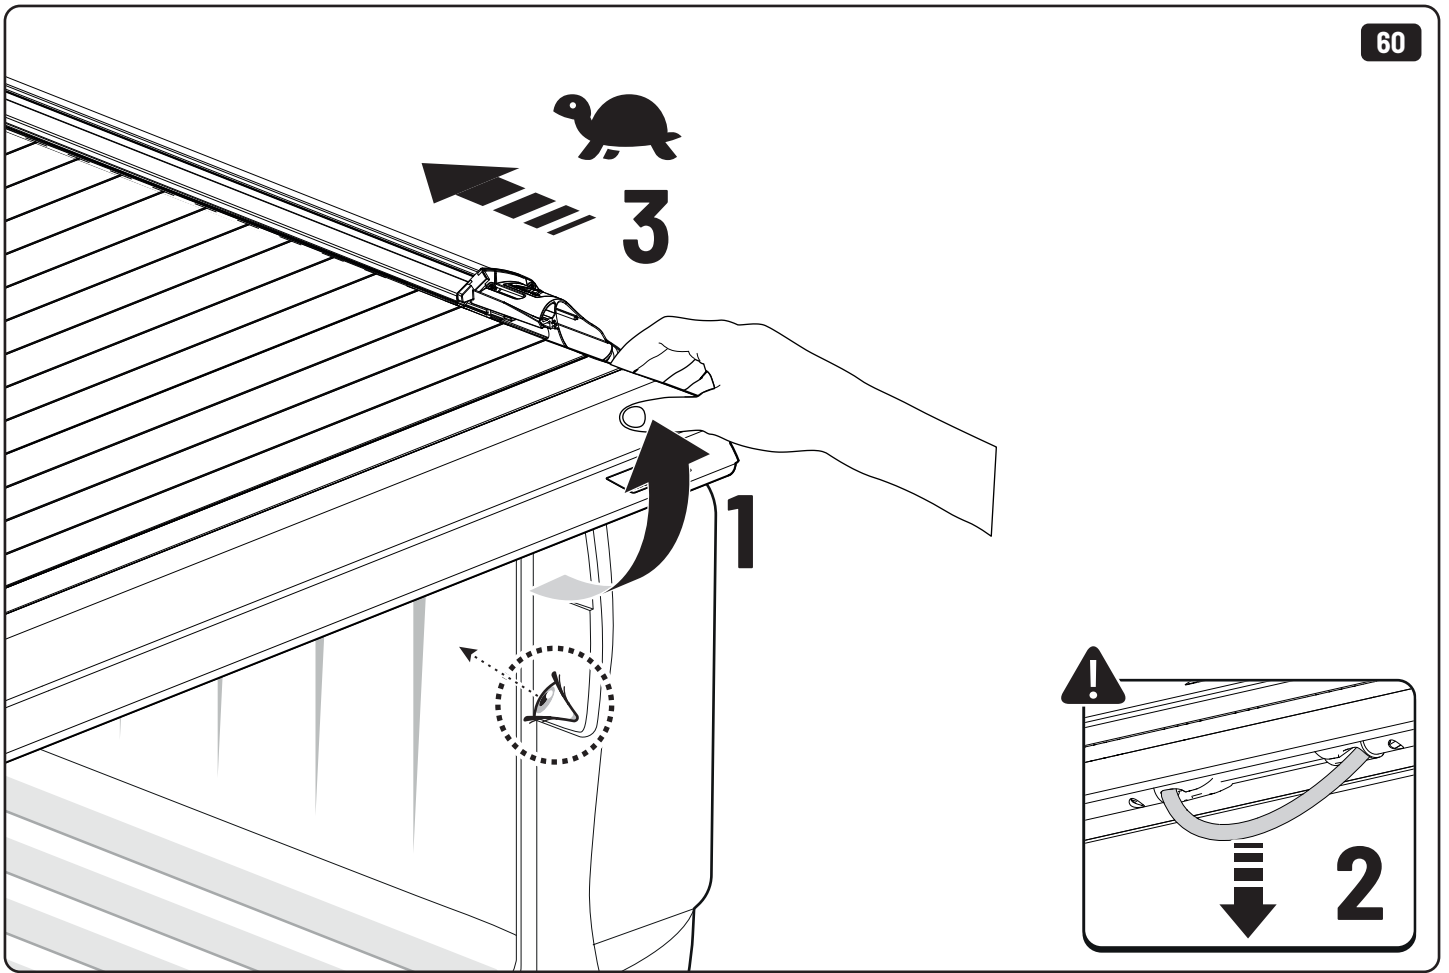

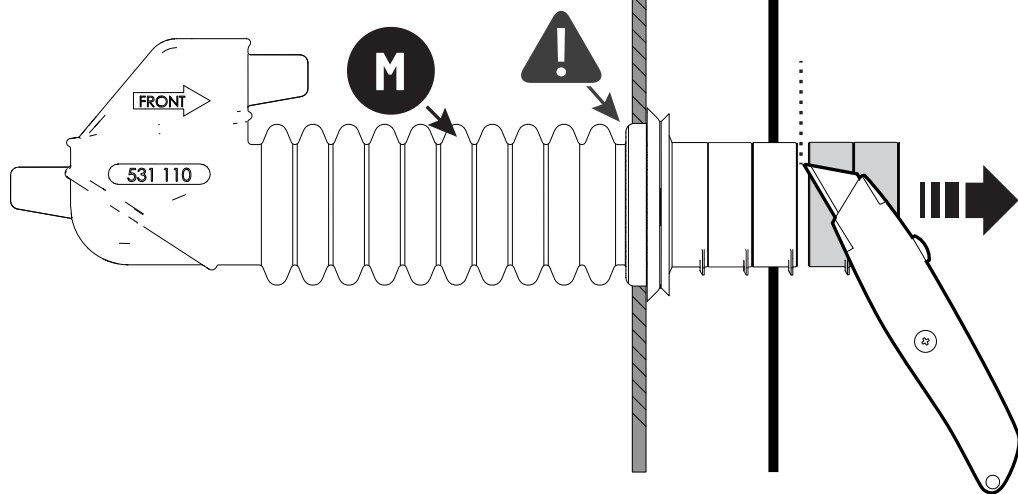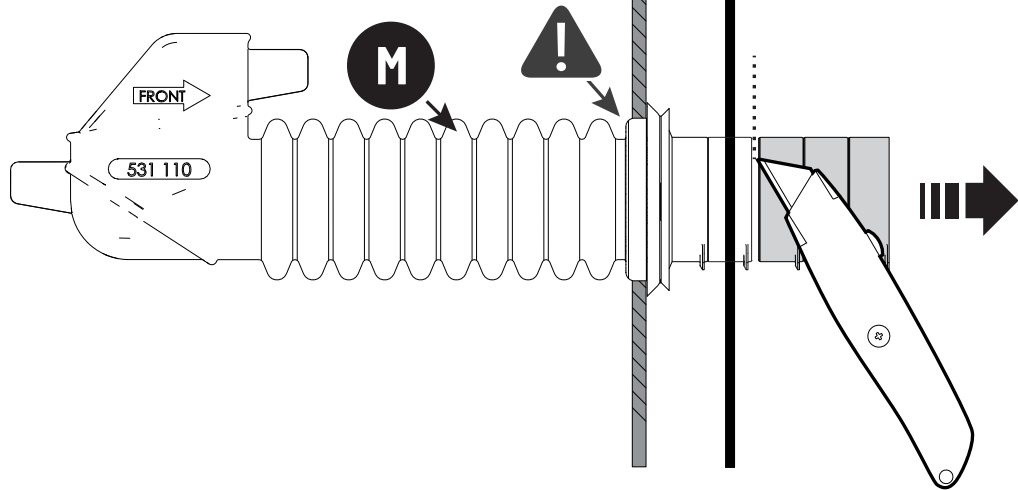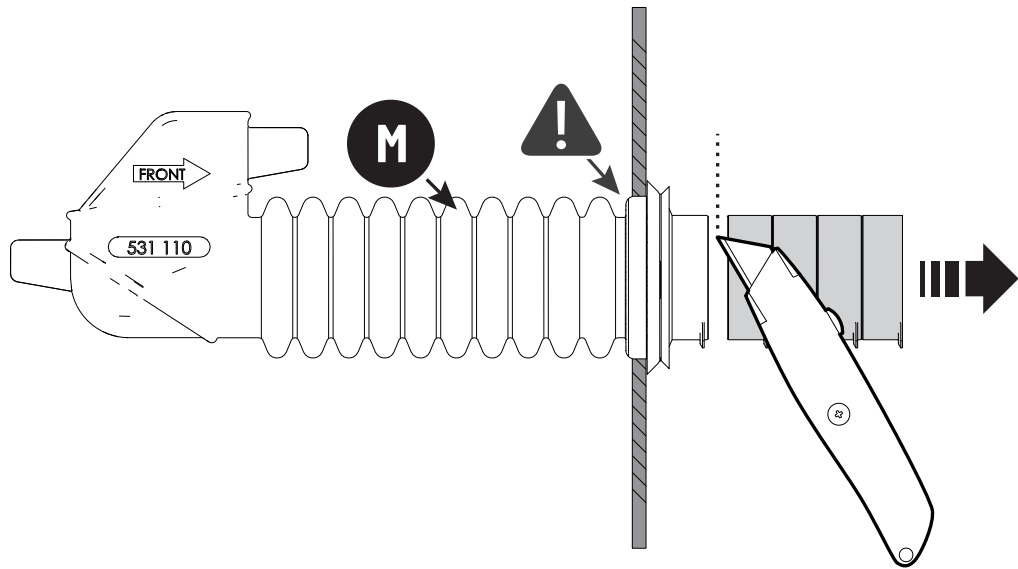

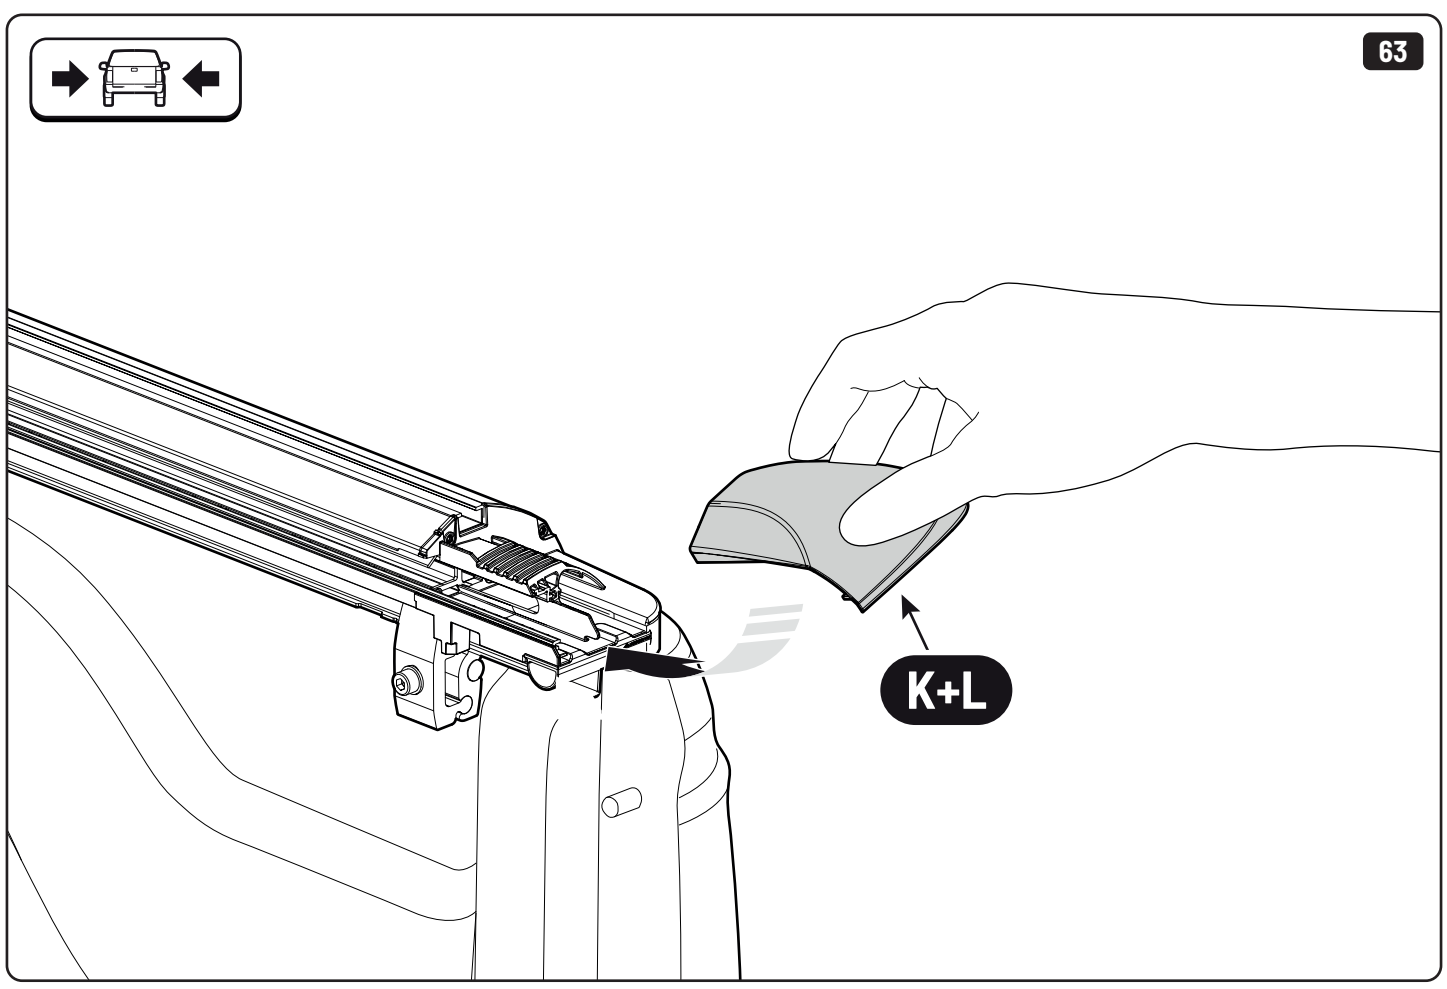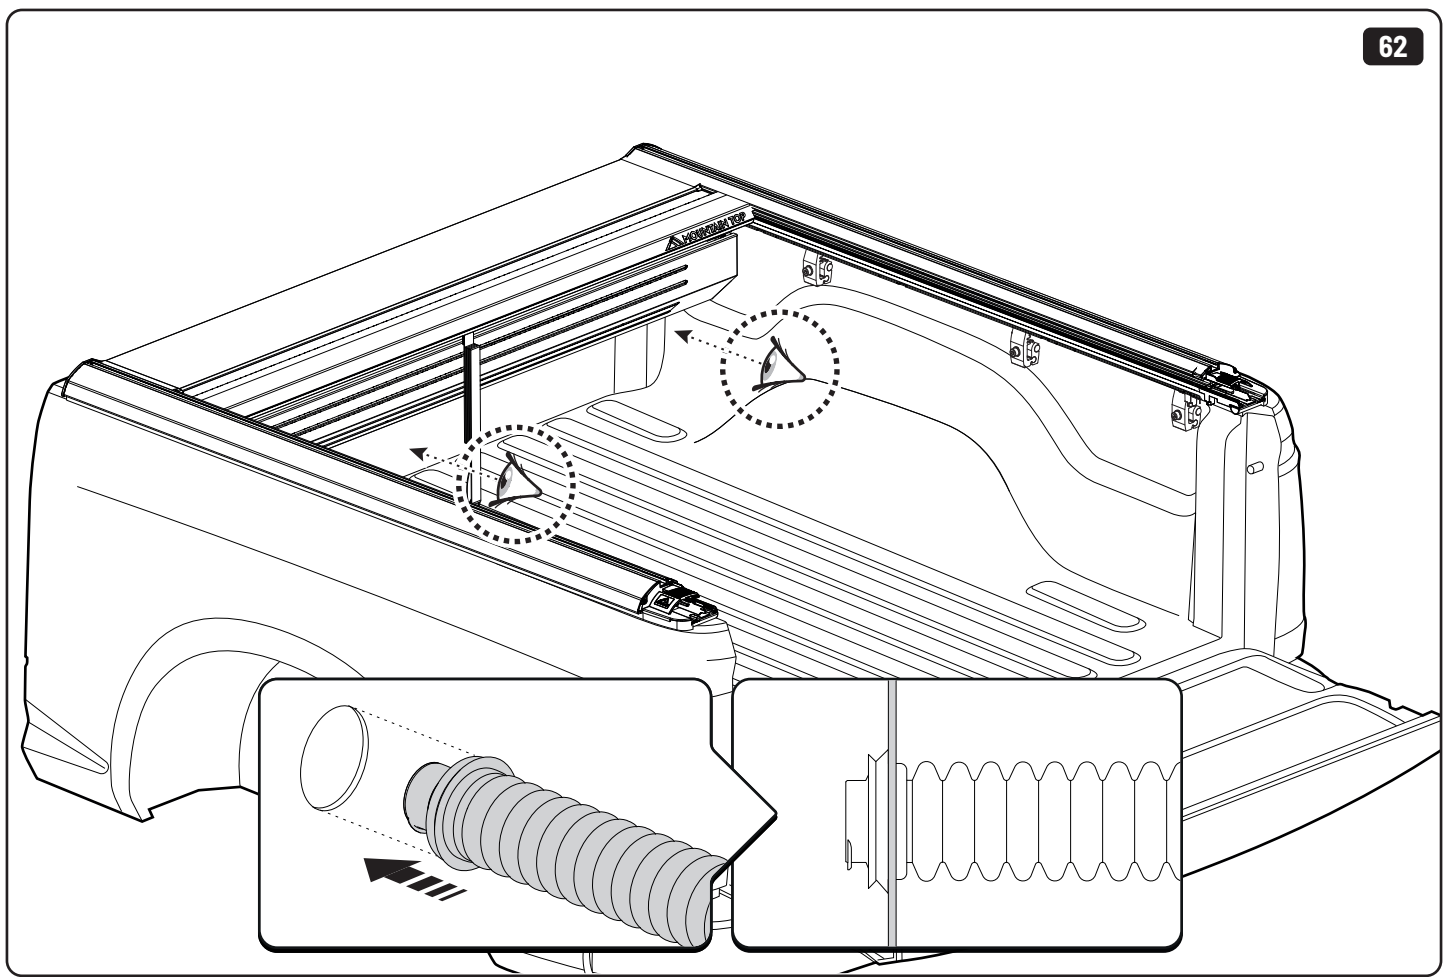

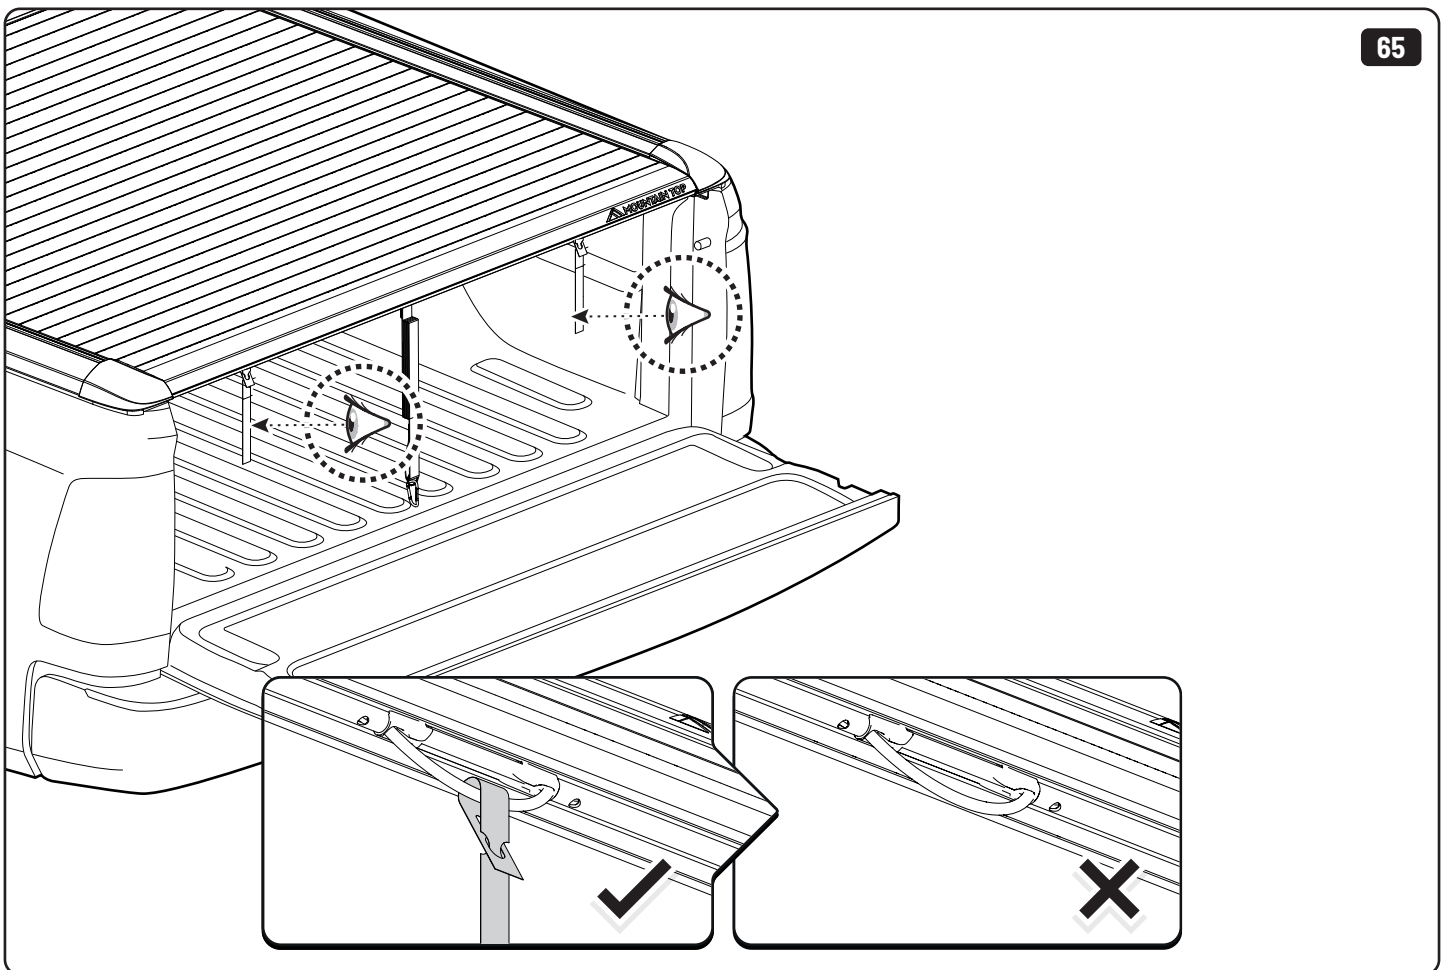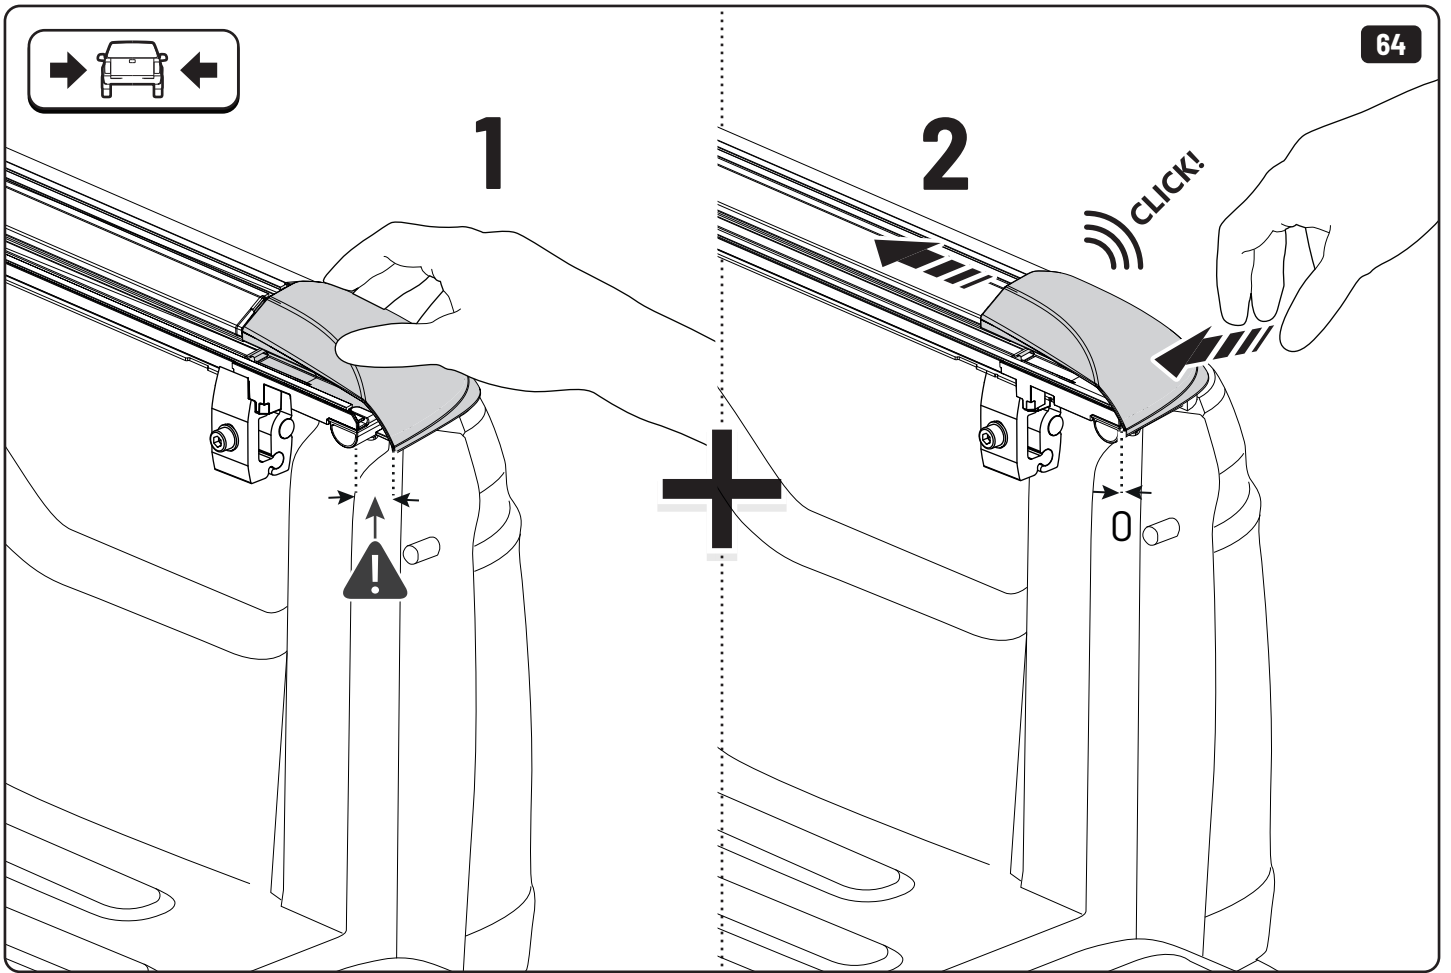

EV0m Installation checklist



Type of Maintenance	Page	Done by
Mounting gliding rail in canister	15-16	
Holes for drain	24-25	
Placement of bracket	26-27	
With + Cross measurement	32-33	
Tightening the clamp screw	28+33	



Customer Service +45 4810 2950 (08:00 - 16:00 CET)
Support info@mountaintop.dk
Website www.mountaintop.dk
Address Pedersholmparken 10, 3600 Frederikssund, Denmark

Part number (s)	Model / Year	Cab length	Installation time	Weight
Chevrolet Silverado	Model / 2019 - TD	5,5 FT / 6,5 FT	1 hour (s)	44 Kg/48 Kg
Ford F-150	Model / 2015 - TD	5,5 FT / 6,5 FT	1 hour (s)	42 Kg/48 Kg
RAM 1500	Model / 2019 - TD	5,5 FT / 6,5 FT	1 hour (s)	43 Kg/48 Kg
Toyota Tundra	Model / 2007 - TD	5,5 FT	1 hour (s)	42 Kg

GB Installation manual	S Monteringsanvisning	D Einbauanleitung
SF Asennusohje	E Instrucciones de montaje	CZ Návod k instalaci
F Notice de montage	H Szerelési utasítás	I Istruzioni de montaggio
PL Instrukcja montażu	P Instruções de instalação	GR Οδηγίες Εγκατάστασης
NL Installatie-instructies	RUS Инструкция по установке	DK Monteringsvejledning
TR Montaj Talimatı	N Monteringsveiledning	RO Instructiuni de instalare